

Read Me First.

Please be sure to change the default password immediately upon first usage of the product. To set your unique password please refers to this user manual and FAQs on your applicable regional support site. The default password is automatically set upon shipping of the product. Even if the default password is changed to your unique password, your unique password may be reset to a default password in the following situations:

1. When the user resets the product by using the associated App or by depressing the Reset button to accomplish a reset.
2. When the option “Enable factory default after firmware upgrade” is selected and the user updates the firmware.

먼저 읽어주세요.

이 드라 브의 사용 기준은 사무, 개인 드라이브 및 가전제품 용도로 적용됩니다. Toshiba Corporation 은 이러한 사용 용도 이외에 대해서는 법적 책임을 지지않습니다. 이 제품을 특별한 용도 (원자력 제어, 항공 또는 우주 시스템, 대형교통수단 운영제어, 생명유지 장치용 의료기기, 또는 무기발사 제어 등) 사용에있어 높은 품질과 신뢰성이 요구되고, 안전에 대한 적절한 수준을 보장할 수없거나, 고장 또는 오작동에 인해 생명이나 신체의 위협을 받을 수 있는 곳에서는사용하지 마십시오.

1. 사용자가 관련 앱을 사용하거나 리셋 버튼을 눌러 제품을 리셋하는 경우
2. “펌웨어 업그레이드 후 공장 기본 설정으로 되돌리기 (Enable factory default after firmware upgrade)” 옵션이 선택된 상태에서 사용자가 펌웨어를 업데이트한 경우

請先閱讀

請務必在初次使用產品時立即變更預設密碼。設定您專屬的密碼時，請參閱本使用者手冊及適用地區支援網站上的常見問答集。本產品出貨時會自動設定預設密碼。即使已將預設密碼變更為您獨有的密碼，您的密碼仍可能在以下情況下被重設為預設密碼：

1. 若使用者要重設本產品，而使用相關的應用程式或按下 Reset 按鈕來完成重設作業。
2. 已選取「Enable factory default after firmware upgrade」(韌體升級後啟動原廠預設) 的選項，且使用者更新了韌體。

User's Manual

CANVIO AeroCast™
wireless hard drive

English

한국어

繁體中文

TOSHIBA
Leading Innovation >>>

Regulatory statements

Disposal of products

This product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

Please dispose in accordance with local rules when destroying the product.

Disposal of batteries and/or accumulators

Batteries and/or accumulators must be collected and disposed of separately from household waste. By participating in separate collection of batteries, you will help to assure the proper disposal of products and thus help to prevent potential negative consequences for the environment and human health.

Please dispose in accordance with local rules when destroying the product.

Safety icons

This manual contains safety instructions that must be observed to avoid potential hazards that could result in personal injuries, damage to your equipment, or loss of data. These safety cautions have been classified according to the seriousness of the risk, and icons highlight these instructions as follows:

Signal Words	Meaning
	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
	Indicate a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.
	Indicates practices that may cause property damage and other problems, but not personal injury.
	Provides important information.
*Serious injury including blindness, wounds, burns (low and high temperature), electric shock, fractures, and poisoning, etc. with long- lasting effects or that require hospitalization and/or long-term hospital visits for treatment. *Minor or moderate injury includes wounds, burns, electric shock, etc. not requiring hospitalization and/or long-term hospital visits for treatment. *Property damage means damage to drive.	

Other icons used

Additional icons highlight other helpful or educational information:

	TECHNICAL NOTE: This icon indicates technical information about the device.
	HINT: This icon indicates helpful hints and tips.
	DEFINITION: This icon indicates the definition of a term used in the text.

Battery safety precautions

** DANGER**

Do not immerse the device (with the internal battery in it) in liquid such as water, beverages, or other fluids.

The battery (including protection circuit) may catch on fire, smoke, explode, or cause heat generation by unexpected electrical load.

** DANGER**

Keep the device (with the internal battery in it) away from heat and fire.

Heat will damage the battery and may cause it to generate heat, smoke, catch fire, or explode.

** DANGER**

Do not disassemble the device and the internal battery.

Disassembly or modification of the battery may damage the protection circuit. This may cause the battery to generate heat, smoke, catch fire, or explode.

** WARNING**

Keep the product away from small children. If the product is broken or has cracks, keep the battery and any of its component parts away from small children.

If the battery liquid or any of its component parts are swallowed, seek medical attention immediately.

** WARNING**

Stop charging if the charging process cannot be finished.

If the battery can not finish the charging process within the specified time, halt the charging process. The battery may generate heat, smoke, catch fire, or explode.

** WARNING**

This drive has a rechargeable battery inside. Do not throw away used batteries as home rubbish.

Please dispose in accordance with local rules when destroying the Product. If used batteries are thrown away as home rubbish, there is a possibility that they may cause the rubbish collection to catch fire or smoke.

** WARNING**

Always immediately turn the power off and disconnect the power cable/ cord plug from the plug socket and stop using the battery if you observe any of the following conditions: Offensive or unusual odor/ Excessive heat/Discoloration/Deformation, crack, or leaks/Smoke/ Other unusual event during use, such as abnormal sound. Do not turn on the drive's power again. Continued use could cause a fire or rupture possibly resulting in serious injury or drive failure including but not limited to the loss of data.

** WARNING**

If the drive is leaking or its case is cracked, put on protective gloves to handle it.

⚠ CAUTION

Only charge the battery in temperatures between 5° C and 35° C. Charging outside of this temperature range may cause the battery to leak, generate heat, or result in serious damage. It may also cause the battery's performance and life to deteriorate.

⚠ CAUTION

Actual battery life may vary depending on settings, application usage, features or tasks selected, network configuration, operating temperature and many other factors. Recharge time varies depending on usage. The battery may not charge while the drive is consuming full power. After a period of time, the battery will lose its ability to perform at maximum capacity. This is normal for all batteries.

Power and other safety precautions

⚠ WARNING

Do not leave parts such as plastic covers and electrical plug within the reach of children and pets. Misuse of the part including, without limitation, accidental swallowing the part may cause choking and suffocation resulting in death or serious injury. If you suspect a part has been swallowed, immediately take appropriate emergency action and consult a doctor.

⚠ WARNING

Do not place the drive on a shaky table, uneven, tilted surface or other unstable location. The drive may fall, causing damage to the drive or possibly injury.

⚠ WARNING

Do not do the improper maintenance or disassemble, as it may cause personal injury or may result in electric shock or fire.

⚠ WARNING

Do not expose the drive to wet or damp conditions, as it may result in electric shock or fire.

⚠ WARNING

Do not allow any liquids or metal objects such as screws, staples or paper clips to enter the drive. Foreign objects may create a short circuit, which may cause product damage and fire, possibly resulting in serious injury.

⚠ WARNING

Do not use the drive when the metal parts and plastic parts exhibit abnormal characteristics, as this may result in electric shock.

⚠ WARNING

Do not use the drive if the drive have been dropped or damaged, as it may result in electric shock.

⚠ WARNING

If the Product produces an odor, overheats or smokes, immediately turn off the drive and disconnect the power cord from the outlet and disconnect the USB cable from the device. Failure to do so may result in fire, damage to the drive and/or personal injury including burns and electric shock. Do not use the drive again. Please contact the store from which you purchased it.

⚠ WARNING

Do not plug the AC adaptor into a power source that does not correspond to the voltage, current and the frequency specified on the regulatory label of the unit. An overload on the socket and/or AC adaptor may cause a fire or electric shock, possibly resulting in serious injury.

⚠ WARNING

Do not pull on the power cable/cord to remove a plug from a socket. Always grasp the plug directly. Pulling a power cable/cord may cause fracture resulting in a fire or electric shock and serious injury.

⚠ WARNING

Always confirm that the power plug has been fully inserted into the socket, to ensure a secure electrical connection. An overload on the socket may cause a fire or electric shock, possibly resulting in serious injury.

⚠ WARNING

Always make sure the drive and AC adaptor have adequate ventilation and are protected from overheating when the AC adaptor is connected to a power outlet. Inadequate ventilation may cause the drive and AC adaptor to overheat resulting in a fire or electric shock and serious injury.

⚠ WARNING

If dust gets on the power plug connectors or connector base, turn the power off and disconnect the power plug. Then clean the connector and/or connector base with a dry soft cloth. Failure to do so may cause a fire or electric shock, possibly resulting in serious injury.

⚠ WARNING

Avoid extended contact between the drive and your skin. The drive may become hot! Avoid prolonged contact to prevent skin irritation and/ or heat injury.

⚠ WARNING

Avoid extended contact between the AC adaptor and your skin. The AC adaptor may become hot! Avoid prolonged contact to prevent skin irritation and/or heat injury.

NOTICE

Do not disconnect the USB cable and AC adaptor while operating, as it may result in loss of data or damage to the drive.

NOTICE

Do not touch the USB cable while and AC adaptor operating, as it may result in loss of data or damage to the drive.

NOTICE

Do not bump, drop or jar the drive, as it may result in loss of data or damage to the drive.

NOTICE

Do not use the drive at high or low temperatures or sudden temperature changes. This may result in loss of data or damage to the drive. (Operating: 5°C - 35°C)

NOTICE

Make sure that you backup all your data as much as you can on the drive to the other storage drive.

NOTICE

Do not use the drive in the dew condensation, as it may result in loss of data or damage to the drive.

NOTICE

Do not cover the drive during operating, as it may become overheated.

NOTICE

Do not use the drive during a thunderstorm. If you see lightning or hear thunder, immediately turn off the devices to which this drive is connected, computer and peripherals, and disconnect the power cord from the outlet, and disconnect the USB cable from the computer. An electric surge caused by the lightning may result in loss of data or damage to the drive.

NOTICE

Do not clean the drive or any accessories with any chemicals. To clean the outside of the drive or the accessories, use a dry soft cloth. Use of chemicals may result in deterioration, deformation or discoloration of those items and the loss of data.

NOTE

Compatibility may vary depending on user's hardware configuration and operating system.

NOTE

USB 3.0 is backward compatible with USB 2.0.

NOTE

If the drive is not provided enough power, the drive does not operate.

NOTE

You may need USB3.0 Express Card Host Controller for your computer if the computer doesn't have USB3.0 port. You also can connect the drive to USB2.0 port of your computer. However the transfer rate will be downgraded to that of USB2.0.

NOTE

One Gigabyte (1GB) means $10^9 = 1,000,000,000$ bytes and one Terabyte (1TB) means $10^{12} = 1,000,000,000,000$ bytes using power of A computer operating system, however, reports storage capacity using powers of 2 for the definition of 1GB = $2^{30} = 1,073,741,824$ bytes and 1TB = $2^{40} = 1,099,511,627,776$ bytes, and therefore shows less storage capacity. Available storage capacity (including examples of various media files) will vary based on file size, formatting, setting, software and operating system as well as other factors.

NOTE

Use only the accessories supplied by the manufacturer.

NOTE

This drive needs the power supply from AC adaptor supplied by the manufacturer.

NOTE

Product specifications are subject to change without notice.

Safety information and rules and regulations for wireless LAN

⚠ CAUTION

Wireless LAN devices may cause interference with medical equipment such as cardiac pacemakers. If you use personal medical equipment, consult with your physician and medical equipment instructions before using the Product. The Product should not be used in environments with medical equipment such as hospitals and medical offices, or near users of personal medical equipment, as use of this Product may cause injury in such environments.

⚠ CAUTION

Always turn off wireless functionality if the computer is near automatic control equipment or appliances such as automatic doors or fire detectors. Radio waves can cause malfunction of such equipment, possibly resulting in injury.

NOTE

Do not use the Wireless LAN functionality near a microwave oven or in areas subject to radio interference or magnetic fields. Interference from a microwave oven or other source can disrupt Wireless LAN operation.

NOTE

The transmission speed over the wireless LAN, and the distance over which the wireless LAN can reach, may vary depending on surrounding electromagnetic environment, obstacles, access point design and configuration, client design and software/hardware configurations. The transmission rate described is the theoretical maximum speed as specified under the appropriate standard – the actual transmission speed will be lower than the theoretical maximum speed.

Limitations from responsibility

- Toshiba is not responsible for data corruption or data loss. **(Toshiba will not cover any data recovery)**
- Toshiba is not responsible for any damage due to the **fail** or negligence of users, fire, earthquake, or other accident beyond the control of Toshiba.
- Toshiba is not responsible all if you do not follow the mention content listed in the user's manual.
- Toshiba is not responsible all, as for the abuse of the connection apparatus and software.
- This product support is available only in the country where the Product was originally purchased.

Usage restrictions

This drive is used in standard applications such as office work, personal drive and household appliances. Toshiba Corporation shall not be liable except for this type of use. Do not use in special uses (atomic controls, aeronautic or space systems, mass transport vehicle operating controls, medical devices for life support, or weapons firing controls) where particularly high reliability requirements exist, where the pertinent levels of safety are not guaranteed, or where a failure or operational error could threaten a life or cause a physical injury.

Notice

The information contained in this manual, including but not limited to any product specifications, is subject to change without notice.

TOSHIBA PROVIDES NO WARRANTY WITH REGARD TO THIS MANUAL OR ANY OTHER INFORMATION CONTAINED HEREIN AND HEREBY EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH REGARD TO ANY OF THE FOREGOING. TOSHIBA ASSUMES NO LIABILITY FOR ANY DAMAGES INCURRED DIRECTLY OR INDIRECTLY FROM ANY TECHNICAL OR TYPOGRAPHICAL ERRORS OR OMISSIONS CONTAINED HEREIN OR FOR DISCREPANCIES BETWEEN THE PRODUCT AND THE MANUAL. IN NO EVENT SHALL TOSHIBA BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, OR EXEMPLARY DAMAGES, WHETHER BASED ON TORT, CONTRACT OR OTHERWISE, ARISING OUT OF OR IN CONNECTION WITH THIS MANUAL OR ANY OTHER INFORMATION CONTAINED HEREIN OR THE USE THEREOF.

GNU General Public License (“GPL”)

Firmware incorporated into this product may include third party copyrighted software licensed under the GPL or Lesser General Public License (“LGPL”) (collectively, “GPL Software”) and not Toshiba’s End User License Agreement. A copy of that license may be obtained at <http://www.support.toshiba.com>. With respect solely to GPL Software, no warranty is provided, to the extent permitted by applicable law. Modification of or tampering with GPL Software is solely at your own risk and will void the product warranty. Toshiba is not responsible for any such modification or tampering. Toshiba will not support any product in which you have or have attempted to modify GPL Software supplied by Toshiba.

Copyright

This manual may not be reproduced in any form without the prior written permission of Toshiba. No liability is assumed with respect to the use of the information contained herein.

Copyright © 2018 TOSHIBA ELECTRONIC DEVICES & STORAGE CORPORATION, All Rights Reserved.

Trademarks

CANVIO AeroCast is a trademark of Toshiba Electronic Devices & Storage Corporation.

Android, Google Play and Chromecast are trademarks of Google, Inc.

Mac, OS X, iPad, iPhone and Time Machine are trademarks of Apple Inc., registered in the U.S. and other countries.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

App Store is a service mark of Apple Inc.

DLNA is a trademark or a registered trademark of the Digital Living Network Alliance.

Wi-Fi is a registered trademark of the Wi-Fi Alliance®.

Windows is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries.

All other brand and product names are trademarks or registered trademarks of their respective companies.

Table of contents

Introduction.....	12
Overview.....	12
Components.....	12
Features.....	12
Hardware specifications.....	12
Software specifications.....	13
Chapter 1 Getting started	14
Charging the CANVIO AeroCast™ wireless hard drive.....	14
Connect to CANVIO AeroCast™	15
Connect via USB	15
Connect wirelessly.....	16
Chapter 2 CANVIO AeroCast™ wireless hard drive software utility.....	18
System login.....	18
Connect wirelessly to a Windows® PC/Mac.....	18
Client login for iPhone or iPad.....	19
Client login for Android™	20
Main interface	20
Application main interface	21
Pictures management interface	23
Picture viewer interface	25
Videos management interface	26
Video playback interface (iPhone, iPad, and Android™ device only).....	28
Music management interface	30
Music player interface (iPhone, iPad, and Android™ device only).....	32
Documents management interface	34
Document viewer interface (iPhone, iPad, and Android™ device only)	36
File/Folder management interface	37
Transferring files.....	39

Chapter 3 Backup management	40
Using the backup management feature	40
Manual backup	40
Automatic backup	41
Chapter 4 Settings management	42
Wireless LAN settings	42
Operation	43
Information	44
User symbol and name	45
Internet settings	46
Internet connection in Bridge Mode	46
Internet connection via your Chromecast™ device	49
Language	53
Cache	53
OSS info	54
TOSHIBA Support	54
Index	55

Introduction

Overview

The CANVIO AeroCast™ wireless hard drive allows you to wirelessly access your music, videos, pictures, and data. You can stream files to your iPad, iPhone, tablet, smartphone, and notebook, without worrying about tangled cables or wires. With 1 terabyte of storage space, you have plenty of room to transfer your files over from your mobile devices. The built-in USB 3.0 port makes file transfer even faster.

Components

The CANVIO AeroCast™ wireless hard drive includes the following components:

- AC adaptor
- USB 3.0 cable
- Quick Start Guide

Features

- Built-in 1 TB HDD storage with NTFS format.
- Connect wirelessly or using the included USB 3.0 cable.
- Access and stream your music, videos, pictures and data using the free Toshiba Wireless HDD app supporting iPhone, iPad, and Android™ operating systems.
- Up to 5 hours of continuous battery life in video streaming condition. Battery life may differ depending on user conditions.
- Four user profiles available to help keep your files organized.
- Access the internet via wireless, supporting 802.11 b/g/n.
- Supports SD/ SDHC/ SDXC memory card, Class 10 compatible. Please check “Toshiba Wireless HDD” app site for SDXC supporting version.

Hardware specifications

Product dimension:	121.4mm (L) x 86mm (W) x 24.4mm (H)
Weight:	Approx. 280g
Battery:	Charging time: 3 hours maximum

Environmental requirements:		
Wireless LAN		
	Standard:	802.11 b/g/n
	Frequency:	2.4 GHz
	Speed:	1T1R up to 150Mbps
Temperature		
	Operating:	5 to 35° C (41 to 95° F)
	Storage:	-20 to 40° C (-4 to 104° F)
Humidity		
	Operating:	20-80%
	Storage:	8-90%

Software specifications

Compatible File Types:	
Videos:	mp4, m4v, mov
Music:	mp3, m4a, aac, wav
Pictures:	jpg, bmp, png, gif, tif
Documents:	pdf, doc, docx, ppt, pptx, xls, xlsx, txt, rtf
System requirements:	
Operating System	
Windows®:	Windows® 7 (32bit & 64bit), Windows® 8.1 (32bit & 64bit)
OS X:	OS X v10.7, v10.8, v10.9, v10.10
iPhone or iPad operating system:	Support for Android™ and iOS smartphones or tablets. Please check "Toshiba Wireless HDD" app site for supported versions.
Android™:	

NOTE


This drive is formatted in NTFS for Windows®. In case for use with both Windows® PC and Mac, by installing "Tuxera NTFS for Mac" on Mac, user can read and write data to both Windows® PC and Mac. But in this case, user cannot use the Time Machine function of OS X.

Chapter 1

Getting started

Charging the CANVIO AeroCast™ wireless hard drive

To get started using the CANVIO AeroCast™, ensure that your device is charged. The CANVIO AeroCast™ wireless hard drive can be charged via the AC adaptor and USB cable.

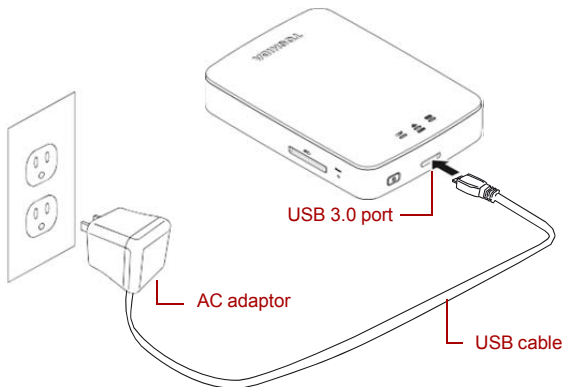

(Sample Illustration) CANVIO AeroCast™ wireless hard drive charging

To charge the CANVIO AeroCast™ wireless hard drive:

1. Attach the USB cable to the AC adaptor.
 2. Plug the USB cable into the USB 3.0 Host port on the CANVIO AeroCast™ wireless hard drive.
 3. Plug the AC adaptor into a live electrical wall outlet.
- While charging, the battery indicator light will blink slowly (interval time is 2 seconds).

Connect to CANVIO AeroCast™


You can connect to the CANVIO AeroCast™ wireless hard drive directly with the included USB cable (Direct-Attached Storage mode) or connect wirelessly (Wireless LAN mode).

Connect via USB

To operate via USB, connect the CANVIO AeroCast™ wireless hard drive to the computer's USB port using the included USB cable.

For Mac users:

To write files via USB, you will need to install the "NTFS driver for Mac" to your Mac. Refer the pre-loaded manual stored on the CANVIO AeroCast™ wireless hard drive.

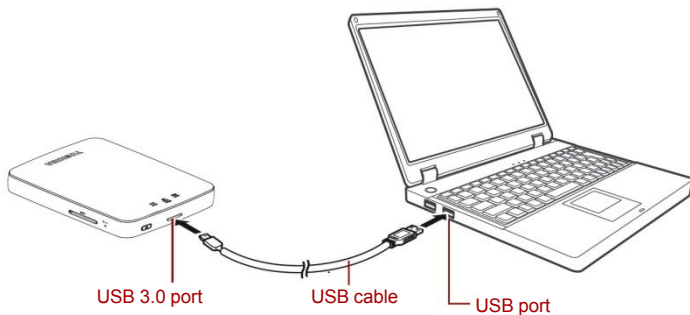

(Sample Illustration) Connect via USB

To connect the CANVIO AeroCast™ to your computer:

1. Make sure the CANVIO AeroCast™ wireless hard drive is powered OFF.
2. Connect the included USB 3.0 cable to the CANVIO AeroCast™ wireless hard drive.
3. Connect the other end of the USB 3.0 cable to your Windows® PC's USB port.

You can now begin transferring data to and from the product.


Connect wirelessly

You can access the CANVIO AeroCast™ wireless hard drive wirelessly from Windows®, Mac, iPhone, iPad, Android™ mobile devices and DLNA® devices by connecting to CANVIO AeroCast™. Please check “Toshiba Wireless HDD” app site for DLNA® supporting version.



(Sample Image) Wireless LAN mode

The CANVIO AeroCast™ wireless hard drive automatically functions in Wireless LAN mode once the connection has been set up, see [“Connect wirelessly to a Windows® PC/Mac” on page 18.](#)

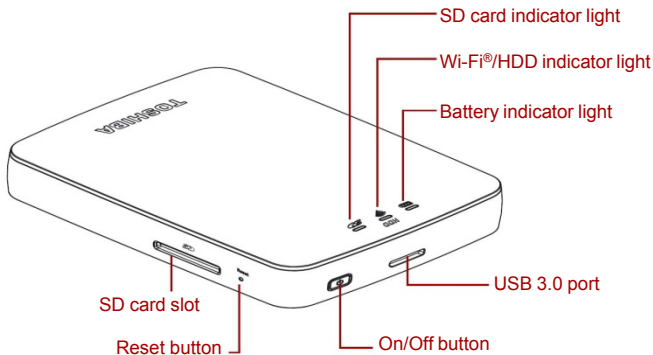

(Sample Illustration) Ports, buttons, and indicators

SD card Slot:

- Supports SD/ SDHC/ SDXC memory card, Class 10 compatible. Please check “Toshiba Wireless HDD” app site for SDXC supporting version.
- In Wireless LAN mode, you can access the SD card.

Reset button:

- In Wireless LAN mode, press and hold for 5 seconds. The system will restore to its factory settings.

On/Off button:

- Press and hold for 2 seconds: Wireless LAN mode turns ON.
- Press and hold for 2 seconds again: Wireless LAN mode turns OFF.

NOTE

If the battery is too low, you cannot turn the CANVIO AeroCast™ wireless hard drive ON. The battery indicator will blink Orange for 6 seconds, and then turn off.

USB 3.0 port:

- Compatible with USB 3.0 and USB 2.0.
- Allows for data transfer between a computer and the CANVIO AeroCast™ wireless hard drive, when connected.
- Allows you to charge the product battery when connected to the AC adaptor.

Battery indicator light:

- Green: 30% or more available battery power.
- Yellow: 10%-30% remaining battery power.
- Orange (blinking fast): the product is out of battery power or the operating temperature is too high. the product will shut down after 30 seconds.
- Green or Yellow (blinking slowly): The battery is charging.
- Green (Not blinking): Finish charging
- Green or Yellow (blinking fast): The product is shutting down or turning ON.
- LED Off: The device is powered OFF.

Wireless LAN/HDD indicator:

- **Wireless LAN Mode**
 - Blue: Wireless LAN is ON (no data access).
 - Blue (blinking): Wireless LAN is ON (storage access available).
 - Blue (turned off): Wireless LAN is OFF.
- **USB Mode**
 - White: No data access.
 - White (blinking): Data access available.
 - White (turned off): The device is in Sleep or Standby mode. It is safe to disconnect the device.

SD card indicator:

- **Only glows in Wireless LAN Mode**
 - Violet: No SD card access.
 - Violet (blinking): SD card access available.
 - Violet (turned off): SD card is in Standby.

Chapter 2

CANVIO AeroCast™ wireless hard drive software utility

System login

Connect wirelessly to a Windows® PC/Mac

1. Press the **ON/OFF** button to power on the system.
2. Once the Wi-Fi® indicator light stops blinking, enable the Wireless LAN feature on your Windows® PC/Mac and open the Wireless Network connection.
3. Select the **Toshiba whdd xxxx** wireless connection (where xxxx is a 4-digit number generated by your CANVIO AeroCast™ wireless hard drive (default wireless SSID: **Toshiba whdd xxxx**), and then enter the default password **12345678**.


Please be sure to change the default password immediately upon first usage of the product.

4. The CANVIO AeroCast™ wireless hard drive can now be accessed as a network-attached device.

File copy wirelessly to Windows® PC

You can wirelessly transfer files to the CANVIO AeroCast™ wireless hard drive to a Windows® PC once the drive has been mapped.

1. To map the drive on your Windows® PC, click or touch **Computer**, and then **Map Network Drive**.

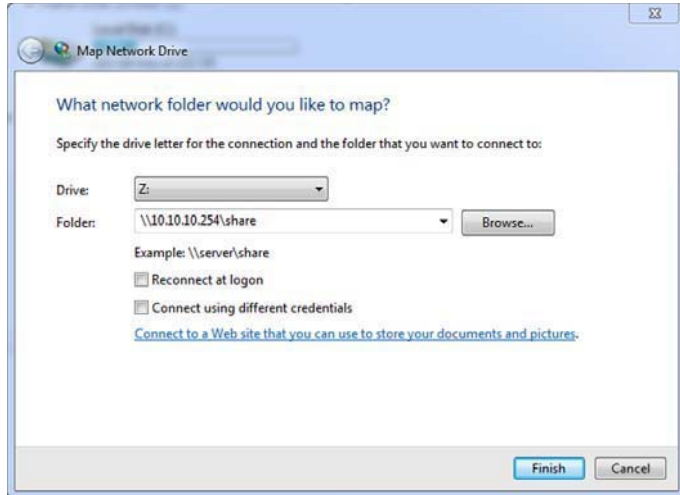

(Sample Image) Map Network Drive screen

2. Select a letter from the “Drive” drop down menu.
3. In the “Folder” field, type **\\10.10.10.254\share**, and then click or touch **Finish**.

You should now be able to see your CANVIO AeroCast™ wireless hard drive on your Windows® PC’s “My Computer” screen.

File copy wirelessly to Mac

On a Mac, the CANVIO AeroCast™ wireless hard drive automatically displays as a network drive. You can transfer files by simply dragging and dropping them to the desired location.

For faster file transfer use a USB cable. For more information, see “[Connect via USB](#)” on page 15.

Client login for iPhone or iPad

Install the app for iPhone and iPad

1. In the App Store, search for and locate the Toshiba Wireless HDD app.
2. Install the **Toshiba Wireless HDD** app and follow the on-screen installation instructions.
3. The **Toshiba Wireless HDD** icon appears on the Desktop once the installation process is complete.

Connecting wirelessly to an iPhone or iPad

1. Press the **ON/OFF** button to power ON the CANVIO AeroCast™. Wait for the Wi-Fi® indicator light to stop blinking.
2. On your iPad/iPhone, click or touch **Setting**, and then **Wi-Fi**.
3. Select **Toshiba whdd xxxx** (where xxxx is a 4-digit number generated by your CANVIO AeroCast™ device).
4. Enter the default password **12345678**.

Please be sure to change the default password immediately upon first usage of the product.

Application login

Run the “Toshiba Wireless HDD” app.

Client login for Android™

Install Android™ app

1. In the Google Play™, search for and locate the Toshiba Wireless HDD app.
2. Install the **Toshiba Wireless HDD** app and follow the on-screen installation instructions.
3. The **CANVIO AeroCast™** icon appears on the Desktop once the installation process is complete.

Connecting wirelessly to an Android™ device

1. Press the **ON/OFF** button to power ON the CANVIO AeroCast™. Wait for the Wi-Fi® indicator light to stop blinking.
2. Once the Wi-Fi® indicator light stops blinking, click or touch **Setting**, and then the **Wireless LAN** option in your tablet or smartphone.
3. Select **Toshiba whdd xxxx** (where xxxx is a 4-digit number generated by your CANVIO AeroCast™ device).
4. Enter the default password **12345678**.

Please be sure to change the default password immediately upon first usage of the product.


Application login

Run the “Toshiba Wireless HDD” app.

Main interface


When displaying the main interface screen, the application may inform you that an update is available. The following 3 options are available:

- **OK** (enables the update process; recommended)
- **Cancel** (cancels the update process)
- **Do not prompt** (discontinues future notifications; not recommended)

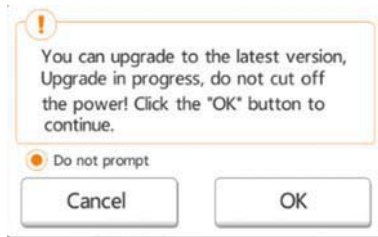

(Sample Image) Firmware update screen

If you select **OK** to update, the system will inform you to wait 5mins.

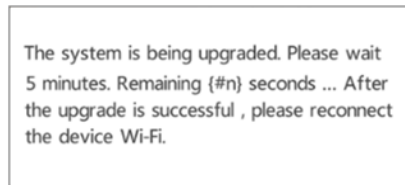

(Sample Image) Firmware update - wait 5 minutes screen

If you select **Cancel**, you may be informed of any available upgrades the next time you login and enter the main interface.

If you select **Do not prompt**, the application will never again automatically inform you of a firmware upgrade, however, you can manually upgrade the firmware in the **Setting** screen.

Application main interface

Below are examples of the Toshiba Wireless HDD main screen viewed in the iPhone, iPad, or Android™ app.



Tablets/iPads



Smartphones/iPhones

(Sample Image) Main interface screen - app

Main interface functionality

Below is a description of each button/icon and its function within the main interface:

Button/Icon	Function
 Pictures	Displays the pictures management screen.
 Videos	Displays the videos management screen
 Documents	Displays the documents management screen.
 Music	Displays the music management screen.
 File/Folder	Displays the file/folder management screen.
 Backup	Displays the backup management screen. (iPhone, iPad, and Android™ devices only.) See “Backup management” on page 40.
	Click or touch to select a Chromecast™ device. (Only available when a Chromecast™ device is available.) See “Internet connection via your Chromecast™ device” on page 49.
	Click or touch to disconnect a Chromecast™ device. (Only available when a Chromecast™ device is connected.)
 HDD 	Click or touch the HDD button to switch to the CANVIO AeroCast™ internal HDD storage.
 SD Card 	Click or touch the SD Card button to display the SD card pop up menu functions. The available functions are “Detect SD card” and “Unmount SD card.”
 Local 	Click or touch the Local button to switch to the local device. (iPhone, iPad, or Android™ devices only.)
	The SD card is available.
	The SD card is not available. Click or touch to display the SD card pop up menu functions. The available functions are “Detect SD card” and “Unmount SD card.”
	Internet connection is available. Click or touch to display internet setting screen.
	No internet connection is available. Click or touch to display internet setting screen.

Button/Icon	Function
	Displays the current battery level of the CANVIO AeroCast™ wireless hard drive.
	Click or touch the Settings button to enter the CANVIO AeroCast™ wireless hard drive system settings.


Pictures management interface

NOTE

Before using this feature, content should be transferred to the CANVIO AeroCast™ wireless hard drive via USB connection, see [“Connect via USB” on page 15](#).

Click or touch the **Picture** button to display the pictures management screen.

Below is an example of the pictures management screen.

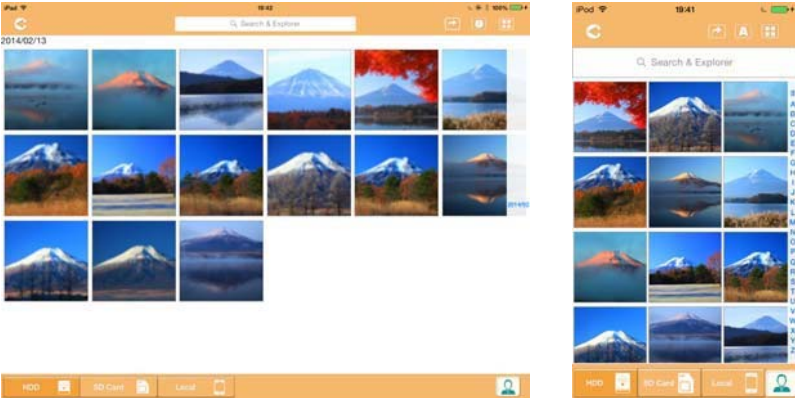


Tablets/iPads

Smartphones/iPhones

(Sample Image) Pictures management screen

Below is a description of each button/icon and its function within the pictures management screen:

Button/Icon	Function
	Click or touch the Back button to return to the main screen.
	When the Sort by name icon is displayed, the pictures are sorted by filename.
	When the Sort by date icon is displayed, the pictures are sorted by file date.
	Click or touch the icon to toggle between modes.

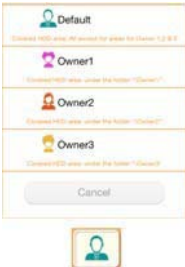Button/Icon	Function
 	When the Thumbnail icon is displayed, the pictures are displayed in thumbnails. When the List icon is displayed, the pictures are displayed as a list, featuring a smaller thumbnail along with file information. Click or touch the icon to toggle between modes.
	Click or touch the Go To button to display a pop-up menu with navigation options from the main interface.
	Enter key letters or numbers in the Search & Explorer field to perform a search of a specific file or folder. If there is no Search & Explorer field, tap on the Folder icon and navigate through the folders to find the desired file.
	Click or touch the HDD button to switch to the CANVIO AeroCast™ wireless hard drive's internal storage.
	Click or touch the SD Card button to switch to the inserted SD card.
	Click or touch the Local button to switch to the local device. (iPhone, iPad, or Android™ devices only.)
	In the HDD storage mode, you can choose pictures from one of 4 users. Click or touch the User icon to display other users. The 4 user default names are: Default, Owner1, Owner2, and Owner3. To configure these names, see “User symbol and name” on page 45.

Picture viewer interface

Click or touch the desired picture file in the picture management screen to display it in the picture viewer screen.



(Sample Image) Picture viewer screen

Below is a description of each button/icon and its function within the picture viewer interface screen:

Button/Icon	Function
	Click or touch the Back button to return to the pictures management screen.
	Click or touch the Download button to download the current picture to the local album. (HDD mode only.)
	Click or touch the Upload button to upload the current picture from the local album to the current owner's "Uploaded" folder. (Local mode only.)
	Click or touch the Play/Pause button to start/stop the photo slide show.
	Click or touch the Delete button to delete the current picture.
	Click or touch the Share button to share the current picture to Facebook, Twitter, or email.


Button/Icon	Function
	Click or touch to select a Chromecast™ device. (Only available when a Chromecast™ device is available.) See “Internet connection via your Chromecast™ device” on page 49.
	Click or touch to disconnect a Chromecast™ device. (Only available when a Chromecast™ device is connected.)

Videos management interface

NOTE


Before using this feature, content should be transferred to the CANVIO AeroCast™ wireless hard drive via USB connection, see [“Connect via USB”](#) on page 15.

Click or touch the **Videos** button to display the videos management screen.

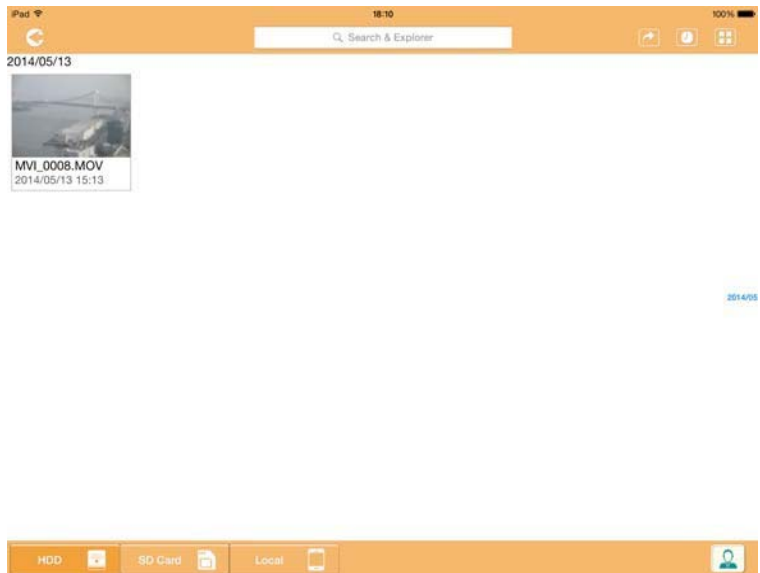


(Sample Image) Videos management screen

Below is a description of each button/icon and its function within the videos management screen:

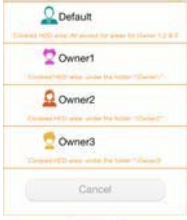Button/Icon	Function
	Click or touch the Back button to return to the main screen.
 	When the Sort by name icon is displayed, the videos are sorted by filename. When the Sort by date icon is displayed, the videos are sorted by file date. Click or touch the icon to toggle between modes.
 	When the Thumbnail icon is displayed, the videos are displayed in thumbnails. When the List icon is displayed, the videos are displayed as a list, featuring a smaller thumbnail along with file information. Click or touch the icon to toggle between modes.
	Click or touch the Go To button to display a pop-up menu with navigation options from the main interface.
 Search & Explorer	Enter key letters or numbers in the Search & Explorer field to perform a search of a specific file or folder. If there is no Search & Explorer field, tap on the folder icon and navigate through the folders to find the desired file.
	Click or touch the HDD button to switch to the CANVIO AeroCast™ wireless hard drive's internal storage.
	Click or touch the SD Card button to switch to the CANVIO AeroCast™'s inserted SD card.
	Click or touch the Local button to switch to the local device. (iPhone, iPad, or Android™ devices only.)
 	When switching to the CANVIO AeroCast™ wireless hard drive's internal storage, you can choose videos from one of 4 users. Click or touch the Owner icon to display other users. The 4 user default names are: Default, Owner1, Owner2, and Owner3

Video playback interface (iPhone, iPad, and Android™ device only)

Click or touch a video file to display the video playback screen.

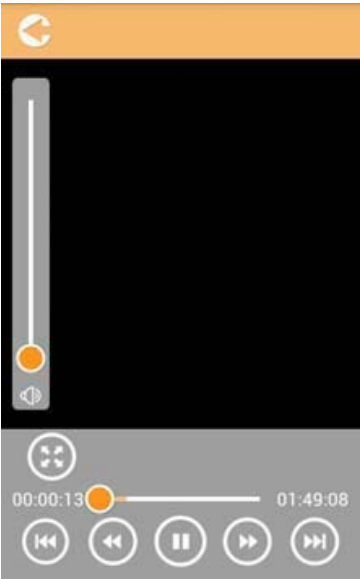

(Sample Image) Video playback screen

Below is a description of each button/icon and its function within the video playback screen:


Button/Icon	Function
	Click or touch the Back button to return to the main screen.
	Click or touch the Zoom button to adjust the playback screen size.
	Click or touch the Previous button to switch to the previous video playback.
	Click or touch the Next button to switch to the next video playback.
	Click or touch the Rewind button to rewind the video 20 seconds.
	Click or touch the Forward button to forward the video 20 seconds.

Button/Icon	Function
	Click or touch the Play/Pause button to play/pause the currently playing video.
	Drag the Playback progress bar, to navigate to different positions in the video playback.
	Drag the Volume control bar to adjust the volume of the video.
	Click or touch to select a Chromecast™ device. (Only available when a Chromecast™ device is available.) See “Internet connection via your Chromecast™ device” on page 49.
	Click or touch to disconnect a Chromecast™ device. (Only available when a Chromecast™ device is connected.)

Music management interface

NOTE



Before using this feature, content should be transferred to the CANVIO AeroCast™ wireless hard drive via USB connection, see [“Connect via USB”](#) on page 15.

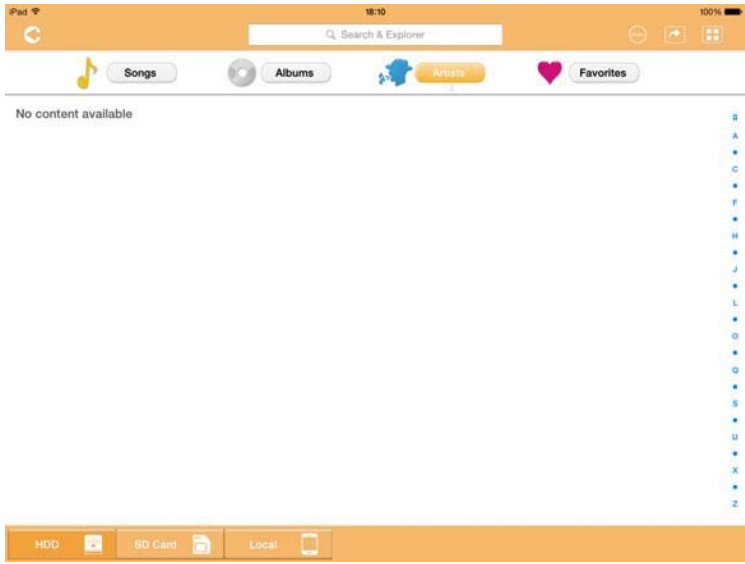

(Sample Image) Music management screen

Below is a description of each button/icon and its function within the music management screen:

Button/Icon	Function
	Click or touch the Back button to return to the main screen.
 	When the Thumbnail icon is displayed, music tracks are displayed in thumbnails. When the List icon is displayed, music tracks are displayed as a list, featuring a smaller thumbnail along with file information. Click or touch the icon to toggle between modes.
	Click or touch the Go To button to display a pop-up menu with navigation options from the main interface.

Button/Icon	Function
 Search & Explorer	Enter key letters or numbers in the Search & Explorer field to perform a search of a specific file or folder. If there is no Search & Explorer field, tap on the Folder icon and navigate through the folders to find the desired file.
	Click or touch the HDD button to switch to the CANVIO AeroCast™ wireless hard drive's internal storage.
	Click or touch the SD Card button to switch to the CANVIO AeroCast™'s inserted SD card.
	Click or touch the Local button to switch to the local device. (iPhone, iPad, or Android™ devices only.)
	Click or touch the All Songs button to view all of the song files available on the CANVIO AeroCast™ wireless hard drive (default mode).
	Click or touch the Albums button to view all of the song files by albums.
	Click or touch the Artist button to view all of the song files by artist.
	Click or touch the Favorites button to view all of your favorite songs. You can add songs to the favorites screen by clicking or touching the (♥) button on the Songs screen, Album screen, or Artist screen. Remove songs from the Favorites screen by clicking or touching the (♥) button on the music player.

Music player interface
(iPhone, iPad, and Android™ device only)

Click or touch a music file to display the music player screen.



(Sample Image) Music player screen

Below is a description of each button/icon and its function within the music player screen:

Button/Icon	Function
	Click or touch the Back button to return to the music management screen.
	Click or touch the Music Playlist button to change the songs in a playlist.
	Click or touch the Previous button to switch to the previous music playback.
	Click or touch the Next button to switch to the next music playback.
	Click or touch the Rewind button to rewind the music 20 seconds.
	Click or touch the Forward button to forward the music 20 seconds.

Button/Icon	Function
	Click or touch the Play/Pause button to play/pause the currently playing music.
	Drag the Playback progress bar, to navigate to different positions in the music playback.
	Drag the Volume control bar to adjust the volume of the music.
	Click or touch the Music mode button to switch between the following four musical modes: Shuffle () (default mode), Loop Playback () , Order Play () , and Single Cycle ().
	Click or touch the Favorites button to add the currently playing music to your Favorites.

Documents management interface


Click or touch the Documents button to display the documents management screen.



(Sample Image) Documents management screen

Below is a description of each button/icon and its function within the documents management screen:


Button/Icon	Function
	Click or touch the Back button to return to the main screen.
	When the Sort by name icon is displayed, the documents are sorted by filename.
	When the Sort by date icon is displayed, the documents are sorted by file date. Click or touch the icon to toggle between modes.
	When the Thumbnail icon is displayed, the documents are displayed in thumbnails.
	When the List icon is displayed, the documents are displayed as a list, featuring a smaller thumbnail along with file information. Click or touch the icon to toggle between modes.
	Click or touch the Go To button to display a pop-up menu with navigation options from the main interface.

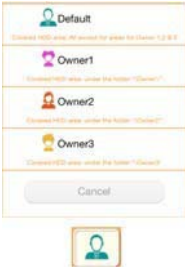Button/Icon	Function
 Search & Explorer	Enter key letters or numbers in the Search & Explorer field to perform a search of a specific file or folder. If there is no Search & Explorer field, tap on the Folder icon and navigate through the folders to find the desired file.
	Click or touch the HDD button to switch to the CANVIO AeroCast™ wireless hard drive's internal storage.
	Click or touch the SD Card button to switch to the CANVIO AeroCast™'s inserted SD card.
	Click or touch the Local button to switch to the local device. (iPhone, iPad, or Android™ devices only.)
	When switching to the CANVIO AeroCast™ wireless hard drive's internal storage, you can choose videos from one of 4 users. Click or touch the Owner icon to display other users. The 4 user default names are: Default, Owner1, Owner2, and Owner3

Document viewer interface
(iPhone, iPad, and Android™ device only)

Click or touch a document file to display the Document Viewer screen.

In the iPhone and iPad app, only supported file types can be viewed. In the Android™ app, you are prompted to open the document in another available app. You can choose to use that app just once or always. If you select Always, you will not see the prompt again.

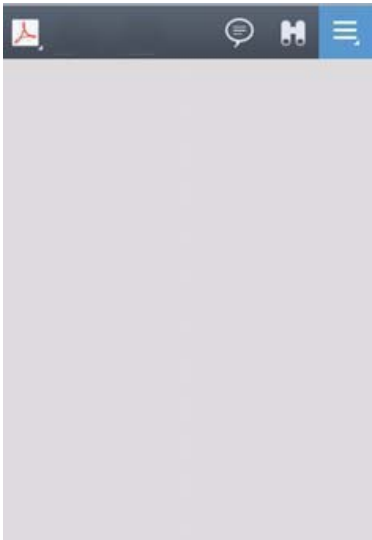


(Sample Image) Document Viewer screen

Below is a description of each button/icon and its function within the Document Viewer screen:

Button/Icon	Function
	Click or touch the Find button to open the find screen. Enter key letters or numbers in the search box to perform a search of specific text.
	Click or touch the Options button to view various document options.

File/Folder management interface


Click or touch the **File/Folder** button to display the File/Folder management screen.

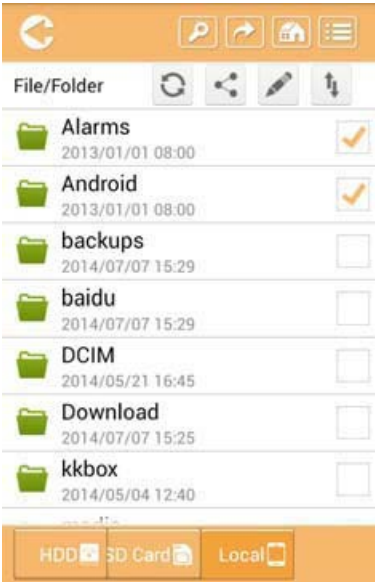

(Sample Image) File/Folder management interface - Application screen

Below is a description of each button/icon and its function within the documents management screen:

Button/Icon	Function
	Click or touch the Back button to return to the main screen.
 	When the Sort by name icon is displayed, the files/ folders are sorted by filename. When the Sort by date icon is displayed, the files/ folders are sorted by file date. Click or touch the icon to toggle between modes.
 	When the Thumbnail icon is displayed, the files/ folders are displayed in thumbnails. When the List icon is displayed, the files/folders are displayed as a list, featuring a smaller thumbnail along with file/folder information. Click or touch the icon to toggle between modes.

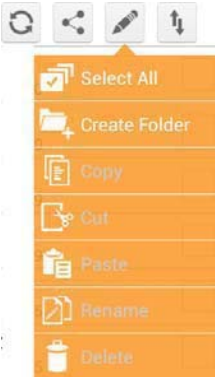Button/Icon	Function
	Click or touch the Go To button to display a pop-up menu with navigation options from the main interface.
	Enter key letters or numbers in the Search & Explorer field to perform a search of a specific file or folder. If there is no Search & Explorer field, tap on the Folder icon and navigate through the folders to find the desired file.
	Click or touch the HDD button to switch to the CANVIO AeroCast™ wireless hard drive's internal storage.
	Click or touch the SD Card button to switch to the CANVIO AeroCast™'s inserted SD card.
	Click or touch the Local button to switch to the local device. (iPhone, iPad, or Android™ devices only.)
	Click or touch the Refresh button to refresh the screen.
	Click or touch the Share button to share the current document via email. Note that this feature only works with photo files.
	A Checkmark icon indicates that the file or folder is selected.
	Click or touch the Setting button to display the following options: 
	Click or touch the Transfer button to display the file transfer status screen.

Transferring files

When an action is taken with a file or folder (copy, cut, upload, or download), the file transmission dialog box opens. A progress bar of each transmission is displayed as well as successful and failed transmissions.



(Sample Image) Queued Files status screen

- The **Upload** (↑) icon indicates an uploading file/folder in progress.
- The **Download** (↓) icon indicates a downloading file/folder in progress.
- Touch the **Upload/Download** icon to pause the upload/download process. The **Pause** (||) icon is displayed.
- The (⏸) icon indicates that a file/folder is waiting for upload/download. This application allows for individual file/folder upload/download.
- Touch the **Cancel** (🗑️) icon to cancel all queued files. The buttons above the Queued Files list indicate “Transfer Complete” or “Transfer Failed.”



(Sample Image) Document Viewer Queued Files screen

If a transfer fails and you wish to try again, click the **Re-Transfer** (↻) button.

Chapter 3

Backup management

Using the backup management feature

(For iPhone, iPad, and Android™ devices only.)

You can back up the files on the SD card or local device to one of the four user directories: Default, Owner1, Owner2, or Owner3. The backup is an incremental backup.

You can back up the SD card manually or use the automatic backup function. Local devices must be backed up manually.


If the size of the backup files are larger than the available space on the CANVIO AeroCast™ wireless hard drive's internal storage, you will see a warning message before the backup process begins.

Manual backup

1. To perform a manual backup, click or touch the **Backup** button on the main screen.
2. Click or touch **Backup SD Card** or **Backup Local Data**.
3. Click or touch a desired user directory you wish to back up the files to.
4. Click or touch **Start Backup**. Files from the SD card or local device will be backed up to the selected user directory. The backup progress is displayed at the bottom of the interface screen. Once the backup has finished, you will see a message indicating the backup succeeded.

Automatic backup

You can set up an Automatic backup for your SD card by selecting the **Auto Copy** box on the backup SD card screen. The next time you insert the SD card, all of the videos and pictures on the SD card will be automatically backed up to the selected user directory.

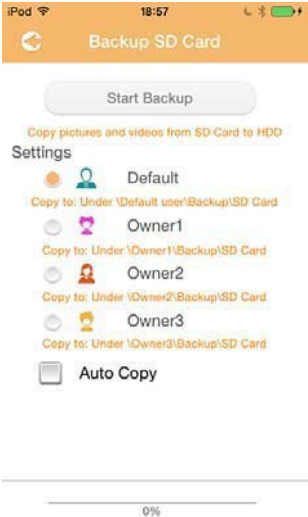

(Sample Image) Back up data - Automatic screen

NOTE

Be sure to confirm that any transfers from the SD card are complete before removing the card.

Chapter 4

Settings management

Click or touch the **Settings** button in the upper-right corner of the main interface screen to display the Setting interface screen. The following modules are available:

- Wireless
- Operation
- Information
- User symbol and name
- SSID Attribute
- Internet
- Language
- Cache
- OSS Info

Wireless LAN settings

Click or touch **Wireless** to display the wireless LAN settings screen.



(Sample Image) Settings - Wireless screen

The following options are available:

- SSID
- Enable password
- Modify password

SSID:

1. Click or touch the **SSID** button to enter the SSID settings screen.



(Sample Image) Settings - SSID settings screen

2. Enter your SSID. The default SSID is “Toshiba whdd xxxx.”
3. Click or touch the **OK** button.
4. Click or touch the **Apply** button at the top-right corner of the Wireless screen.

Enable Password:

1. Move the **Enable** slider to the right or left to enable or disable the password feature.
2. Click or touch the **Apply** button at the top-right corner of the Wireless screen.

Modify Password:

1. Click or touch the **Modify Password** button.
2. Enter the new password.
3. Click or touch the **OK** button.
4. Click or touch the **Apply** button at the top-right corner of the Wireless screen.

Operation

You can reset, power off, or restart the CANVIO AeroCast™ hard drive from the Operation screen. Click or touch **Settings**, and then **Operation** to display the Operation screen:



(Sample Image) Settings - Operation screen

The following options are available:

- **Reset**—Click or touch to reset the CANVIO AeroCast™ wireless hard drive settings.

- **Power off**—Click or touch to power OFF the CANVIO AeroCast™ wireless hard drive.
- **Restart**—Click or touch to restart the CANVIO AeroCast™ wireless hard drive.

Information

The Information screen provides system information for the CANVIO AeroCast™ wireless hard drive. Click or touch **Settings**, and then **Information** to display the Information screen:



The screenshot shows the 'Information' screen with an orange header bar containing a back arrow, the title 'Information', and a share icon. Below the header is a table with system information.

HDD Capacity	1.52 GB	26
SD Card Capacity	0B / 0B	
MAC Address	6C:AD:F...:6C:DD	
Firmware Version	1.0.2	
Application Version	0.9.2	

(Sample Image) Settings - Information screen

The following fields are available:

- HDD Capacity
- SD Card Capacity
- MAC Address
- Firmware Version
- Application Version

User symbol and name

Click or touch **Settings**, and then **User symbol and name** to display the User symbol and name screen.



(Sample Image) Settings - User symbol and name screen

On this screen, you can change user icons and names. This change will reflect on the picture management screen, video management screen, SD card screen, and backup screen.



(Sample Image) Settings - User symbol and name management screen

There are a total of 12 icons to choose from. You can also type a new name for each user.

Click or touch a User icon, and then type a name, if desired, for each of the four users (e.g. "Default" to "Father").

Internet settings

The internet screen allows you to configure the internet settings for your CANVIO AeroCast™ device.

There are two (2) CANVIO AeroCast™ wireless hard drive work connection modes to choose from:

- Home Network (Station Mode)
- Public Network (Bridge Mode)

In the Bridge Mode, you can connect the CANVIO AeroCast™ wireless hard drive to a network while keeping your mobile device connected to the CANVIO AeroCast™. This allows you to access the internet without having to disconnect your device from the CANVIO AeroCast™ network and connect it to the local network. Bridge Mode also allows you to share files via email and social media from within the Toshiba Wireless HDD app.


In Station Mode, both the CANVIO AeroCast™ wireless hard drive and your mobile device are connected to the local network. In this mode, you can still access the CANVIO AeroCast™ wireless hard drive and the Internet, however this method also allows the CANVIO AeroCast™ wireless hard drive to communicate with a Chromecast™ device that is also connected to the same network. The CANVIO AeroCast™ wireless hard drive must be set to Station Mode in order to connect to a Chromecast™ device.

Internet connection in Bridge Mode

NOTE

You must be connected to the network to choose or switch to Public Network (Bridge Mode).


1. To configure your internet settings to run in Bridge mode, select **Public Network**.

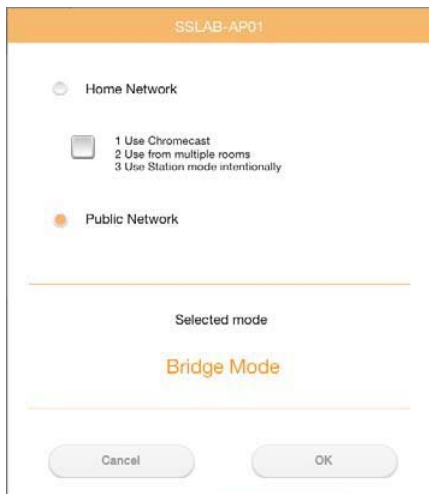

(Sample Image) Choosing Bridge Mode screen (iOS)


- Click or touch the **OK** button.

The following message appears when switching from Station Mode to Bridge Mode:

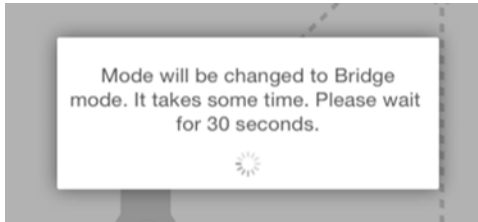


(Sample Image) Message screen (iOS)

If the app cannot find the CANVIO AeroCast™ wireless hard drive, you may see the following message:

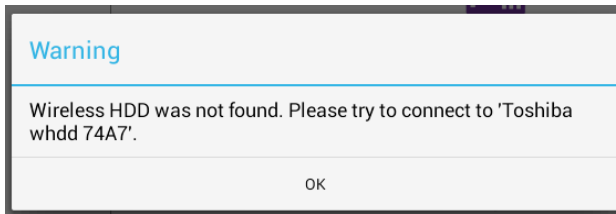

(Sample Image) Message screen (iOS)


- To change the WLAN to access point on the CANVIO AeroCast™ wireless hard drive, return to the settings screen on your local device.

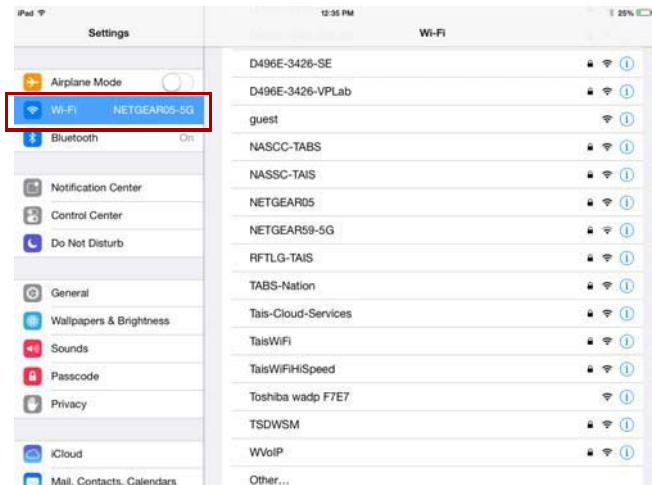

(Sample Image) Settings screen (iOS)


4. Select your router.

If the app is successful at finding the CANVIO AeroCast™ wireless hard drive, you may see the following message:

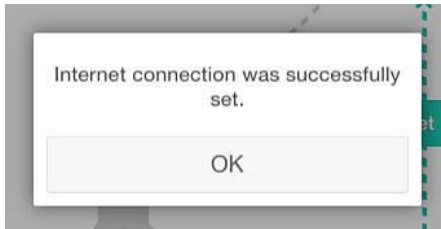

(Sample Image) Message screen (iOS)

The screen below displays a successful connection:

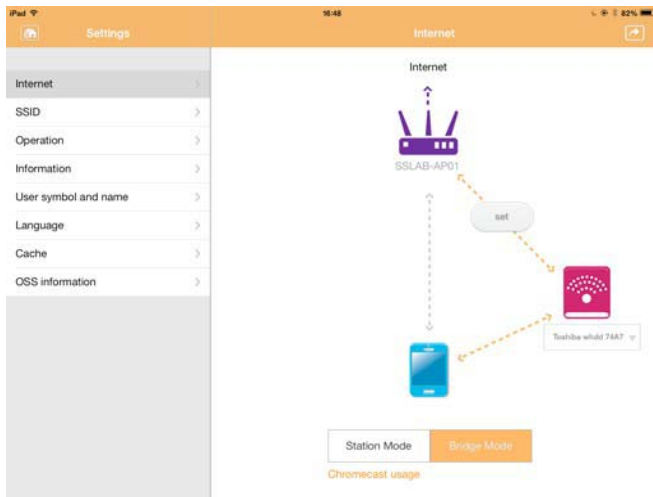


(Sample Image) Successful connection screen (iOS)

Internet connection via your Chromecast™ device


To connect your Chromecast™ device begin by setting up your Chromecast™ device (sold separately) per the instructions provided with the Chromecast™. Then follow the instructions below:

1. Click or touch **Settings**, and then **Internet** to display the internet screen. The internet screen displays the current connections available with the CANVIO AeroCast™ wireless hard drive.

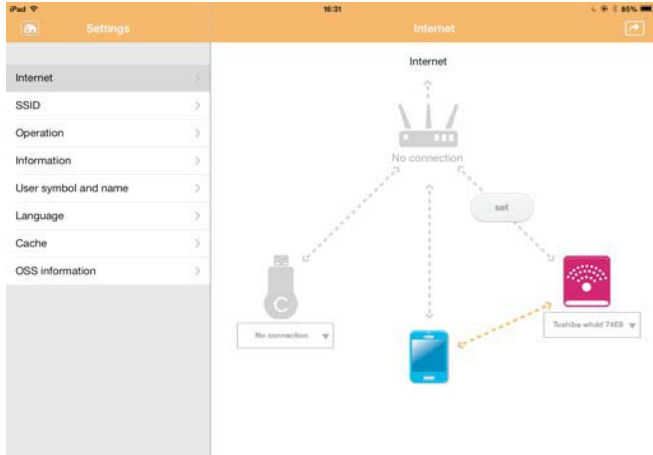

(Sample Image) Internet Settings screen (iOS)


2. Connect the CANVIO AeroCast™ wireless hard drive to the router by clicking or touching the **Set** () icon that is located between the **Not Connected** and **TOSHIBA** icons within the network connection diagram.

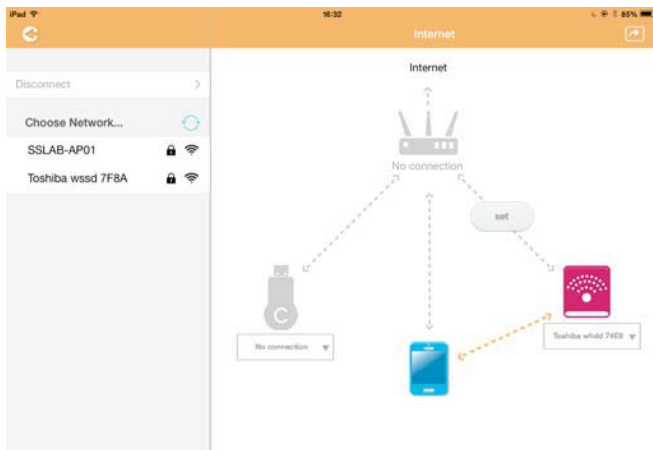

(Sample Image) Wi-Fi® connections screen (iOS)

3. Choose the wireless network you wish to connect to from the options listed in the “Choose Network” menu, and then enter the password to connect to it.
4. Ensure that the **Home Network** radio button is enabled. Click or touch the checkbox to enable it.


You will see a screen similar to the one below:

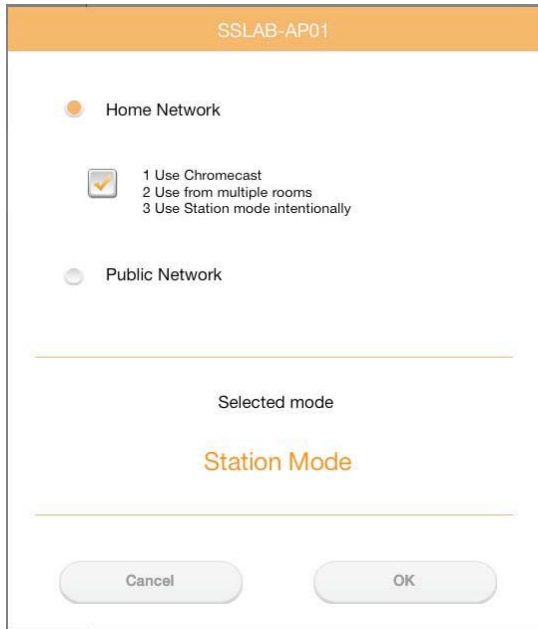

(Sample Image) SSID connection screen (iOS)


5. Click or touch the **OK** button.

The following message appears when switching from Bridge Mode to Station Mode:

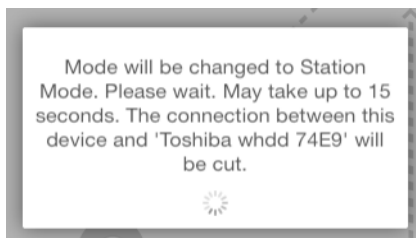


(Sample Image) Message screen (iOS)

You may see the following message:

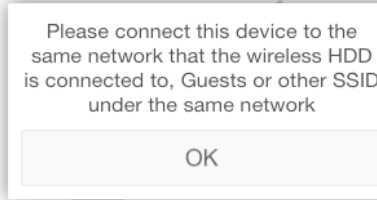


(Sample Image) Message screen (iOS)

If the app cannot find the CANVIO AeroCast™ wireless hard drive, you may see the following message:

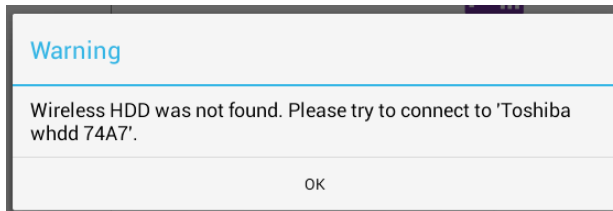

(Sample Image) Message screen (iOS)


- To change the WLAN to “Access Point” on the CANVIO AeroCast™ wireless hard drive, return to the Settings screen.

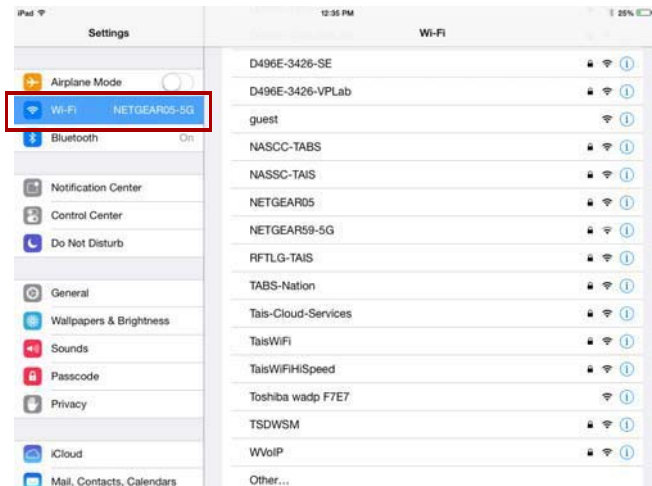

(Sample Image) Settings screen (iOS)

7. Select your router.

If the app is successful at finding the CANVIO AeroCast™ wireless hard drive, you may see the following message:

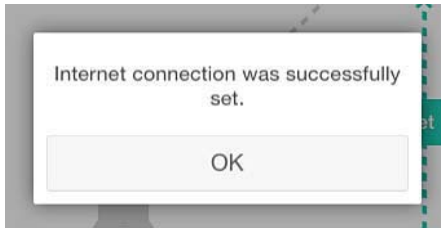


(Sample Image) Message screen (iOS)

8. Click or touch the **OK** button.

You should now be connected to your Chromecast™ device, CANVIO AeroCast™ wireless hard drive, and your local device.

The screen below displays a successful connection:

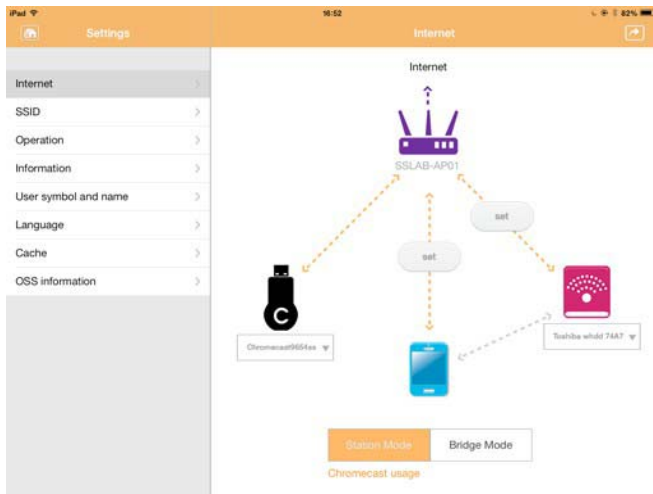

(Sample Image) Successful connection screen (iOS)

NOTE


If you connect to the Home Network (Station Mode), other people will have access to your attached storage device through the network.

Use caution when connecting to a network in a public place as others may be able to connect to your device.

Language

The default language for the CANVIO AeroCast™ wireless hard drive is English. You can change the language setting for your CANVIO AeroCast™ wireless hard drive in the language screen.

1. From the **Settings** screen, click or touch **Language**. A list of languages is displayed.

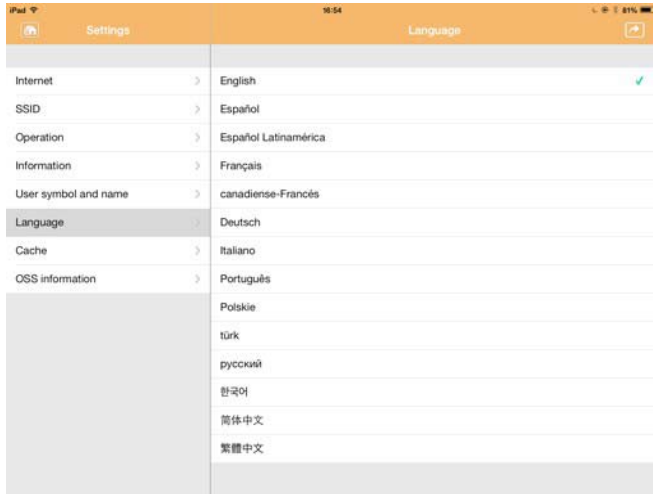

(Sample Image) Language screen

1. Click your desired language.
The language is immediately updated on your screen.

Cache

In the Cache screen you can apply cache settings on your local device to improve the response speed of the CANVIO AeroCast™ wireless hard drive.



(Sample Image) Cache screen

The following options are available:

- Enable Video Cache
- Clear Cache

Enable Video Cache:

Move the **Enable Video Cache** slider to the right or left to enable or disable video cache respectively.

Clear Cache:

Click or touch the **Clear Cache** button to clear the CANVIO AeroCast™ wireless hard drive's cache.

OSS info

The OSS Info screen allows you to see information regarding the Open Source Software utilized in CANVIO AeroCast™ wireless hard drive.

TOSHIBA Support

Need help?

Please contact support page:

Australia: www.mytoshiba.com.au

New Zealand: www.mytoshiba.co.nz

Singapore: www.toshiba-personalstorage.asia

Index

A

Android™	
Application login.....	20
Client login	20
Connect wirelessly	20
Install app	19

B

Backup management feature . .	40
-------------------------------	----

C

Cache	53
CANVIO AeroCast™	
System login	18
Components	12
Connection	
USB	15
Wirelessly	16
Contacting Toshiba	54

D

Document viewer interface	36
Documents management interface	34

F

File copy wirelessly	
Mac.....	19
Windows® PC	19
File/Folder management interface	37

H

Hardware specifications.....	12
------------------------------	----

I

Icon	
Safety.....	2
Internet connection	
Bridge Mode.....	46
Station Mode	49
Via Chromecast™	49
iPhone and iPad	
Install application.....	19
iPhone or iPad	
Application login	20
Client login	19
Connect wirelessly	20

L

Language	53
----------------	----

M

Main interface.....	20
application.....	21
Music management interface. .	30
Music player interface.....	32

O

OSS info	54
Overview	12

P

Picture viewer interface.....	25
Pictures management interface	23

S

Safety

Icons2

SD card

Automatic backup41

Manual backup40

Settings

Internet46

Settings management

Information.....44

Operation.....43

User symbol and name . . . 45

Wireless LAN42

Software specifications13

T

Trademarks.....9

V

Video playback interface.....28

Videos management interface . 26

W

Wireless connection

Windows® PC/Mac.....18

형식 승인

제품사양 및 인증

항목	내용
주파수범위	2412 – 2472 MHz (802.11b/g/n 20MHz BW) / 2422 – 2462 MHz (802.11n 40MHz BW)
변조방식	CCK (802.11b) / OFDM (802.11 g/n20/n40)
채널	13 ch (802.11b/g/n 20MHz BW) 9 ch (802.11n 40MHz BW)
전파형식	GID (802.11b) / D2D (802.11g/n20/n40)
출력	10 mW/MHz (802.11b/g/n 20MHz BW) 5 mW/MHz (802.11n 40MHz BW)



기자재 명칭(모델명): 특정소출력 무선기기(무선데이터통신시스템용 무선기기)
(DTU110)

인증번호: MSIP-CMM-TSD-DTU1

인증 받은 자의 상호: TOSHIBA CORPORATION

제조년월일:

제조사/제조국가: TOSHIBA CORPORATION / 일본, 중국, 필리핀

이 기자재는 가정용(B급) 전자파적합기기로서 주로 가정에서 사용하는
것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

해당 무선설비는 전파혼신가능성이 있으므로
인명안전과 관련된 서비스는 할 수 없음

<경고> 발열, 화재, 폭발 등의 위험을 수반할 수 있으니 다음 사항을 지켜주시기 바랍니다.

- a) 욕안으로 식별이 가능할 정도의 부풀음이 발생한 전지는 위험할 수 있으므로, 제조자 또는 판매자에게 즉시 문의 할 것
- b) 지정된 정품 충전기만을 사용할 것
- c) 화기에 가까이 하지 말 것 (전자레인지에 넣지 말 것)
- d) 여름철 자동차 내부에 방치하지 말 것
- e) 찜질방 등 고온다습한 곳에서 보관, 사용하지 말 것
- f) 이불, 전기장판, 카펫 위에 올려놓고 장시간 사용하지 말 것
- g) 전원을 켜 상태로 밀폐된 공간에 장시간 보관하지 말 것
- h) 전지 단자에 목걸이, 동전, 열쇠, 시계 등 금속 제품이 닿지 않도록 주의할 것
- i) 휴대기기, 제조 업체가 보증한 리튬 2차 전지를 사용할 것
- j) 분해, 압착, 관통 등의 행위를 하지 말 것
- k) 높은 곳에서 떨어뜨리는 등 비정상적 충격을 주지 말 것
- l) 60°C 이상의 고온에 노출하지 말 것
- m) 습기에 접촉되지 않도록 할 것
- n) 충전 방법에 대한 권고
 - 1. 충전 시 주변 온도는 5°C~35°C의 범위에서 충전해 주십시오.
 - 2. 역충전 시에는 전지의 (+)(-) 극성이 역전되어 보호 회로 및 전지가 파손될 수 있으므로, 절대로 금지해 주십시오.
 - 3. 만약 48°C 이상의 고열이 나면 즉시 충전 및 방전을 중지하고 전지를 단말기 및 충전기와 분리 후, 당사로 문의해 주십시오.
 - 4. 전지의 충전은 전용 충전기를 사용하고, 지정된 충전 조건으로 충전해 주십시오.
 - 5. 충전 전류 및 전압은 제품에 지정된 최대 충전 전류 및 전압보다 작아야 합니다.
 - 6. 충전 시간은 적정하게 제어되어야 합니다.
- o) 폐기 지침
 - 1. 다 쓴 배터리는 함부로 버리지 마십시오.
 - 2. 배터리를 폐기할 경우, 소각 및 불 속에 버리지 마십시오. 열로 인해 폭발 및 화재가 발생할 수 있습니다.
 - 3. 배터리는 집안 쓰레기들과 같이 버리지 말아 주십시오. 재활용으로 분리 배출하십시오.
 - 4. 2차 단전지나 전지를 폐기할 때에는 서로 다른 전기 화학 시스템을 가진 단전지나 전지를 서로 격리해 주십시오.
 - 5. 단락으로 인한 전지의 발열을 방지하기 위하여 방전 상태로 폐기하여 주십시오.

제품 폐기

이 제품은 가정용 폐기물과 같이 처리되어서는 안됩니다. 본 제품을 올바르게 폐기함으로써 환경과 건강에 영향을 끼칠 수 있는 잠재적 부정적 요소를 방지하는 데 도움을 줄 것이며, 반대의 경우에는 그렇지 않음을 나타냅니다.

제품을 파기할 때는 지방자치단체의 조례 규칙에 따라 폐기하시기 바랍니다.

배터리 및/또는 축전지의 폐기

배터리와/또는 축전지는 가정용 폐기물과 분리 처리와 수집되어야 합니다. 배터리 분리수거에 동참하는 것은, 제품의 적절한 폐기를 확실하게 함으로써 환경과 건강에 영향을 끼칠 수 있는 잠재적인 부정적 결과를 방지하는 데 도움을 줄 것입니다.

제품을 파기할 때는 지방자치단체의 조례 규칙에 따라 폐기하시기 바랍니다.

안전 사항 아이콘

이 설명서에는 개인의 부상, 장비 손상, 또는 데이터의 손실이 생길 수 있는 잠재적 위험을 방지하기 위해 준수해야 할 안전 지침이 포함되어 있습니다. 이러한 안전 주의 사항은 위험의 심각성에 따라 분류하고, 다음과 같은 아이콘으로 강조합니다:

표시	의미
 위험	절박한 위험 상황에서 피하지 않을 경우, 사망이나 심각한 부상의 위험이 발생할 수 있음을 나타냅니다.
 경고	잠재적인 위험 상황에서 피하지 않을 경우, 사망이나 심각한 부상의 위험이 발생할 수 있음을 나타냅니다.
 주의	잠재적인 위험 상황에서 피하지 않을 경우, 경미한 신체적 부상이 발생할 수 있음을 나타냅니다.
주의 사항	재산 피해 및 기타 문제는 있을 수 있으나, 신체적 상해는 없음을 나타냅니다.
참고	중요한 정보 제공

*심각한 부상은 영구적이거나 입원 및/또는 장기적인 병원 치료를 요구하는 실명, 상처, 화상 (저온 및 고온), 감전, 골절 및 중독 현상 등을 포함합니다.

*경미한 신체적 부상은 입원 및/또는 장기적 병원 치료를 요구하지 않는 상처, 화상, 감전 등을 포함합니다.

*재산 피해는 드라이브 손상을 의미합니다.

사용된 다른 아이콘

추가 아이콘은 도움이 되거나 교육적 정보를 강조합니다:

	테크니컬 참고: 이 아이콘은 장치에 대한 기술 정보를 나타냅니다.
	힌트: 이 아이콘은 힌트와 조언을 나타냅니다.
	정의: 이 아이콘은 텍스트에 사용되는 용어의 정의를 나타냅니다.

배터리 안전 주의사항



위험

물, 음료수 또는 기타 용액과 같은 액체에 장치 (내부 배터리가 있는 상태)를 담그지 마십시오.

배터리 (보호회로 포함된 상태)는 예기치 않은 전기 과부하로 인해 화재, 연기, 폭발 또는 발열 사고의 원인이 될 수 있습니다.



위험

장치 (내부 배터리가 있는 상태)를 열과 화기로부터 멀리 두십시오.

열은 배터리가 손상하고 발열, 연기, 발화, 또는 폭발 원인이 될 수 있습니다.



위험

장치와 내부 배터리를 분해하지 마십시오.

분해 및 개조는 배터리 보호회로가 손상할 수 있습니다. 이 때문에 배터리가 발열, 연기, 발화 또는 폭발 원인이 될 수 있습니다.



경고

어린이 손이 닿지 않는 곳에 제품을 보관하십시오. 제품이 부서지거나 균열이 있는 경우, 배터리와 다른 구성 부품을 어린이가 만지지 못하게 하십시오.

만약 배터리의 전해액 또는 다른 구성 부품을 삼킨 경우에는, 즉시 치료를 받아야 합니다.



경고

충전되지 않는 경우에는 충전을 중단하십시오.

명시된 시간 내에 충전되지 않을 경우에도 충전을 중단하십시오. 배터리가 발열, 연기, 발화 또는 폭발될 수 있습니다.



경고

드라이브에는 충전용 배터리가 내장되어 있습니다. 사용한 배터리를 가정용 폐기물과 함께 버리지 마십시오.

제품을 파기할 때는 지방자치단체의 조례 규칙에 따라 폐기하십시오. 사용한 배터리를 가정용 폐기물과 함께 버리는 경우, 쓰레기 수거함이 불이 붙거나 연기가 발생할 가능성이 있습니다.



경고

다음 현상과 같은 특이사항이 발생한 경우, 즉시 전원을 끄고 플러그 소켓에 연결된 전원 케이블/코드 플러그를 뽑고 배터리 사용을 중단하십시오: 강하고 이상한 냄새 / 과열 / 변색 / 형태의 변형, 균열 또는 누출 / 연기 / 사용하는 동안 기타 이상 증상, 특이한 소음. 이럴 때에는 다시 드라이브 전원을 켜지 마십시오. 계속 사용하면 데이터 손실에 한정되지 않는 드라이브 파손 또는 심각한 부상을 초래할 수 있는 화재 또는 파열의 원인이 됩니다.



경고

만약 드라이브에 누액이 발생하거나 케이스가 깨진 경우, 보호 장갑을 착용한 후에 취급하십시오.

⚠ 주의

5° C ~ 35° C 사이에서만 배터리를 충전하십시오. 이 범위를 벗어난 온도에서 충전하면 배터리의 누액, 발열 또는 심각한 손상을 초래할 수 있는 원인이 됩니다. 또한, 배터리의 성능과 수명이 저하될 수 있는 원인이 됩니다.

⚠ 주의

실제 배터리의 수명은 설정, 응용프로그램 사용, 기능 또는 선택 작업, 네트워크의 상태, 동작 온도와 다양한 요인에 따라 서로 다를 수 있습니다. 충전 시간은 사용 방법에 따라 달라집니다. 드라이브가 모든 전력을 사용할 경우 배터리 충전이 되지 않을 수 있습니다. 시간이 지남에 따라, 배터리는 최대 용량을 발휘하지 못할 수도 있습니다. 이것은 모든 배터리에서 발생하는 현상으로 정상적입니다.

전원 및 기타 안전 주의사항

⚠ 경고

플라스틱 커버나 전기 플러그와 같은 부품은 어린이나 애완동물 주위에 두지 마십시오. 부품을 포함한 오용, 제한되지 않고 부품을 삼키는 사고는 질식 및 질식의 결과로 사망이나 심각한 부상을 일으키는 원인이 될 수 있습니다. 부품을 삼켰다고 의심되면, 즉시 적절한 응급처치와 함께 의사의 진단을 받으십시오.

⚠ 경고

흔들리는 테이블, 요철, 수평이 맞지 않는 기울어지거나 안정적이지 못한 곳에 드라이브를 두지 마십시오. 드라이브가 떨어질 수 있으며, 그로 인해 드라이브가 손상되거나 다칠 수 있습니다.

⚠ 경고

감전 또는 화재의 위험이 있고 개인 부상의 원인으로 이어질 수 있으므로, 부적절한 유지보수 또는 개조하지 마십시오.

⚠ 경고

감전과 화재의 위험이 있으므로, 드라이브를 습기나 물기가 많은 곳에 노출하지 마십시오.

⚠ 경고

드라이브에 나사, 스테이플 또는 종이용 클립과 같은 액체 또는 금속물질이 들어가지 않도록 하십시오. 이물질은 회로 쇼트를 발생시켜, 제품 손상 및 화재의 원인이 되거나, 또는 심각한 부상을 가져올 수 있습니다.

⚠ 경고

금속 부품이나 플라스틱 부품에 이상이 있을 때에는, 감전의 원인이 될 수 있으므로 드라이브를 사용하지 마십시오.

⚠ 경고

드라이브를 떨어뜨리거나 손상된 경우에는, 감전의 위험이 있으므로 드라이브를 사용하지 마십시오.

경고

제품에서 이상한 냄새, 과열 또는 연기가 발생하는 경우, 즉시 드라이브의 전원을 끄고 콘센트에서 전원 코드를 뽑고 장치에서 USB 케이블을 뽑아주십시오. 그렇지 않으면, 화재, 드라이브 손상, 화상 및 감전과 같은 부상의 원인이 될 수 있습니다. 이럴 때에는 드라이브를 다시 사용하지 마십시오. 제품 구입처에 문의하여 주십시오.

경고

기기의 규제 라벨에 명시된 볼트, 전류 및 주파수에 일치하지 않는 전원으로 AC 어댑터를 연결하지 마십시오. 소켓 및/또는 AC 어댑터의 과부하로 인해 화재 또는 감전이 발생할 수 있으며, 이 때문에 심각한 부상을 초래할 수 있습니다.

경고

전원 콘센트에서 플러그를 빼기 위해 전원 케이블/코드를 당겨 뽑지 마십시오. 항상 직접 플러그를 잡고 뽑으십시오. 전원 케이블/코드를 잡아당겨 뽑으면 화재 또는 감전과 심각한 부상으로 골절의 원인이 될 수 있습니다.

경고

안전한 전기 연결을 보장하기 위해, 항상 전원 플러그가 콘센트 안에 올바르게 꽂혀 있는지 확인하십시오. 소켓에 과부하가 생기면 화재 또는 감전으로 인해, 심각한 부상을 초래할 수 있습니다.

경고

AC 어댑터가 전원 콘센트에 연결되어 있을 때에는, 항상 드라이브와 AC 어댑터에 적절한 환기를 통해 과열로부터 보호되어야 합니다. 부적절한 환기는 드라이브와 AC 어댑터의 과열을 가져올 수 있으며, 화재 또는 감전으로 인해, 심각한 부상을 초래할 수 있습니다.

경고

전원 플러그 커넥터나 커넥터 베이스에 먼지가 끼면, 전원을 끄고 전기 플러그를 뽑아 주십시오. 부드럽고 마른 천으로 커넥터 및/또는 커넥터 베이스를 청소하십시오. 그렇지 않으면 화재 또는 감전으로 인해, 심각한 부상을 초래할 수 있습니다.

경고

드라이브와 피부 접촉을 피해 주십시오. 드라이브가 매우 뜨거울 수 있습니다! 피부 자극 및/또는 고온으로 인한 부상을 방지하기 위해 오랫동안 접촉하지 마십시오.

경고

AC 어댑터와의 피부 접촉을 피해 주십시오. AC 어댑터가 매우 뜨거울 수 있습니다! 피부 자극 및/또는 고온으로 인한 부상을 방지하기 위해 오랫동안 접촉하지 마십시오.

주의 사항

데이터 손실이나 드라이브 손상이 발생할 수 있으므로, 작동 중에 USB 케이블과 AC 어댑터를 뽑지 마십시오.

주의 사항

데이터 손실이나 드라이브 손상이 발생할 수 있으므로, AC 어댑터가 작동하는 동안에 USB 케이블을 만지지 마십시오.

주의 사항

데이터 손실이나 드라이브 손상이 발생할 수 있으므로, 드라이브를 부딪치거나, 떨어뜨리거나 돌리지 마십시오.

주의 사항

높거나 낮은 온도 또는 급격한 온도 변화에서 드라이브를 사용하지 마십시오. 데이터 손실이나 드라이브 손상이 발생할 수 있습니다. (적정 사용 온도: 5°C~35°C)

주의 사항

되도록 드라이브에 있는 모든 데이터를 다른 저장 드라이브에 백업해 두십시오.

주의 사항

데이터 손실이나 드라이브 손상이 발생할 수 있으므로, 드라이브를 결로 현상이 있는 곳에서 사용하지 마십시오.

주의 사항

과열될 수 있으므로, 작동 중에 드라이브를 다른 물체로 덮지 마십시오.

주의 사항

뇌우 시에는 드라이브를 사용하지 마십시오. 번개가 치거나 천둥소리가 들리면, 즉시 이 드라이브에 연결된 컴퓨터와 주변기기의 전원을 끄고, 콘센트에서 전원코드를 뽑고, 컴퓨터에서 USB 케이블을 뽑아 주십시오. 번개에 의한 전기적 서지는 데이터 손실과 드라이브에 손상을 줄 수 있습니다.

주의 사항

화학약품을 사용하여 드라이브 또는 액세서리를 청소하지 마십시오. 드라이브 외부 또는 액세서리를 청소하려면, 부드럽고 마른 천을 사용해 주십시오. 화학약품의 사용은 해당 제품의 기능 저하, 변형 또는 변색과 데이터 손실이 발생할 수 있습니다.

참고

호환성은 사용자의 하드웨어 구성과 운영체제 (OS)에 따라 서로 달라질 수 있습니다.

참고

USB 3.0 은 USB 2.0 과 호환됩니다.

참고

드라이브에 충분한 전원이 공급되지 않으면, 드라이브는 작동하지 않습니다.

참고

컴퓨터에 USB3.0 포트가 없으면 USB3.0 Express Card 호스트 컨트롤러가 필요할 수 있습니다. 또한, 컴퓨터의 USB2.0 포트에 드라이브를 연결할 수 있습니다. 그러나 전송률은 USB2.0 으로 낮아지게 됩니다.

참고

1 기가바이트 (1GB)는 $10^9 = 1,000,000,000$ 바이트를 뜻하며, 1 테라바이트 (1TB)는 $10^{12} = 1,000,000,000,000$ 바이트를 의미하며 10의 승수를 사용하여 표현합니다. 하지만 컴퓨터의 운영체제는, 2의 승수를 사용하여 저장 용량이 표시되어 $1GB = 2^{30} = 1,073,741,824$ 바이트를 뜻하며, $1TB = 2^{40} = 1,099,511,627,776$ 바이트로 정의되어, 저장 용량이 조금 더 작게 표시됩니다. 사용 가능한 저장 용량은 (예를 들어 다양한 미디어 파일 포함) 파일 크기, 포맷, 설정, 소프트웨어와 운영체제뿐만 아니라 기타 요소들에 의해 다를 수 있습니다.

참고

제조사에서 제공하는 액세서리만 사용하십시오.

참고

이 드라이브는 제조사에서 제공하는 AC 어댑터의 전원 공급이 필요합니다.

참고

제품 사양은 예고 없이 변경될 수 있습니다.

안전 사항 정보, 규칙 및 무선 LAN 에 관한 규정

⚠ 주의

무선 LAN 장치는 심장박동기와 같은 의료기기에 전파간섭을 일으킬 수 있습니다. 만약 개인용 의료기기를 사용하는 경우, 제품을 사용하기 전에 의료기기 사용법을 숙지하고 전문의와 상담하시기 바랍니다. 이 제품은 의료기기에 영향을 끼칠 수 있으므로 병원과 진료소 등과 같이 의료기기가 있거나, 개인 의료기기의 사용자 근처와 같은 환경에서 사용해서는 안 됩니다.

⚠ 주의

컴퓨터는 자동문, 화재감지기 등과 같은 자동제어장치 또는 어플라이언스 근처에서는 항상 무선 기능을 꺼주십시오. 무선 전파에 의해 이러한 장치의 고장 원인이 될 수 있고, 손상을 가져올 수 있습니다.

참고

전자레인지 근처 또는 전파장에 또는 자기장에 노출된 구역에서는 무선 LAN 기능을 사용하지 마십시오. 전자레인지 또는 다른 원인에 의한 간섭은 무선 LAN 기능에 방해할 줄 수 있습니다.

참고

무선 LAN을 수신할 수 있는 무선 LAN의 전송 속도 및 거리는 주변 전자파의 환경, 방해물, 액세스 지점 설계와 구성, 클라이언트 설계와 소프트웨어/하드웨어 구성에 따라 서로 달라질 수 있습니다. 설명된 전송률은 적정 기준 아래에서의 명시된 이론적인 최대 속도이며 - 실제 전송 속도는 이론적 최대 속도보다 느릴 수 있습니다.

책임의 한계

- Toshiba는 데이터의 변형이나 손실에 대해 어떠한 책임을 지지 않습니다. **(Toshiba는 데이터 복구를 제공하지 않습니다.)**
- Toshiba는 사용자의 부주의 또는 어떠한 손상에도 기인하는 실패, 화재, 지진, 또는 기타 Toshiba의 불가항력 사고에 대해 어떠한 책임도 지지 않습니다.
- Toshiba는 사용자 설명서에 언급된 기재 내용을 따르지 않아 발생한 어떠한 부분에 대해서도 책임지지 않습니다.
- Toshiba는 연결 장치와 소프트웨어의 남용에 따른, 어떠한 책임도 지지 않습니다.
- 이 제품에 대한 지원은 제품을 최초 구매한 국가에서만 유효합니다.

사용 제한

이 드라이브의 사용 기준은 사무, 개인 드라이브 및 가전제품 용도로 적용됩니다. Toshiba Corporation은 이러한 사용 용도 이외에 대해서는 법적 책임을 지지 않습니다. 이 제품을 특별한 용도 (원자력 제어, 항공 또는 우주 시스템, 대형교통수단 운영제어, 생명유지 장치용 의료기기, 또는 무기발사제어 등) 사용에 있어 높은 품질과 신뢰성이 요구되고, 안전에 대한 적절한 수준을 보장할 수 없거나, 고장 또는 오작동에 인해 생명이나 신체의 위협을 받을 수 있는 곳에서는 사용하지 마십시오.

주의 사항

이 사용설명서에 포함된 정보를 포함하여, 어떤 제품 사양에 국한되지 않고 예고 없이 변경될 수 있습니다.

TOSHIBA는 이 설명서 또는 여기에 포함된 어떠한 정보와 관련하여 보증하지 않으며 명백하게 상기에 관해 상업성이나 특정 목적을 위한 적합성의 묵시적 보증을 하지 않습니다. TOSHIBA는 제품과 설명서와의 불일치 또는 본 문서에 포함된 기술적이나 인쇄의 오류와 누락으로 직간접적으로 발생한 모든 손해에 대해 책임을 지지 않습니다. 어떠한 경우에도 TOSHIBA는 본 설명서나 여기에 포함된 어떠한 정보 또는 그것을 사용하면서 관련되거나 발생하는 부수적 결과적 특별한 또는 징벌적인 손해에 대해 불법행위, 계약에 따른 것인지 아닌지에 상관없이 책임을 지지 않습니다.

GNU General Public License ("GPL")

이 제품의 통합 펌웨어는 타사 저작권 GPL 또는 약소 일반 공중 사용 허가서 ("LGPL")에 따라 허가된 소프트웨어 (이하, "GPL Software")가 아니라 TOSHIBA의 최종 사용자 사용권 계약을 포함할 수 있습니다. 해당 라이선스의 사본은 <http://www.support.toshiba.com>에서 얻을 수 있습니다. GPL Software 대해 전적으로 관련 법률이 허용된 범위까지 어떠한 보증도 하지 않습니다. GPL Software의 변경이나 임의의 조작은 전적으로 사용자의 책임이며 제품 보증은 무효입니다. Toshiba는 어떠한 수정이나 무단 변경에 대한 책임을 지지 않습니다. Toshiba는 Toshiba가 제공한 GPL Software를 수정을 시도하거나 수정한 제품에 대해서는 지원하지 않습니다.

저작권

이 설명서는 Toshiba의 사전 서면 허가 없이 어떠한 형태로도 복제할 수 없습니다. 이 설명서에 포함된 정보 사용에 대하여 어떠한 책임을 지지 않습니다.

© 2018 TOSHIBA ELECTRONIC DEVICES & STORAGE CORPORATION, All Rights Reserved.

상표

CANVIO AeroCast는 Toshiba Electronic Devices & Storage Corporation 및/또는 해당 계열사, Toshiba Electronic Devices & Storage Corporation의 상표입니다.

Android, Google Play, 및 Chromecast는 Google Inc.의 상표입니다.

Mac, OS X, iPad, iPhone 및 Time Machine은 미국 및 기타 국가에서 등록된 Apple Inc.의 상표입니다.

IOS는 Cisco의 미국 및 기타 국가에서의 상표 또는 등록상표이며 라이선스에 따라 사용되고 있습니다.

App Store는 Apple Inc.의 서비스 마크입니다.

DLNA는 디지털 리빙 네트워크 얼라이언스의 상표 또는 등록 상표입니다.

Wi-Fi는 Wi-Fi Alliance®의 등록상표입니다.

Windows는 미국 및/또는 기타 국가에서 Microsoft Corporation의 등록상표이거나 상표입니다.

기타 모든 회사와 제품명은 각 해당 회사의 상표 또는 등록상표입니다.

목차

소개	14
개요	14
부속품	14
특징	14
하드웨어 사양	14
소프트웨어 사양	15
1 장 시작하기	16
CANVIO AeroCast™ 무선 하드 드라이브 충전하기	16
CANVIO AeroCast™에 연결	17
USB 를 통한 연결	17
무선 연결	18
2 장 CANVIO AeroCast™ 무선 하드 드라이브 소프트웨어 유틸리티	20
시스템 로그인	20
Windows® PC/Mac 에 무선 연결	20
iPhone 또는 iPad 용 클라이언트 로그인	21
Android™ 용 클라이언트 로그인	22
주요 인터페이스	22
애플리케이션의 주요 인터페이스	23
이미지 관리 인터페이스	25
이미지 뷰어 인터페이스	27
동영상 관리 인터페이스	28
동영상 재생 인터페이스 (iPhone, iPad 및 Android™ 장치만 해당)	30
음악 관리 인터페이스	32
뮤직 플레이어 인터페이스 (iPhone, iPad 및 Android™ 장치만 해당)	34
문서 관리 인터페이스	36
문서 뷰어 인터페이스 (iPhone, iPad 및 Android™ 장치만 해당)	38
파일/폴더 관리 인터페이스	39
파일 전송	41

3 장	백업 관리	42
	백업 관리 기능 사용하기	42
	수동 백업	42
	자동 백업	43
4 장	설정 관리	44
	무선 LAN 설정	44
	작동	45
	정보	46
	사용자 부호 및 이름	47
	인터넷 설정	48
	브릿지 모드에서 인터넷 연결	48
	Chromecast™ 장치를 통한 인터넷 연결	51
	언어	55
	캐시	55
	OSS 정보	56
	TOSHIBA 지원	56
	색인	57

소개

개요

CANVIO AeroCast™ 무선 하드 드라이브는 무선으로 음악, 동영상, 사진과 데이터를 액세스할 수 있습니다. 복잡한 케이블 또는 전선에 대한 걱정 없이, iPad, iPhone, 태블릿, 스마트폰과 노트북에 파일을 스트리밍 할 수 있습니다. 저장 공간이 1 테라바이트로, 모바일 장치에서 파일을 전송할 수 있는 충분한 공간이 있습니다. 탑재된 USB 3.0 포트는 파일을 더 빠르게 전송합니다.

부속품

CANVIO AeroCast™ 무선 하드 드라이브에는 다음과 같은 부속품이 포함되어 있습니다:

- AC 어댑터
- USB 3.0 케이블
- 빠른 시작 가이드

특징

- NTFS 포맷 방식의 내장형 1TB HDD 스토리지.
- 부속의 USB 3.0 케이블을 사용하거나 무선을 통해 연결.
- iPhone, iPad 및 Android™ OS 를 지원하는 무료 Toshiba Wireless HDD 애플리케이션을 사용하여, 음악, 동영상, 사진을 액세스와 스트리밍.
- 동영상 스트리밍 상태에서 최대 5 시간 지속하는 배터리 수명. 배터리 수명은 사용자 환경에 따라 다를 수 있음.
- 파일 구성을 유지할 수 있도록 4 개의 사용자 프로파일을 사용.
- 802.11 b/g/n 지원으로, 무선을 통해 인터넷 액세스.
- SD/SDHC/SDXC 메모리 카드 지원 및 Class 10 과 호환됩니다.
"Toshiba Wireless HDD" 애플리케이션 웹사이트에서 지원되는 SDXC 버전을 확인하여 주십시오.

하드웨어 사양

제품 크기:	121.4mm (길이) x 86mm (폭) x 24.4mm (높이)
무게:	약 280g
배터리:	충전 시간: 최대 3 시간

환경 요구 사항:		
무선 LAN		
	표준:	802.11 b/g/n
	주파수:	2.4 GHz
	속도:	1T1R 150Mbps 이상
적정 사용		
	온도:	5~35° C (41~95° F)
	저장:	-20~40° C (-4~104° F)
적정		
	사용 습도:	20~80%
	저장:	8~90%

소프트웨어 사양

지원되는 파일 형식:	
동영상:	mp4, m4v, mov
음악:	mp3, m4a, aac, wav
사진:	jpg, bmp, png, gif, tif
문서:	pdf, doc, docx, ppt, pptx, xls, xlsx, txt, rtf
시스템 요구 사항:	
작동 시스템	
Windows®:	Windows® 7 (32bit & 64bit), Windows® 8.1 (32bit & 64bit)
OS X:	OS X v10.7, v10.8, v10.9, v10.10
iPhone 또는 iPad 작동 시스템:	Android™ 및 iOS 스마트폰 또는 태블릿 지원. "Toshiba Wireless HDD" 애플리케이션 웹사이트에서 지원되는 버전을 확인하여 주십시오.
Android™:	

참고


이 드라이브는 Windows®용 NTFS로 포맷되어 있습니다. Windows® PC와 Mac을 모두 사용하는 경우, Mac에 "Tuxera NTFS for Mac"을 설치함으로써, 사용자는 Windows® PC 및 Mac 모두에서 데이터를 읽고 쓰기를 할 수 있습니다. 그러나 이런 경우, OS X의 Time Machine 기능을 사용할 수 없습니다.

1 장

시작하기

CANVIO AeroCast™ 무선 하드 드라이브 충전하기

CANVIO AeroCast™ 사용하려면, 장치가 충전되어 있는지를 확인하십시오.
CANVIO AeroCast™ 무선 하드 드라이브는 AC 어댑터 및 USB 케이블을 통해 충전할 수 있습니다.

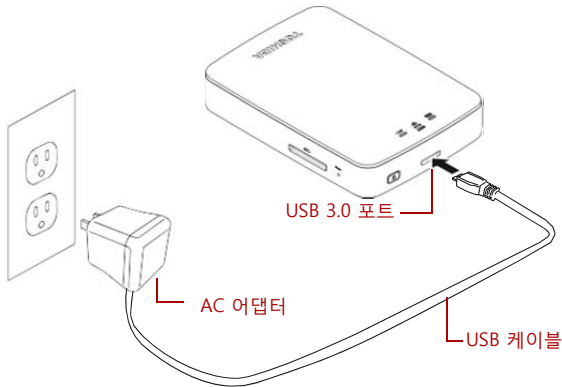

(그림 예) CANVIO AeroCast™ 무선 하드 드라이브 충전

CANVIO AeroCast™ 무선 하드 드라이브를 충전하려면:

1. AC 어댑터에 USB 케이블을 연결하십시오.
2. CANVIO AeroCast™ 무선 하드 드라이브의 USB 3.0 호스트 포트에 USB 케이블을 연결하십시오.
3. 사용 중인 전기 콘센트에 AC 어댑터를 꽂으십시오.

충전하는 동안, 배터리 표시등이 천천히 깜박입니다. (간격 시간은 2 초)

CANVIO AeroCast™에 연결


부속의 USB 케이블 (DAS 모드, 직접 연결 저장 모드)로 직접 CANVIO AeroCast™에 연결하거나 무선 (무선 LAN 모드)에 연결할 수 있습니다.

USB 를 통한 연결

USB 를 통해 조작하려면, 부속의 USB 케이블을 사용하여 PC 의 USB 포트에 CANVIO AeroCast™ 무선 하드 드라이브를 연결하십시오.

Mac 사용자:

USB 를 통해 파일을 쓰려면, Mac 에 "NTFS driver for Mac"를 설치가 필요합니다. CANVIO AeroCast™ 무선 하드 드라이브에 저장된 사전 설치 설명서를 참조하십시오.

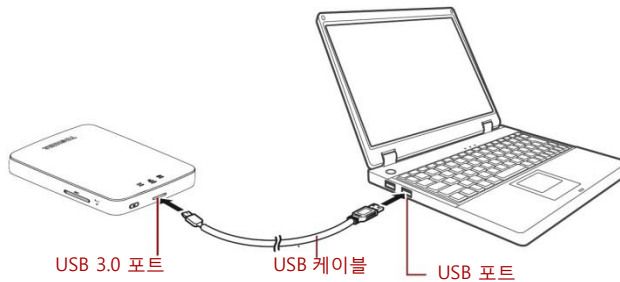

(그림 예) USB 를 통한 연결

PC 에 CANVIO AeroCast™를 연결하려면:

1. CANVIO AeroCast™ 무선 하드 드라이브가 꺼져 있는지를 확인하십시오.
2. CANVIO AeroCast™ 무선 하드 드라이브에 포함된 USB 3.0 케이블을 연결하십시오.
3. Windows® 퍼스널 컴퓨터의 USB 포트에 USB 3.0 케이블의 다른 쪽을 연결하십시오.

제품에서 혹은 제품으로 데이터 전송을 시작할 수 있습니다.

무선 연결


CANVIO AeroCast™에 연결하여 Windows®, Mac, iPhone, iPad, Android™ 모바일 장치 및 DLNA® 장치에서 CANVIO AeroCast™ 무선 하드 드라이브에 액세스할 수 있습니다.

“Toshiba Wireless HDD” 애플리케이션 웹사이트에서 지원되는 DLNA® 버전을 확인하여 주십시오.



(이미지 예) 무선 LAN 모드

일단 연결이 설정되면 CANVIO AeroCast™ 무선 하드 드라이브는 무선 LAN 모드에서 자동으로 기능하며, 자세한 사항은 [20 페이지 “Windows® PC/Mac 에 무선 연결”](#)을 참조하십시오.

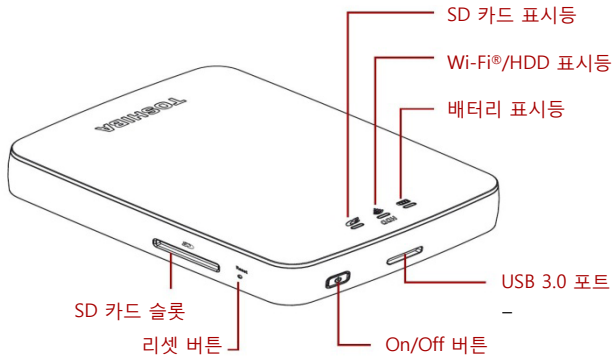

(그림 예) 포트, 버튼 및 표시기

SD 카드 슬롯:

- SD/SDHC/SDXC 메모리 카드 지원 및 Class 10 과 호환됩니다.
“Toshiba Wireless HDD” 애플리케이션 웹사이트에서 지원되는 SDXC 버전을 확인하여 주십시오.
- 무선 LAN 모드에서, SD 카드에 액세스할 수 있습니다.

리셋 버튼:

- 무선 LAN 모드에서, 5 초 동안 누르십시오. 시스템은 공장 출하 설정으로 복원됩니다.

On/Off 버튼:

- 2 초 이상 누르십시오: 무선 LAN 모드가 켜집니다.
- 2 초 이상 다시 누르십시오: 무선 LAN 모드가 꺼집니다.

참고

배터리가 너무 낮으면, CANVIO AeroCast™ 무선 하드 드라이브를 켤 수가 없습니다. 배터리 표시기가 오렌지 색 상태에서 6 초 동안 깜박하고, 전원이 꺼집니다.

USB 3.0 포트:

- USB 3.0 과 USB 2.0 은 호환됩니다.
- 연결되었을 때, PC 와 CANVIO AeroCast™ 무선 하드 드라이브 사이에서 데이터 전송을 할 수 있습니다.
- AC 어댑터에 연결되면 제품 배터리를 충전할 수 있습니다.

배터리 표시등:

- 녹색: 30% 이상의 잔량이 있는 배터리 전원.
- 노란색: 10% ~ 30% 잔량의 배터리 전원.
- 오렌지색 (빠른 깜박임): 제품의 배터리 전원이 없거나 작동 온도가 너무 높습니다. 제품이 30 초 후에 꺼집니다.
- 녹색 또는 노란색 (느린 깜박임): 배터리 충전 중입니다.
- 녹색 (깜박이지 않음): 충전 완료
- 녹색 또는 노란색 (빠른 깜박임): 제품이 꺼지거나 켜집니다.
- LED 꺼짐: 장치 전원이 꺼져 있습니다.

무선 LAN/HDD 표시기:

- **무선 LAN 모드**
 - 파란색: 무선 LAN 이 켜져 있습니다. (데이터 액세스가 없음)
 - 파란색 (깜박임): 무선 LAN 이 켜져 있습니다. (스토리지 액세스가 있음)
 - 파란색 (꺼짐): 무선 LAN 이 꺼져 있습니다.
- **USB 모드**
 - 흰색: 데이터 액세스가 없습니다.
 - 흰색 (깜박임): 데이터 액세스를 할 수 있습니다.
 - 흰색 (꺼짐): 장치가 절전 또는 대기 모드입니다. 장치를 분리하는 것이 안전합니다.

SD 카드 표시기:

- **무선 LAN 모드에서만 빛납니다.**
 - 보라색: SD 카드가 액세스되지 않았습니다.
 - 보라색 (깜박임): SD 카드를 액세스할 수 있습니다.
 - 보라색 (꺼짐): SD 카드가 대기 모드 상태입니다.

2 장

CANVIO AeroCast™ 무선 하드 드라이브 소프트웨어 유틸리티

시스템 로그인


Windows® PC/Mac 에 무선 연결

1. **ON/OFF** 버튼을 눌러 시스템 전원을 켜십시오.
2. Wi-Fi® 표시등 깜박임이 정지되면, Windows® PC/Mac 에서 무선 LAN 기능을 사용할 수 있고 무선 네트워크 연결을 할 수 있습니다.
3. **Toshiba whdd xxxx** 무선 연결을 선택하고 (xxxx 는 CANVIO AeroCast™ 장치에 의해 생성된 4 자리 숫자 (기본값 무선 SSID: **Toshiba whdd xxxx**), 그런후에 기본값 비밀번호 **12345678** 을 입력하십시오.
제품을 처음 사용할 때 기본 패스워드 (default password)를 즉시 변경하여 주십시오.
4. CANVIO AeroCast™ 무선 하드 드라이브를 현재 네트워크에 연결된 장치에 액세스할 수 있습니다.

Windows® PC 에 무선으로 파일 복사

드라이브가 네트워크 연결 후에는 Windows® PC 에 CANVIO AeroCast™ 무선 하드 드라이브에 파일을 무선 전송할 수 있습니다.

1. Windows® PC 에서 드라이브를 네트워크 연결하려면, **Computer** 를 클릭 또는 터치하고, **Map Network Drive** 를 클릭 또는 터치하십시오.

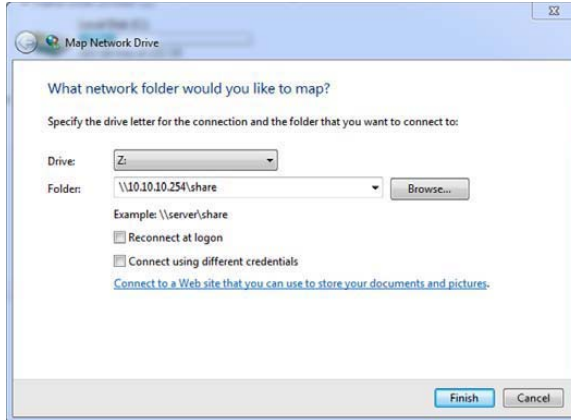

(이미지 예) Map Network Drive 화면

2. 드롭 다운 메뉴 “Drive” 에서 문자를 선택하십시오.
3. “Folder” 필드에서, **\\10.10.10.254\share** 을 입력하고, **Finish** 를 클릭하고 터치하십시오.

Windows® PC 의 “My Computer” 화면에서 CANVIO AeroCast™ 무선 하드 드라이브를 바로 볼 수 있습니다.

Mac 에 무선으로 파일 복사

Mac 에서의 CANVIO AeroCast™ 무선 하드 드라이브는 자동으로 네트워크 드라이브로 표시됩니다. 간단하게 드래그 앤 드롭하여 원하는 곳으로 파일을 전송할 수 있습니다.

빠른 파일 전송을 위해 USB 케이블을 사용하십시오. 더 자세한 정보는, [17 페이지 “USB 를 통한 연결”](#) 을 참조하십시오.

iPhone 또는 iPad 용 클라이언트 로그인

iPhone 과 iPad 용 애플리케이션 설치

1. App Store 에서, Toshiba Wireless HDD 애플리케이션을 검색하고 찾으십시오.
2. **Toshiba Wireless HDD** 애플리케이션을 설치하고 화면의 설치 지침을 따르십시오.
3. 설치 과정이 끝나면 **Toshiba Wireless HDD** 아이콘이 바탕 화면에 나타납니다.

iPhone 또는 iPad 에 무선 연결하기

1. **ON/OFF** 버튼을 눌러 CANVIO AeroCast™ 전원을 켜십시오. Wi-Fi® 지시등의 깜박임이 정지할 때까지 기다리십시오.
2. iPad/iPhone 에서, **Setting** 을 클릭 또는 터치하고, **Wi-Fi** 를 클릭하고 터치하십시오.
3. **Toshiba whdd xxxx** 를 선택하십시오. (xxxx 는 CANVIO AeroCast™ 장치에 의해 생성된 4 자리 숫자)
4. 기본값 비밀번호 **12345678** 을 입력하십시오.
제품을 처음 사용할 때 기본 패스워드 (default password)를 즉시 변경하여 주십시오.

애플리케이션 로그인

“Toshiba Wireless HDD” 애플리케이션을 실행하십시오.

Android™ 용 클라이언트 로그인

Android™ 애플리케이션 설치

1. Google Play™ 에서, Toshiba Wireless HDD 애플리케이션을 검색하고 찾으십시오.
2. **Toshiba Wireless HDD** 애플리케이션을 설치하고 화면의 설치 지침을 따르십시오.
3. 설치 과정이 끝나면 **CANVIO AeroCast™** 아이콘이 바탕 화면에 나타납니다.

Android™ 장치에 무선 연결하기

1. **ON/OFF** 버튼을 눌러 CANVIO AeroCast™ 전원을 켜십시오. Wi-Fi® 지시등의 깜박임이 정지할 때까지 기다리십시오.
2. Wi-Fi® 표시등 깜박임이 정지되면, **Setting** 을 클릭 또는 터치하고, 태블릿 또는 스마트폰에서 **Wireless LAN** 옵션을 클릭하고 터치하십시오.
3. **Toshiba whdd xxxx** 를 선택하십시오. (xxxx 는 CANVIO AeroCast™ 장치에 의해 생성된 4 자리 숫자)
4. 기본값 비밀번호 **12345678** 을 입력하십시오.
제품을 처음 사용할 때 기본 패스워드 (default password)를 즉시 변경하여 주십시오.


애플리케이션 로그인

“Toshiba Wireless HDD” 애플리케이션을 실행하십시오.

주요 인터페이스


주요 인터페이스 화면이 표시될 경우, 애플리케이션은 업데이트할 수 있음을 알려 줄 것입니다. 다음의 3 가지 옵션을 사용할 수 있습니다:

- **OK** (업데이트 과정이 가능; 권장)
- **Cancel** (업데이트 과정이 취소)
- **Do not prompt** (미래의 알림을 중단; 권장하지 않음)

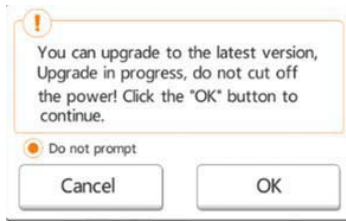

(이미지 예) 펌웨어 업데이트 화면

업데이트를 하기 위해 **OK** 를 선택하면, 시스템은 5 분 대기 를 알립니다.

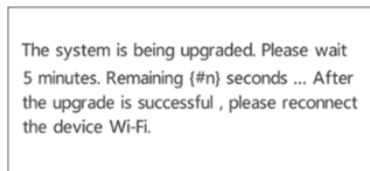

(이미지 예) 펌웨어 업데이트 - 5 분 대기 화면

Cancel 을 선택하면, 다음 로그인에 가능한 업그레이드들을 알려주고 주요 인터페이스에 들어갑니다

Do not prompt 를 선택하면, 애플리케이션은 자동으로 펌웨어 업그레이드에 대한 정보를 다시는 알려주지 않지만, 사용자가 수동으로 **Setting** 화면에서 펌웨어 업그레이드할 수 있습니다.

애플리케이션의 주요 인터페이스

아래는 iPhone, iPad, 또는 Android™ 애플리케이션에서 본 Toshiba Wireless HDD 주 화면의 예입니다.



태블릿/iPad



스마트폰/iPhone

(이미지 예) 주요 인터페이스 화면 - 애플리케이션

주요 인터페이스 기능

아래는 각 버튼/아이콘과 주요 인터페이스에서의 기능을 설명합니다:

버튼/아이콘	기능
 Pictures	이미지 관리 화면을 표시합니다.
 Videos	동영상 관리 화면을 표시합니다.
 Documents	문서 관리 화면을 표시합니다.
 Music	음악 관리 화면을 표시합니다.
 File/Folder	파일/폴더 관리 화면을 표시합니다.
 Backup	백업 관리 화면을 표시합니다. (iPhone, iPad 및 Android™ 장치만 해당) 42 페이지 “백업 관리”를 참조하십시오.
	Chromecast™ 장치를 선택하려면 클릭 또는 터치하십시오. (Chromecast™ 장치를 사용할 경우에만 사용할 수 있습니다.) 51 페이지 “Chromecast™ 장치를 통한 인터넷 연결”을 참조하십시오.
	Chromecast™ 장치를 분리하려면 클릭 또는 터치하십시오. (Chromecast™ 장치를 연결할 경우에만 사용할 수 있습니다.)
	CANVIO AeroCast™ 내부 HDD 스토리지로 전환하려면 HDD 버튼을 클릭 또는 터치하십시오.
	SD 카드 팝업 메뉴 기능을 표시하려면 SD Card 버튼을 클릭 또는 터치하십시오. 사용할 수 있는 기능은 “Detect SD Card”와 “Unmount SD Card”입니다.
	로컬 장치로 전환하려면 Local 버튼을 클릭 또는 터치하십시오. (iPhone, iPad 또는 Android™ 장치만 해당)
	SD 카드를 사용할 수 있습니다.
	SD 카드를 사용할 수 없습니다. SD 카드 팝업 메뉴 기능을 표시하려면 클릭 또는 터치하십시오. 사용할 수 있는 기능은 “Detect SD Card”와 “Unmount SD Card”입니다.
	인터넷 연결이 가능합니다. 인터넷 설정 화면을 표시하려면 클릭 또는 터치하십시오.
	인터넷 연결이 불가능합니다. 인터넷 설정 화면을 표시하려면 클릭 또는 터치하십시오.

버튼/아이콘	기능
	CANVIO AeroCast™ 무선 하드 드라이브의 현재 배터리 수준을 표시합니다.
	CANVIO AeroCast™ 무선 하드 드라이브 시스템 설정으로 들어가려면 Settings 버튼을 클릭 또는 터치하십시오.


이미지 관리 인터페이스

참고

이 기능을 사용하기 전에, 콘텐츠를 USB 연결을 통해 CANVIO AeroCast™ 무선 하드 드라이브에 전송하며, 자세한 내용은, 17 페이지 "USB 를 통한 연결"을 참조하십시오.

이미지 관리 화면을 표시하려면 **Picture** 버튼을 클릭 또는 터치하십시오.

아래는 그림 관리 화면의 예입니다.

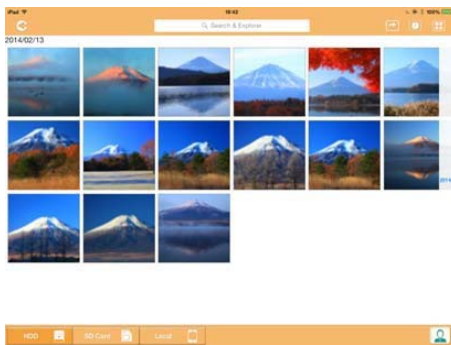

태블릿/iPad




스마트폰/iPhone

(이미지 예) 이미지 관리 화면

아래는 각 버튼/아이콘과 이미지 관리 화면에서의 기능을 설명합니다:

버튼/아이콘	기능
	주 화면으로 복귀하려면 Back 버튼을 클릭 또는 터치하십시오.
	Sort by name 아이콘이 표시될 경우, 사진은 파일명으로 정렬됩니다.
	Sort by date 아이콘이 표시될 경우, 사진은 파일 날짜순으로 정렬됩니다.
	모드 사이를 왔다 갔다 하려면 클릭 또는 터치하십시오.

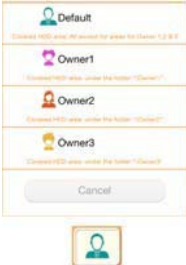버튼/아이콘	기능
 	Thumbnail 아이콘이 표시될 경우, 사진은 섬네일로 표시됩니다. List 아이콘이 나타나면, 사진은 파일 정보와 함께 작은 섬네일을 갖춘 목록으로 표시됩니다. 모드 사이를 왔다 갔다 하려면 클릭 또는 터치하십시오.
	주요 인터페이스에서 내비게이션 옵션을 팝업 메뉴로 표시하기 위해 Go To 버튼을 클릭 또는 터치하십시오.
	특정 파일 또는 폴더 검색을 실행하려면 검색 & 탐색기 항목에서 주요 문자 또는 숫자를 입력하십시오. 검색 & 탐색기 항목에서 없는 경우, 폴더 아이콘을 가볍게 두드리고 원하는 파일을 찾을 수 있는 폴더를 탐색하십시오.
	CANVIO AeroCast™ 무선 하드 드라이브의 내부 스토리지로 전환하려면 HDD 버튼을 클릭 또는 터치하십시오.
	삽입된 SD 카드로 전환하려면 SD Card 버튼을 클릭 또는 터치하십시오.
	로컬 장치로 전환하려면 Local 버튼을 클릭 또는 터치하십시오. (iPhone, iPad 또는 Android™ 장치만 해당)
	HDD 저장 모드에서는, 4 명의 사용자 중에 1 명의 사진을 선택할 수 있습니다. 다른 사용자를 표시하려면 User 아이콘을 클릭 또는 터치하십시오. 4 명의 사용자 기본값 이름은: Default, Owner1, Owner2 및 Owner3 입니다. 이름을 구성하려면, 47 페이지 “사용자 부호 및 이름”을 참조하십시오.

이미지 뷰어 인터페이스

이미지 뷰어 화면에 표시하기 위해 이미지 관리 화면에서 원하는 사진 파일을 클릭 또는 터치하십시오.



(이미지 예) 이미지 뷰어 화면

아래는 각 버튼/아이콘과 이미지 뷰어 인터페이스 화면에서의 기능을 설명합니다:

버튼/아이콘	기능
	이미지 관리 화면으로 복귀하려면 Back 버튼을 클릭 또는 터치하십시오.
	로컬 앨범에 현재 사진을 다운로드하려면 Download 버튼을 클릭 또는 터치하십시오. (HDD 모드만 해당)
	로컬 앨범에서 현재 "Uploaded" 폴더로 사진을 업로드하려면 Upload 버튼을 클릭 또는 터치하십시오. (로컬 모드만 해당)
	фото 슬라이드 쇼를 시작/정지하려면 Play/Pause 버튼을 클릭 또는 터치하십시오.
	현재 사진을 삭제하려면 Delete 버튼을 클릭 또는 터치하십시오.
	Facebook, Twitter 또는 email 에 현재 사진을 공유하려면 Share 버튼을 클릭 또는 터치하십시오.


버튼/아이콘	기능
	Chromecast™ 장치를 선택하려면 클릭 또는 터치하십시오. (Chromecast™ 장치를 사용할 경우에만 사용할 수 있습니다.) 51 페이지 "Chromecast™ 장치를 통한 인터넷 연결" 을 참조하십시오.
	Chromecast™ 장치를 분리하려면 클릭 또는 터치하십시오. (Chromecast™ 장치를 연결할 경우에만 사용할 수 있습니다.)

동영상 관리 인터페이스

참고

이 기능을 사용하기 전에, 콘텐츠를 USB 연결을 통해 CANVIO AeroCast™ 무선 하드 드라이브에 전송하며, 자세한 내용은, [17 페이지 "USB 를 통한 연결"](#)을 참조하십시오.

동영상 관리 화면을 표시하려면 **Videos** 버튼을 클릭 또는 터치하십시오.

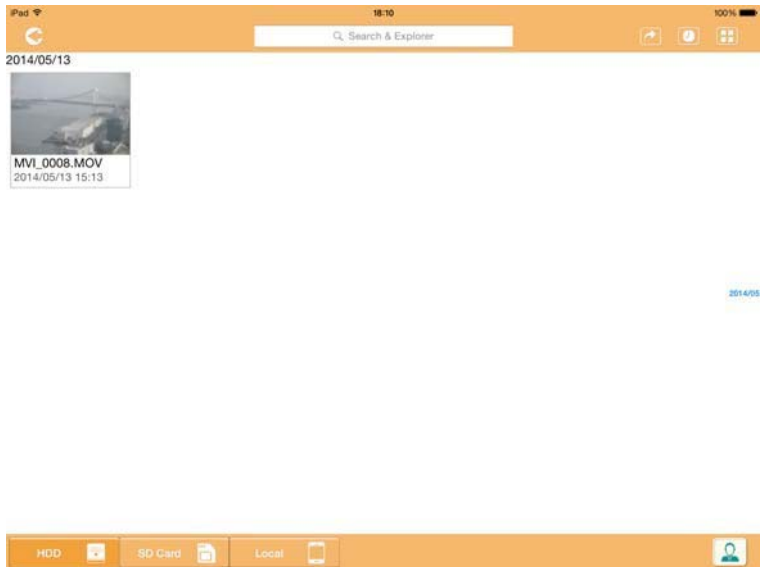

(이미지 예) 이미지 관리 화면


아래는 각 버튼/아이콘과 동영상 관리 화면에서의 기능을 설명합니다:

버튼/아이콘	기능
	주 화면으로 복귀하려면 Back 버튼을 클릭 또는 터치하십시오.
 	Sort by name 아이콘이 표시될 경우, 동영상은 파일명으로 정렬됩니다. Sort by date 아이콘이 표시될 경우, 동영상은 파일 날짜순으로 정렬됩니다. 모드 사이를 왔다 갔다 하려면 클릭 또는 터치하십시오.
 	Thumbnail 아이콘이 표시될 경우, 동영상은 섬네일로 표시됩니다. List 아이콘이 나타나면, 동영상은 파일 정보와 함께 작은 섬네일을 갖춘 목록으로 표시됩니다. 모드 사이를 왔다 갔다 하려면 클릭 또는 터치하십시오.
	주요 인터페이스에서 내비게이션 옵션을 팝업 메뉴로 표시하기 위해 Go To 버튼을 클릭 또는 터치하십시오.
	특정 파일 또는 폴더 검색을 실행하려면 검색 & 탐색기 항목에서 주요 문자 또는 숫자를 입력하십시오. 검색 & 탐색기 항목에서 없는 경우, 폴더 아이콘을 가법게 두드리고 원하는 파일을 찾을 수 있는 폴더를 탐색하십시오.
	CANVIO AeroCast™ 무선 하드 드라이브의 내부 스토리지로 전환하려면 HDD 버튼을 클릭 또는 터치하십시오.
	CANVIO AeroCast™에 삽입된 SD 카드로 전환하려면 SD Card 버튼을 클릭 또는 터치하십시오.
	로컬 장치로 전환하려면 Local 버튼을 클릭 또는 터치하십시오. (iPhone, iPad 또는 Android™ 장치만 해당)
	CANVIO AeroCast™ 무선 하드 드라이브의 내부 스토리지로 전환할 경우, 4 명의 사용자 중 1 명에서 동영상을 선택할 수 있습니다. 다른 사용자를 표시하려면 Owner 아이콘을 클릭 또는 터치하십시오. 4 명의 사용자 기본값 이름은: Default, Owner1, Owner2 및 Owner3 입니다.

동영상 재생 인터페이스

(iPhone, iPad 및 Android™ 장치만 해당)

동영상 재생 화면을 표시하려면 동영상 파일을 클릭 또는 터치하십시오.

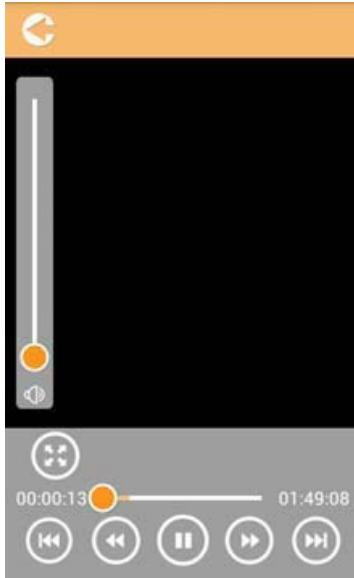

(이미지 예) 동영상 재생 화면

아래는 각 버튼/아이콘과 사진 관리 화면에서의 기능을 설명합니다:


버튼/아이콘	기능
	주 화면으로 복귀하려면 Back 버튼을 클릭 또는 터치하십시오.
	재생 화면 크기를 조정하려면 Zoom 버튼을 클릭 또는 터치하십시오.
	이전 동영상 재생으로 전환하려면 Previous 버튼을 클릭 또는 터치하십시오.
	다음 동영상 재생으로 전환하려면 Next 버튼을 클릭 또는 터치하십시오.
	동영상 20 초를 되감으려면 Rewind 버튼을 클릭 또는 터치하십시오.
	동영상 20 초를 앞으로 가려면 Forward 버튼을 클릭 또는 터치하십시오.

버튼/아이콘	기능
	현재 재생 중인 동영상을 재생/일시 정지하려면 Play/Pause 버튼을 클릭 또는 터치하십시오.
	동영상 재생에서 다른 위치로 탐색하려면, 재생 진행 바를 드래그하십시오.
	동영상 음량을 조정하려면 음량 조절 바를 드래그하십시오.
	Chromecast™ 장치를 선택하려면 클릭 또는 터치하십시오. (Chromecast™ 장치를 사용할 경우에만 사용할 수 있습니다.) 51 페이지 "Chromecast™ 장치를 통한 인터넷 연결"을 참조하십시오.
	Chromecast™ 장치를 분리하려면 클릭 또는 터치하십시오. (Chromecast™ 장치를 연결할 경우에만 사용할 수 있습니다.)

음악 관리 인터페이스

참고



이 기능을 사용하기 전에, 콘텐츠를 USB 연결을 통해 CANVIO AeroCast™ 무선 하드 드라이브에 전송하며, 자세한 내용은, 17 페이지 “USB 를 통한 연결”을 참조하십시오.

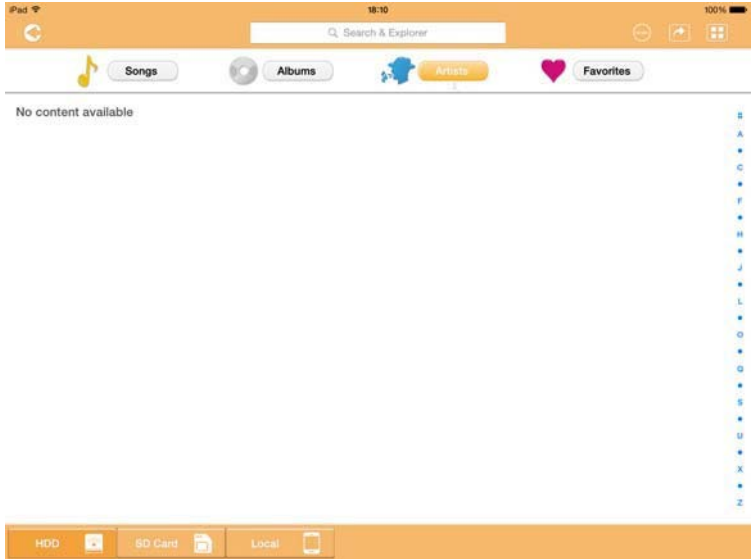

(이미지 예) 음악 관리 화면

아래는 각 버튼/아이콘과 사진 관리 화면에서의 기능을 설명합니다:

버튼/아이콘	기능
	주 화면으로 복귀하려면 Back 버튼을 클릭 또는 터치하십시오.
	Thumbnail 아이콘이 표시될 경우, 음악 트랙은 썸네일에 표시됩니다.
	List 아이콘이 나타나면, 음악 트랙은 파일 정보와 함께 작은 썸네일을 갖춘 목록으로 표시됩니다.
	모드 사이를 왔다 갔다 하려면 클릭 또는 주요 인터페이스에서 내비게이션 옵션을 팝업 메뉴로 표시하기 위해 Go To 버튼을 클릭 또는 터치하십시오.

버튼/아이콘	기능
 Search & Explorer	특정 파일 또는 폴더 검색을 실행하려면 검색 & 탐색기 항목에서 주요 문자 또는 숫자를 입력하십시오. 검색 & 탐색기 항목에서 없는 경우, 폴더 아이콘을 가볍게 두드리고 원하는 파일을 찾을 수 있는 폴더를 탐색하십시오.
	CANVIO AeroCast™ 무선 하드 드라이브의 내부 스토리지로 전환하려면 HDD 버튼을 클릭 또는 터치하십시오.
	CANVIO AeroCast™에 삽입된 SD 카드로 전환하려면 SD Card 버튼을 클릭 또는 터치하십시오.
	로컬 장치로 전환하려면 Local 버튼을 클릭 또는 터치하십시오. (iPhone, iPad 또는 Android™ 장치만 해당)
	CANVIO AeroCast™ 무선 하드 드라이브 (기본값 모드)에서 이용할 수 있는 노래 파일 모두를 보려면 All Songs 버튼을 클릭 또는 터치하십시오.
	앨범에서 노래 파일 모두를 보려면 Albums 버튼을 클릭 또는 터치하십시오.
	아티스트에서 노래 파일 모두를 보려면 Artist 버튼을 클릭 또는 터치하십시오.
	원하는 노래를 모두 보려면 Favorites 버튼을 클릭 또는 터치하십시오. Songs 화면, Album 화면, 또는 Artist 화면에서 (♡) 버튼을 클릭 또는 터치하여 즐겨찾기 화면에 노래를 추가할 수 있습니다. 뮤직 플레이어에서 (♥) 버튼을 클릭 또는 터치하여 즐겨찾기 화면에서 노래를 삭제할 수 있습니다.

음악 플레이어 인터페이스

(iPhone, iPad 및 Android™ 장치만 해당)

음악 플레이어 화면에 표시하려면 음악 파일을 클릭 또는 터치하십시오.



(이미지 예) 음악 플레이어 화면

아래는 각 버튼/아이콘과 음악 플레이어 화면에서의 기능을 설명합니다:

버튼/아이콘	기능
	음악 관리 화면으로 복귀하려면 Back 버튼을 클릭 또는 터치하십시오.
	곡목표에서 노래를 바꾸려면 Music Playlist 버튼을 클릭 또는 터치하십시오.
	이전 음악 재생으로 전환하려면 Previous 버튼을 클릭 또는 터치하십시오.
	다음 음악 재생으로 전환하려면 Next 버튼을 클릭 또는 터치하십시오.
	음악 20 초를 되감으려면 Rewind 버튼을 클릭 또는 터치하십시오.
	음악 20 초를 앞으로 가려면 Forward 버튼을 클릭 또는 터치하십시오.

버튼/아이콘	기능
	현재 재생 중인 음악을 재생/일시 정지하려면 Play/Pause 버튼을 클릭 또는 터치하십시오.
	음악 재생에서 다른 위치로 탐색하려면, 재생 진행 바를 드래그 하십시오.
	음악 음량을 조정하려면 음량 조절 바를 드래그 하십시오.
	다음 4 개의 음악 모드 사이에서 전환하려면 Music mode 버튼을 클릭 또는 터치하십시오: 셔플 () (기본값 모드), 반복 재생 (), 구간 반복 재생 (), 및 한 곡 반복 재생 ().
	즐거찾기에 현재 재생 중인 음악을 추가하려면 Favorites 버튼을 클릭 또는 터치하십시오.

문서 관리 인터페이스

문서 관리 화면을 표시하려면 문서 버튼을 클릭 또는 터치하십시오.



(이미지 예) 문서 관리 화면

아래는 각 버튼/아이콘과 문서 관리 화면에서의 기능을 설명합니다:

버튼/아이콘	기능
	주 화면으로 복귀하려면 Back 버튼을 클릭 또는 터치하십시오.
	Sort by name 아이콘이 표시될 경우, 문서는 파일명으로 정리됩니다.
	Sort by date 아이콘이 표시될 경우, 문서는 파일 날짜순으로 정리됩니다.
	Thumbnail 아이콘이 표시될 경우, 문서는 썸네일에 표시됩니다.
	List 아이콘이 나타나면, 문서는 파일 정보와 함께 작은 썸네일을 갖춘 목록으로 표시됩니다.
	주요 인터페이스에서 내비게이션 옵션을 팝업 메뉴로 표시하기 위해 Go To 버튼을 클릭 또는 터치하십시오.


버튼/아이콘	기능
 Search & Explorer	특정 파일 또는 폴더 검색을 실행하려면 검색 & 탐색기 항목에서 주요 문자 또는 숫자를 입력하십시오. 검색 & 탐색기 항목에서 없는 경우, 폴더 아이콘을 가볍게 두드리고 원하는 파일을 찾을 수 있는 폴더를 탐색하십시오.
	CANVIO AeroCast™ 무선 하드 드라이브의 내부 스토리지로 전환하려면 HDD 버튼을 클릭 또는 터치하십시오.
	CANVIO AeroCast™에 삽입된 SD 카드로 전환하려면 SD Card 버튼을 클릭 또는 터치하십시오.
	로컬 장치로 전환하려면 Local 버튼을 클릭 또는 터치하십시오. (iPhone, iPad 또는 Android™ 장치만 해당)
	CANVIO AeroCast™ 무선 하드 드라이브의 내부 스토리지로 전환할 경우, 4 명의 사용자 중 1 명에서 동영상을 선택할 수 있습니다. 다른 사용자를 표시하려면 Owner 아이콘을 클릭 또는 터치하십시오. 4 명의 사용자 기본값 이름은: Default, Owner1, Owner2 및 Owner3 입니다.

문서 뷰어 인터페이스

(iPhone, iPad 및 Android™ 장치만 해당)

문서 뷰어 화면을 표시하려면 문서를 클릭 또는 터치하십시오.

iPhone과 iPad 앱에서 지원하는 파일 형식만 볼 수 있습니다. Android™ 애플리케이션에서는 사용 가능한 다른 애플리케이션에서 문서를 열라는 표시가 나타납니다. 한 번 또는 항상 그 애플리케이션을 사용하도록 선택할 수 있습니다. 항상 사용할 수 있도록 선택하면 다시 표시되지 않습니다.

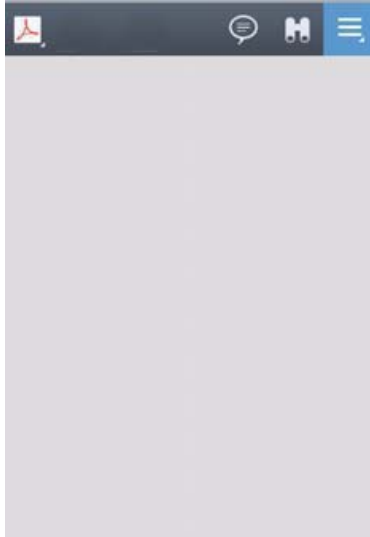


(이미지 예) 문서 뷰어 화면

아래는 각 버튼/아이콘과 문서 뷰어 화면에서의 기능을 설명합니다:

버튼/아이콘	기능
	찾기 화면을 열려면 Find 버튼을 클릭 또는 터치하십시오. 특정 텍스트 검색을 실행하려면 검색창에서 주요 문자 또는 숫자를 입력하십시오.
	다양한 문서 옵션을 보려면 Options 버튼을 클릭 또는 터치하십시오.

파일/폴더 관리 인터페이스


파일/폴더 관리 화면을 표시하려면 **File/Folder** 버튼을 클릭 또는 터치하십시오.

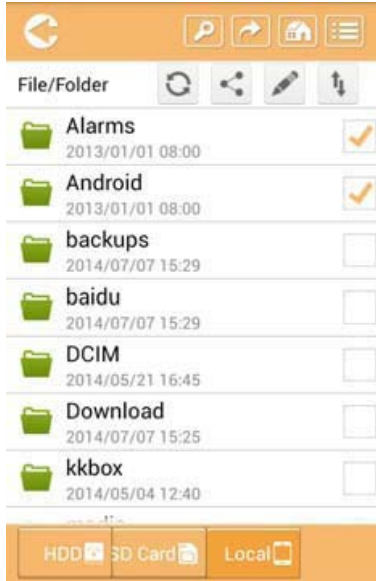

(이미지 예) 파일/폴더 관리 인터페이스 - 애플리케이션 화면

아래는 각 버튼/아이콘과 문서 관리 화면에서의 기능을 설명합니다:

버튼/아이콘	기능
	주 화면으로 복귀하려면 Back 버튼을 클릭 또는 터치하십시오.
 	Sort by name 아이콘이 표시될 경우, 파일/폴더는 파일명으로 정렬됩니다. Sort by date 아이콘이 표시될 경우, 파일/폴더는 파일 날짜순으로 정렬됩니다. 모드 사이를 왔다 갔다 하려면 클릭 또는 터치하십시오.
 	Thumbnail 아이콘이 표시될 경우, 파일/폴더는 섬네일에 표시됩니다. List 아이콘이 나타나면, 파일/폴더는 파일/폴더 정보와 함께 작은 섬네일을 갖춘 목록으로 표시됩니다. 모드 사이를 왔다 갔다 하려면 클릭 또는 터치하십시오.

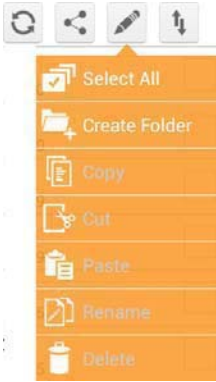버튼/아이콘	기능
	주요 인터페이스에서 내비게이션 옵션을 팝업 메뉴로 표시하기 위해 Go To 버튼을 클릭 또는 터치하십시오.
	특정 파일 또는 폴더 검색을 실행하려면 검색 & 탐색기 항목에서 주요 문자 또는 숫자를 입력하십시오. 검색 & 탐색기 항목에서 없는 경우, 폴더 아이콘을 가볍게 두드리고 원하는 파일을 찾을 수 있는 폴더를 탐색하십시오.
	CANVIO AeroCast™ 무선 하드 드라이브의 내부 스토리지로 전환하려면 HDD 버튼을 클릭 또는 터치하십시오.
	CANVIO AeroCast™에 삽입된 SD 카드로 전환하려면 SD Card 버튼을 클릭 또는 터치하십시오.
	로컬 장치로 전환하려면 Local 버튼을 클릭 또는 터치하십시오. (iPhone, iPad 또는 Android™ 장치만 해당)
	화면을 새로 고치려면 Refresh 버튼을 클릭 또는 터치하십시오.
	email 를 통해 현재 문서를 공유하려면 Share 버튼을 클릭 또는 터치하십시오. 이 기능은 사진 파일에서만 작동합니다.
	Checkmark 아이콘은 파일 또는 폴더가 선택되었음을 나타냅니다.
	다음 옵션을 표시하려면 Setting 버튼을 클릭 또는 터치하십시오: 
	파일 전송 상태 화면을 표시하려면 Transfer 버튼을 클릭 또는 터치하십시오.

파일 전송

파일이나 폴더 (복사, 잘라내기, 업로드 또는 다운로드)가 실행될 때, 파일 전송 대화 상자가 열립니다. 각각의 전송 진행 바에 성공과 실패 전송이 같이 표시됩니다.



(이미지 예) 대기 중인 파일 상태 화면

- **Upload** () 아이콘은 진행 중인 업로드 파일/폴더를 나타냅니다.
- **Download** () 아이콘은 진행 중인 다운로드 파일/폴더를 나타냅니다.
- 업로드/다운로드 진행을 일시 정지하려면 **Upload/Download** 아이콘을 터치하십시오. **Pause** () 아이콘이 표시됩니다.
- () 아이콘은 파일/폴더가 업로드/다운로드를 하기 위해 대기하고 있음을 표시합니다. 이 애플리케이션은 각 파일/폴더 업로드/다운로드를 할 수 있습니다.
- 모든 대기 파일을 취소하려면 **Cancel** () 아이콘을 터치하십시오. 대기 파일 목록상의 버튼은 "Transfer Complete" 또는 "Transfer Failed"로 표시됩니다.



(이미지 예) 문서 뷰어 대기 파일 화면

전송에 실패하고 다시 시도하려면, **Re-Transfer** () 버튼을 클릭하십시오.

3 장

백업 관리

백업 관리 기능 사용하기

(iPhone, iPad 및 Android™ 장치만 해당)

SD 카드나 로컬 장치에 있는 파일들을 4 개의 사용자 디렉터리 중 하나에 백업할 수 있습니다. Default, Owner1, Owner2 또는 Owner3 입니다. 백업은 증분 백업입니다.

SD 카드를 수동 또는 자동 백업 기능을 사용하여 백업할 수 있습니다. 로컬 장치는 반드시 수동으로 백업해야 합니다.


백업 파일의 크기가 CANVIO AeroCast™ 무선 하드 드라이브 내부 스토리지의 사용 가능한 공간보다 큰 경우에는, 백업하기 전에 경고 메시지를 볼 수 있습니다.

수동 백업

1. 수동 백업을 실행하려면, 주 화면에서 **Backup** 버튼을 클릭 또는 터치하십시오.
2. **Backup SD Card** 또는 **Backup Local Data** 를 클릭 또는 터치하십시오.
3. 파일을 백업하려면 사용자 디렉터리를 클릭 또는 터치하십시오.
4. **Start Backup** 을 클릭 또는 터치하십시오. SD 카드 또는 로컬 장치에서 파일은 선택된 사용자 디렉터리에 백업 됩니다. 백업 실행은 인터페이스 화면의 아래에 표시됩니다. 일단 백업이 종료되면, 백업 성공을 알리는 메시지를 볼 수 있습니다.

자동 백업

백업 SD 카드 화면에서 **Auto Copy** 박스를 선택하여 SD 카드를 위한 자동 백업을 설정할 수 있습니다. SD 카드를 넣은 다음에, SD 카드에 있는 모든 동영상과 사진을 선택한 사용자 디렉터리에 자동으로 백업 됩니다.

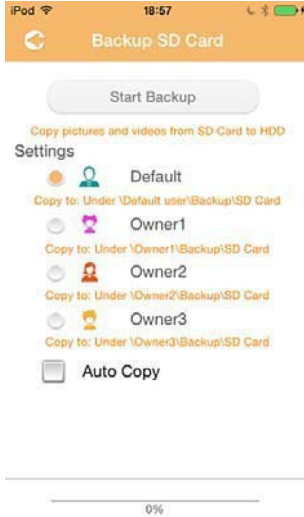

(그림 예) 백업 데이터 - 자동 화면

참고

SD 카드에서의 어떠한 전송이라도 카드를 제거하기 전에 완료되었는지를 확인하십시오.

4 장

설정 관리

설정 인터페이스 화면을 표시하려면 주요 인터페이스 화면의 오른쪽 위 모서리에 있는 **Settings** 버튼을 클릭 또는 터치하십시오. 다음의 모듈을 사용할 수 있습니다:

- 무선
- 작동
- 정보
- 사용자 부호 및 이름
- SSID 속성
- 인터넷
- 언어
- 캐시
- OSS 정보

무선 LAN 설정

무선 LAN 설정 화면을 표시하려면 **Wireless** 를 클릭 또는 터치하십시오.



(이미지 예) 설정 - 무선 화면

다음의 옵션을 사용할 수 있습니다:

- SSID
- 비밀번호 사용
- 비밀번호 변경

SSID:

1. SSID 설정 화면을 들어가려면 **SSID** 버튼을 클릭 또는 터치하십시오.



(그림 예) 설정 - SSID 설정 화면

2. SSID 를 입력하십시오. 기본값 SSID 는 "Toshiba whdd xxxx"입니다.
3. **OK** 버튼을 클릭 또는 터치하십시오.
4. 무선 화면의 상단 오른쪽 모서리에 있는 **Apply** 버튼을 클릭 또는 터치하십시오.

비밀번호 사용:

1. 비밀번호 기능을 활성화 또는 비활성화하려면 **Enable** 슬라이더를 오른쪽 또는 왼쪽으로 옮기십시오.
2. 무선 화면의 상단 오른쪽 모서리에 있는 **Apply** 버튼을 클릭 또는 터치하십시오.

비밀번호 변경:

1. **Modify Password** 버튼을 클릭 또는 터치하십시오.
2. 새로운 비밀번호를 입력하십시오.
3. **OK** 버튼을 클릭 또는 터치하십시오.
4. 무선 화면의 상단 오른쪽 모서리에 있는 **Apply** 버튼을 클릭 또는 터치하십시오.

작동

작동 화면에서 CANVIO AeroCast™ 하드 드라이브를 리셋, 전원 끄기 또는 재시작을 할 수 있습니다. 작동 화면에 표시하려면 **Settings** 를 클릭 또는 터치하고, 그런 후에 **Operation** 을 클릭 또는 터치하십시오:



(이미지 예) 설정 - 작동 화면

다음의 옵션을 사용할 수 있습니다:

- **Reset**—CANVIO AeroCast™ 무선 하드 드라이브 설정을 리셋하려면 클릭 또는 터치하십시오.

- **Power off**—CANVIO AeroCast™ 무선 하드 드라이브의 전원을 끄려면 클릭 또는 터치하십시오.
- **Restart**—CANVIO AeroCast™ 무선 하드 드라이브를 재시작하려면 클릭 또는 터치하십시오.

정보

정보 화면에 CANVIO AeroCast™ 무선 하드 드라이브의 시스템 정보를 제공합니다. 정보 화면에 표시하려면 **Settings** 을 클릭 또는 터치하고, 그런 후에 **Information** 를 클릭 또는 터치하십시오:



Information		
HDD Capacity	1.52 GB	26
SD Card Capacity	0B / 0B	
MAC Address	6C:AD:F...6C:DD	
Firmware Version	1.0.2	
Application Version	0.9.2	

(이미지 예) 설정 - 정보 화면

다음의 항목을 사용할 수 있습니다:

- HDD 용량
- SD 카드 용량
- MAC 주소
- 펌웨어 버전
- 애플리케이션 버전

사용자 부호 및 이름

사용자 부호 및 이름을 표시하려면 **Settings** 를 클릭 또는 터치하고, 그런 후에 **User symbol and name** 을 클릭 또는 터치하십시오.



(이미지 예) 설정 - 사용자 부호 및 이름 화면

이 화면에서, 사용자 아이콘과 이름을 변경할 수 있습니다. 이 변경은 이미지 관리 화면, 동영상 관리 화면, SD 카드 화면과 백업 화면에서 반영됩니다.



(이미지 예) 설정 - 사용자 부호 및 이름 관리 화면

총 12 개의 선택할 수 있는 아이콘이 있습니다. 또한, 사용자마다 새로운 이름을 입력할 수 있습니다.

사용자 아이콘을 클릭 또는 터치하고, 그런 후에 필요에 따라, 4 명의 사용자 각각에 대해 이름을 입력하십시오. (예 "기본값"으로 "아버지")

인터넷 설정

인터넷 화면에 CANVIO AeroCast™ 장치의 인터넷 설정을 구성할 수 있습니다. 선택할 수 있는 2 개의 CANVIO AeroCast™ 무선 하드 드라이브 작업 연결 모드가 있습니다:

- 홈 네트워크 (스테이션 모드)
- 공용 네트워크 (브릿지 모드)

브릿지 모드에서, CANVIO AeroCast™에 모바일 장치가 연결된 동안, CANVIO AeroCast™ 무선 하드 드라이브를 네트워크에 연결할 수 있습니다. CANVIO AeroCast™ 네트워크에서 장치를 분리하지 않고 인터넷에 액세스할 수 있고, 로컬 네트워크에 연결할 수도 있습니다. 브릿지 모드는 Toshiba 무선 HDD 애플리케이션에서 이메일과 소셜 미디어를 통해 파일 공유도 할 수 있습니다.


스테이션 모드에서는, CANVIO AeroCast™ 무선 하드 드라이브와 모바일 장치 모두 로컬 네트워크에 연결되어 있습니다. 사용자는 이 모드에서 CANVIO AeroCast™ 무선 하드 드라이브와 인터넷에 계속 액세스할 수 있으며 단, 이 방법으로도 CANVIO AeroCast™ 무선 하드 드라이브가 같은 네트워크에 연결된 Chromecast™ 장치와 통신을 할 수 있습니다. CANVIO AeroCast™ 무선 하드 드라이브는 Chromecast™ 장치에 연결하기 위해 스테이션 모드로 설정되어야 합니다.

브릿지 모드에서 인터넷 연결

참고

공용 네트워크로 (브릿지 모드) 선택 또는 전환하기 위해 네트워크에 연결되어 있어야 합니다.


1. 브릿지 모드에서 실행되도록 인터넷 설정을 구성하려면, **Public Network** 를 선택하십시오.

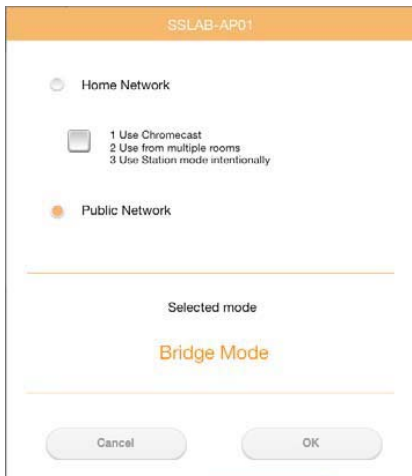

(이미지 예) 브릿지 모드 화면 선택하기 (iOS)


2. **OK** 버튼을 클릭 또는 터치하십시오.

스테이션 모드에서 브릿지 모드로 전환될 경우, 다음과 같은 메시지가 나타납니다:

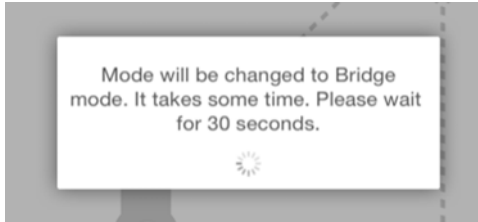


(이미지 예) 메시지 화면 (iOS)

애플리케이션이 CANVIO AeroCast™ 하드 드라이브를 찾지 못하면, 다음과 같은 메시지가 나타날 수 있습니다:

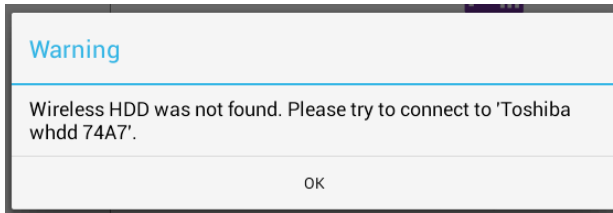

(이미지 예) 메시지 화면 (iOS)


3. CANVIO AeroCast™ 무선 하드 드라이브에서 WLAN 을 액세스 포인트로 변경하려면, 로컬 장치의 설정 화면으로 되돌아가십시오.

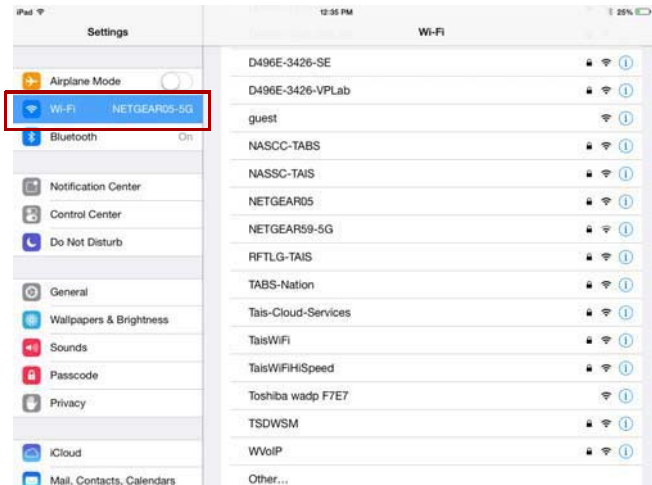

(이미지 예) 설정 화면 (iOS)


4. 라우터를 선택하십시오.

애플리케이션이 CANVIO AeroCast™ 하드 드라이브를 찾는 것에 성공하면, 다음과 같은 메시지가 나타날 수 있습니다:

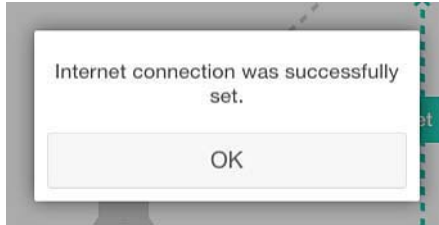

(이미지 예) 메시지 화면 (iOS)

아래 화면은 성공적인 연결을 표시합니다:

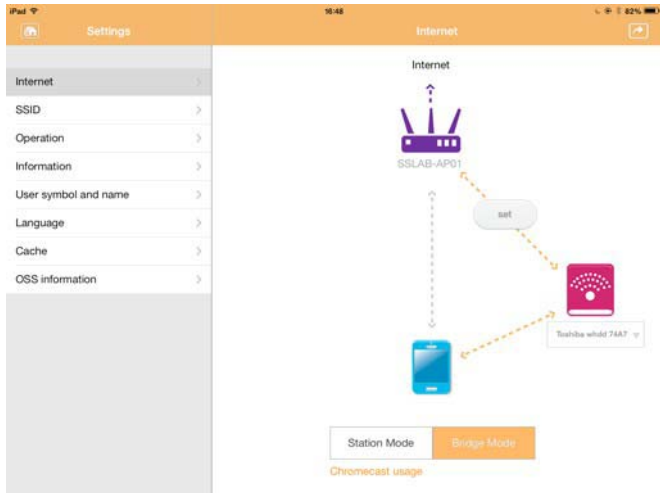


(이미지 예) 성공한 연결 화면 (iOS)

Chromecast™ 장치를 통한 인터넷 연결


Chromecast™ 장치를 연결하려면 Chromecast™에 제공한 지침과 같이 Chromecast™ 장치 (별매품) 설정부터 시작하십시오. 그런 후에 아래의 지침을 따르십시오:

1. 인터넷 화면을 표시하려면 **Settings** 를 클릭 또는 터치하고, 그런 후에 **Internet** 을 클릭 또는 터치하십시오. 인터넷 화면은 CANVIO AeroCast™ 무선 하드 드라이브에서 현재 사용할 수 있는 연결 상태를 표시합니다.

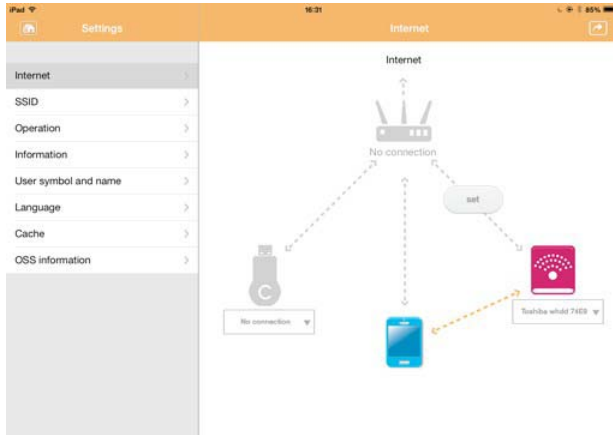

(이미지 예) 인터넷 설정 화면 (iOS)


2. 네트워크 결선도 내에 있는 **Not Connected** 와 **TOSHIBA** 아이콘 사이에 위치한 **Set** () 아이콘을 클릭 또는 터치하여 CANVIO AeroCast™ 무선 하드 드라이브를 라우터에 연결하십시오.

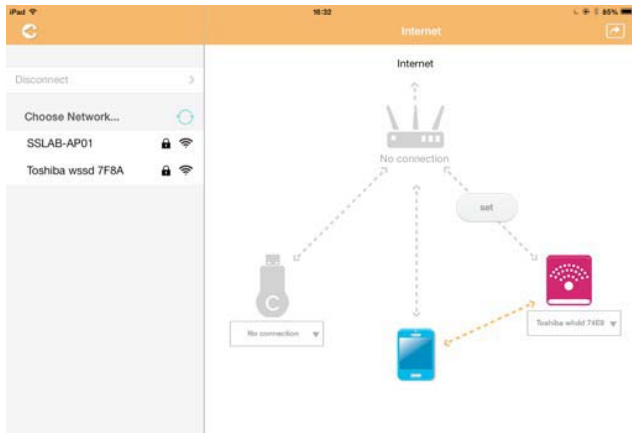

(이미지 예) Wi-Fi® 연결 화면 (iOS)

3. "Choose Network" 메뉴에 나열된 옵션에서 연결하려는 무선 네트워크를 선택하고, 그런 후에 연결할 비밀번호를 입력하십시오.
4. **Home Network** 무선 버튼이 활성화된 것을 확인하십시오. 활성화하려면 체크박스에 클릭 또는 터치하십시오.


아래와 비슷한 화면을 볼 수 있습니다:

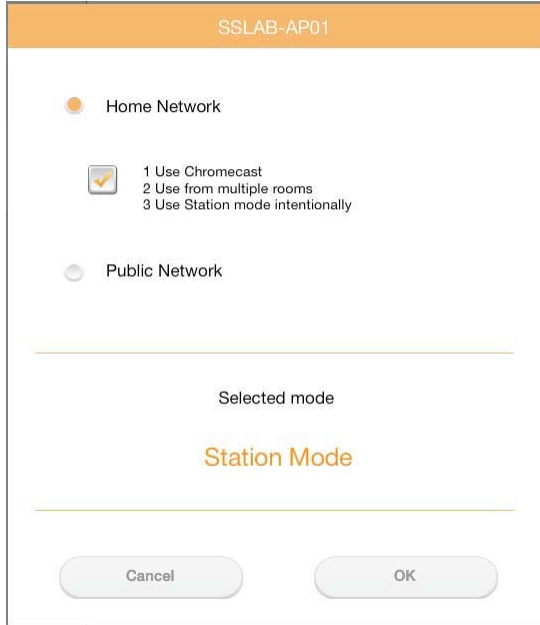

(이미지 예) SSID 연결 화면 (iOS)


5. **OK** 버튼을 클릭 또는 터치하십시오.

브릿지 모드에서 스테이션 모드로 전환될 경우, 다음과 같은 메시지가 나타납니다:

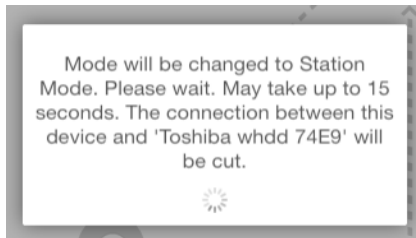


(이미지 예) 메시지 화면 (iOS)

다음과 같은 메시지가 나타날 수 있습니다:

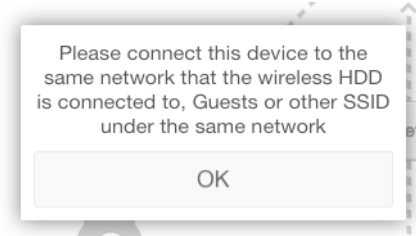


(이미지 예) 메시지 화면 (iOS)

애플리케이션이 CANVIO AeroCast™ 하드 드라이브를 찾지 못하면, 다음과 같은 메시지가 나타날 수 있습니다:

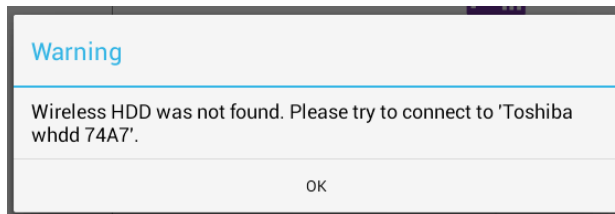

(이미지 예) 메시지 화면 (iOS)


6. CANVIO AeroCast™ 무선 하드 드라이브에서 WLAN 을 “Access Point”로 변경하려면, 로컬 장치의 설정 화면으로 되돌아가십시오.

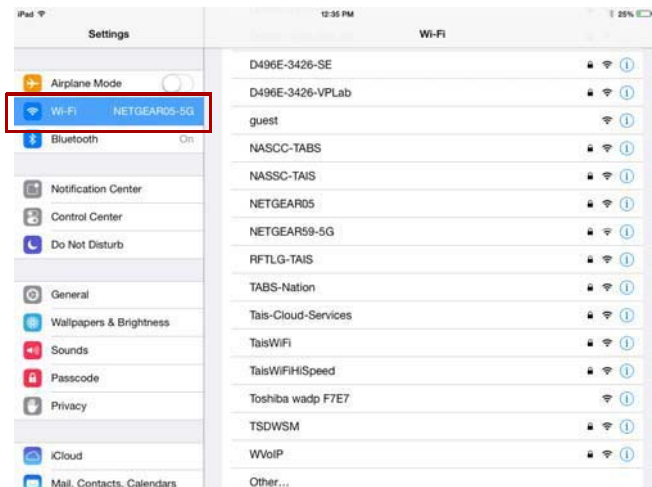

(이미지 예) 설정 화면 (iOS)

7. 라우터를 선택하십시오.

애플리케이션이 CANVIO AeroCast™ 무선 하드 드라이브를 찾는 것에 성공하면, 다음과 같은 메시지가 나타날 수 있습니다:

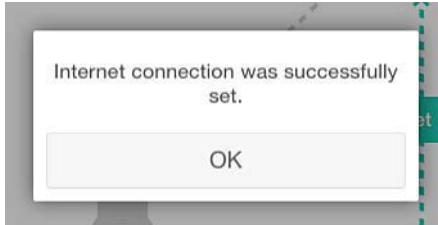


(이미지 예) 메시지 화면 (iOS)

8. OK 버튼을 클릭 또는 터치하십시오.

Chromecast™ 장치, CANVIO AeroCast™ 무선 하드 드라이브, 그리고 로컬 장치에 연결되어 있어야 합니다.

아래 화면은 성공적인 연결을 표시합니다:

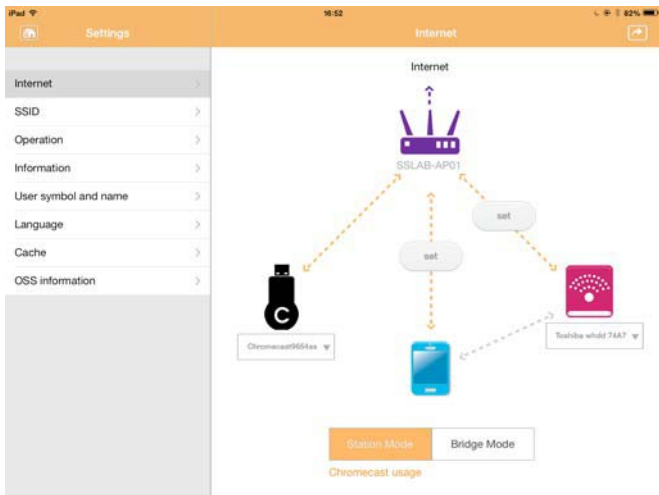

(이미지 예) 성공한 연결 화면 (iOS)

참고

홈 네트워크 (스테이션 모드)에 연결하는 경우, 다른 사람들이 네트워크를 통해서 부착된 저장 장치에 액세스할 수 있습니다.


장치에 다른 사람이 연결할 수 있으므로 공용 장소에서 네트워크를 연결할 때 주의하십시오.

언어

CANVIO AeroCast™ 무선 하드 드라이브의 기본값 언어는 영어입니다. 언어 화면에서 CANVIO AeroCast™ 무선 하드 드라이브의 언어 설정을 바꿀 수 있습니다.

1. 설정 화면에서, **Language** 를 클릭 또는 터치하십시오.

언어 목록이 표시됩니다

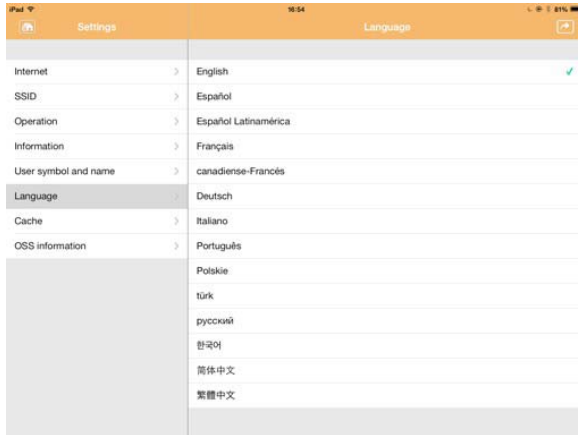

(이미지 예) 언어 화면

1. 원하는 언어를 클릭하십시오.

언어는 화면에서 바로 업데이트됩니다.

캐시

캐시 화면에서 CANVIO AeroCast™ 무선 하드 드라이브의 응답 속도를 개선하려면 로컬 장치상에 캐시 설정을 적용할 수 있습니다.



(이미지 예) 캐시 화면

다음의 옵션을 사용할 수 있습니다:

- 동영상 캐시 사용
- 캐시 삭제

동영상 캐시 사용:

각각의 동영상 캐시를 활성화 또는 비활성화하려면 **Enable Video Cache** 슬라이더를 오른쪽 또는 왼쪽으로 옮기십시오.

캐시 삭제:

CANVIO AeroCast™ 무선 하드 드라이브 캐시를 삭제하려면 **Clear Cache** 버튼을 클릭 또는 터치하십시오.

OSS 정보

OSS 정보 화면은 CANVIO AeroCast™ 무선 하드 드라이브에서 활용된 오픈 소스 소프트웨어에 관한 정보를 볼 수 있습니다.

TOSHIBA 지원

도움이 필요하세요?

제품 지원 페이지를 방문하여 주십시오: www.toshiba.kr

색인

ㄱ	ㅇ
개요14	안전 사항
ㄴ	아이콘4
동영상 관리 인터페이스28	연결
동영상 재생 인터페이스30	USB17
ㄷ	무선18
무선 연결	이미지 관리
Windows® PC/Mac20	인터페이스25
무선으로 파일 복사	이미지 뷰어 인터페이스27
Windows® PC21	음악 관리 인터페이스32
Mac21	인터넷 연결
뮤직 플레이어 인터페이스34	브릿지 모드48
문서 관리 인터페이스36	스테이션 모드49
문서 뷰어 인터페이스38	Chromecast™ 경유51
ㄹ	언어55
부속품14	ㅈ
백업 관리 기능42	주요 인터페이스22
ㅍ	애플리케이션23
상표11	기능24
소프트웨어 사양15	ㅋ
설정 관리 정보	캐시55
무선 LAN 설정44	ㅌ
작동45	파일/폴더 관리 인터페이스39
정보46	ㅎ
사용자 부호 및 이름47	하드웨어 사양14
설정	
인터넷48	

A

Android™

클라이언트 로그인	22
애플리케이션 설치	22
무선 연결	22
애플리케이션 로그인	22

C

CANVIO AeroCast™

특징	14
충전	16
연결	17
시스템 로그인	20

I

iPhone/iPad

클라이언트 로그인	21
-----------------	----

iPhone 또는 iPad

애플리케이션 설치	21
무선 연결	22
애플리케이션 로그인	22

O

OSS 정보	56
--------------	----

S

SD 카드

수동 백업	42
자동 백업	43

T

Toshiba 고객 지원	56
---------------------	----

規章聲明

產品棄置

本產品不可當成家庭垃圾處理。請正確棄置本產品，如未適當回收產品，可能危害環境及人體健康。

銷毀產品時，請依照當地規定處理。

電池及/或蓄電池棄置

電池及/或蓄電池必須與家庭垃圾分開回收及棄置。回收舊電池可確保產品的正確棄置，進而避免危害環境及人體健康。

銷毀產品時，請依照當地規定處理。

低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

電磁波曝露量 MPE 標準值 1mW/cm，本產品使用時建議應距離人體 23cm

安全圖示

本手冊包含必須遵守的安全指示，避免潛在危險造成人員受傷、設備損毀或資料遺失。這些安全注意事項已根據危險的嚴重性分級，警示圖示如下：

訊號文字	意義
 危險	表示有迫切危險的狀況，若未避免將會造成嚴重傷亡。
 警告	表示有潛在危險的狀況，若未避免可能會造成傷亡。
 小心	表示有潛在危險的狀況，若未避免可能會造成輕度或中度傷害。
注意	表示可能會造成財產損失和其他問題，但不會造成人員受傷。
注	說明重要資訊。
* 嚴重傷害包括失明、創傷、燒燙傷 (低溫和高溫)、觸電、骨折和中毒等，會產生持續性影響，或需要住院及/或長期就醫治療。 * 輕度或中度傷害包括創傷、燒燙傷、觸電等，不需住院及/或長期就醫治療。 * 財產損失表示磁碟機損壞。	

其他使用的圖示

其他圖示指出其他實用或具教育意義的資訊：

	技術說明：此圖示表示與裝置相關的技術資訊。
	提示：此圖示表示實用提示與技巧。
	定義：此圖示表示本文專有名詞的定義。

電池安全注意事項

**危險**

請勿將裝置 (含內建電池) 浸泡於水、飲料或其他流體等液體中。
電池 (含保護電路) 在非預期電力負載下，可能會著火、冒煙、爆炸或發熱。

**危險**

請將裝置 (含內建電池) 遠離熱源與火源。
熱能會損壞電池並可能導致電池發熱、冒煙、著火或爆炸。

**危險**

請勿拆解裝置及內建電池。
自行拆解或改造電池可能會導致保護電路損壞。如此可能會使電池發熱、冒煙、著火或爆炸。

**警告**

請將本產品遠離幼童可及之處。若產品破損或有裂縫，請將電池及其餘零組件遠離幼童可及之處。
若不慎誤食電池液體或其他零組件，請立即就醫。

**警告**

若無法結束充電程序，請停止充電。
若電池無法於指定時間內完成充電，請停止充電。電池可能會發熱、冒煙、著火或爆炸。

**警告**


此磁碟機內建可充電電池。請勿將用過的電池當成一般家庭垃圾丟棄。
銷毀產品時，請依照當地規定處理。若將舊電池當成家庭垃圾丟棄，可能會導致垃圾集中站著火或冒煙。

**警告**


如發現以下狀況，請立即切斷電源並自插座取下電源線/插頭，停止使用電池：刺鼻或不尋常的異味/高溫/變色/變形、破裂或漏液/冒煙/使用期間發生其他不尋常的現象，如異音等。請勿重新開啟磁碟機電源。若繼續使用可能引起火災或導致電池破裂，進而引發嚴重傷害或磁碟機故障 (包括但不限於資料遺失)。

**警告**

若磁碟機漏液或外殼破損，拿取前請先戴上防護手套。



僅可在 5°C 至 35°C 的溫度下對電池充電。若充電時的溫度超出此溫度範圍，可能導致電池漏液、發熱或嚴重損壞。也可能導致電池效能及續航力劣化。



電池實際續航力隨設定、應用程式使用率、選取功能或工作、網路配置、運作溫度及其他因素不同而異。充電時間長短則視使用情況不同而異。當磁碟機將電力完全耗盡後，電池可能無法充電。電池的蓄電能力會隨使用時間而逐漸降低。此為所有電池固有的特性。

電源與其他安全注意事項



請將塑膠蓋或電氣插頭等零件，放在兒童和寵物無法觸及之處。誤用零件包括但不限於不小心吞下，這可能會造成窒息而導致嚴重傷亡。如果您懷疑零件已遭吞食，請立刻採取適當的緊急措施，並諮詢醫師。



請勿將磁碟機放置於搖晃的桌上、傾斜不平的表面或其他不穩固的位置。磁碟機可能會掉落，造成磁碟機損壞或人員受傷。



請勿進行不當的維護或拆解，因為這可能造成人員受傷或導致觸電或火災。



請勿讓磁碟機暴露於潮濕的環境中，因為這可能導致觸電或火災。



請避免液體或螺絲、訂書針或迴紋針等金屬物品灑入或掉入磁碟機中。異物可能會造成短路而使得產品損壞和起火而造成嚴重傷害。



當金屬零件和塑膠零組件出現異常特徵時，請勿繼續使用磁碟機，因為這可能導致觸電。



如果磁碟機曾經掉落或損壞，請勿使用此磁碟機，因為這可能導致觸電。

**警告**

若產品發出異味、過熱或冒煙，請立即切斷磁碟機電源並自插座上取下電源線，同時中斷與裝置連接的 USB 傳輸線。若未這麼做，可能會引起火災、磁碟機損壞及/或人員受傷 (包括燒燙傷和觸電)。請不要再使用此磁碟機。請聯絡所購買產品的商家。

**警告**

若插座不符合裝置規章標籤上所指定的電壓、電流和頻率，不得插入 AC 變壓器。插座及/或 AC 變壓器過載可能會引起火災或觸電而造成嚴重傷害。

**警告**

請勿以拉扯電源線的方式，從插座拔除插頭。請務必以直接握住插頭的方式拔除。拉扯電源線可能會造成纜線斷裂，進而引起火災或觸電以及嚴重傷害。

**警告**

請務必確定電源插頭完全插入插座，以確保安全的電氣連接。插座過載可能會引起火災或觸電而造成嚴重傷害。

**警告**

請務必確定磁碟機和 AC 變壓器通風良好，以避免 AC 變壓器插入電源插座時過熱。通風不足可能會造成磁碟機和 AC 變壓器過熱，進而導致火災或觸電和嚴重傷害。

**警告**

如果灰塵跑進電源插頭或插頭底座，請關閉電源，並拔下電源插頭，接著使用乾的軟布清潔插頭及/或插頭底座。若未這麼做，可能會引起火災或觸電而造成嚴重傷害。

**警告**

請避免長時間讓皮膚接觸此磁碟機。磁碟機可能會變熱！請避免長時間接觸，以免造成皮膚刺激及/或燙傷。

**警告**

請避免長時間讓皮膚接觸 AC 變壓器。AC 變壓器可能會變熱！請避免長時間接觸，以免造成皮膚刺激及/或燙傷。

注意

運作中請勿拔除 USB 傳輸線和 AC 變壓器，因為這可能導致資料遺失或磁碟機損壞。

注意

運作中請勿接觸 USB 傳輸線和 AC 變壓器，因為這可能導致資料遺失或磁碟機損壞。

注意

請勿碰撞、掉落或搖晃磁碟機，因為這可能導致資料遺失或磁碟機損壞。

注意

請勿在高溫或低溫，或溫度突然改變的環境中使用磁碟機，這可能會導致資料遺失或磁碟機損壞。(運作：5°C - 35°C)

注意

請務必盡可能將磁碟機上的所有資料備份至另一個儲存裝置。

注意

請勿在結露的環境中使用磁碟機，因為這可能導致資料遺失或磁碟機損壞。

注意

請勿在運作中的磁碟機上覆蓋任何物品，因為磁碟機溫度可能會過高。

注意

雷雨期間請勿使用此磁碟機。如果看見閃電或聽到雷聲，請立即關閉連接此磁碟機的裝置、電腦和週邊裝置，自插座取下電源線並中斷電腦與 USB 傳輸線的連線。閃電所造成的電湧，可能會導致資料遺失或磁碟機損壞。

注意

請勿使用任何化學製品來清潔此磁碟機或任何配件。若要清潔此磁碟機或配件的外部，請使用乾的軟布。使用化學製品可能會造成這些物件的劣化、變形或變色和資料遺失。

注

視使用者的硬體配置與作業系統而定，相容性可能會有所不同。

注

USB 3.0 向下相容於 USB 2.0。

注

如果磁碟機的供電不足，磁碟機將無法運作。

注

如果電腦沒有 USB 3.0 連接埠，您的電腦可能需要 USB 3.0 Express Card Host Controller。您也可以將此磁碟機連接至您電腦的 USB 2.0 連接埠。但是，傳輸速率將會降低為 USB 2.0 的速率。

注

十億位元組 (1GB) 代表 $10^9 = 1,000,000,000$ 位元組，而一兆位元組 (1TB) 代表 $10^{12} = 1,000,000,000,000$ 位元組，這是電腦作業系統所使用的次方表示法，然而，儲存容量則是使用 2 的次方來定義，即 $1GB = 2^{30} = 1,073,741,824$ 位元組，而 $1TB = 2^{40} = 1,099,511,627,776$ 位元組，因此顯示的儲存容量會略少。可用的儲存容量 (含各種媒體檔案範例) 將隨檔案大小、格式、設定、軟體與作業系統以及其他因素不同而異。

注

請只使用由製造商所提供的配件。

注

本硬碟機需使用製造商提供的 AC 變壓器連接電源。

注

產品規格如有變更，恕不另行通知。

無線區域網路安全資訊以及規定與規範



無線區域網路裝置可能會對心律調節器等醫療設備造成干擾。若您使用個人醫療設備，使用本產品前，請先徵詢醫師意見並遵守醫療設備說明書指示。請勿於醫院和醫療辦公室或個人醫療設備使用者附近使用本產品，因為在這類環境中使用本產品可能造成傷害。



若電腦鄰近自動控制設備或裝置，如電動門或火警偵測器，請關閉無線功能。無線電波會導致此類設備故障，並可能造成人員受傷。

注

請勿在微波爐附近或受無線電或磁場干擾的區域使用無線區域網路功能。微波爐或其他來源的干擾會使無線區域網路運作中斷。

注

無線區域網路的傳輸速度以及無線區域網路可達的範圍可能隨周遭的電磁環境、阻礙物、存取點設計與配置、用戶端設計和軟體配置不同而異。此處所述的傳輸速率為在適當標準下根據理論推算的最高速度，實際傳輸速度將低於理論推算的最高速度。

免責限制

- Toshiba 不對資料損毀或資料遺失負責。(Toshiba 不負責提供任何資料回復)
- Toshiba 不對因使用者的**錯誤**或疏忽、火災、地震或超出 Toshiba 控制範圍的其他意外所造成的任何損壞負責。
- 如果您未能遵守使用手冊中所述的內容，Toshiba 概不負責。
- 如果您濫用連線設備及軟體，Toshiba 概不負責。
- 此產品的支援僅在原始購買產品的國家/地區提供。

使用限制

此磁碟機用於標準用途，例如辦公室作業、個人磁碟機及家用電器。Toshiba Corporation 對於非上述使用類型者，恕不負責。請勿用於特殊用途 (原子控制、航空或太空系統、大眾運輸車輛操作控制、維生醫療器材或武器發射控制)，這些用途需要特別高的可靠性，無法保證適當的安全程度，或者故障或操作錯誤可能威脅生命或造成身體受傷。

注意事項

本手冊所含資訊，包括但不限於任何產品規格，如有變更恕不另行通知。對於本手冊內容或本文所含之其他任何資訊，Toshiba 概不提供保證；另特此聲明，關於前述內容之適銷性或特定用途適用性之隱含保證，亦概不負責。對於因本文技術或印刷錯誤或遺漏，抑或產品與手冊描述落差所造成之直接或間接損失，Toshiba 概不負責。無論是基於侵權行為、合約或其他理由，因本手冊或此處所含資訊或因使用本文資訊引致任何事件、後果、特殊或懲戒損失，Toshiba 概不負責。

GNU 通用公共授權 (GPL)

本產品搭載的韌體可能包含協力廠商受著作權保護並採用 GPL 或寬鬆通用公共授權 (LGPL) 之軟體 (以下統稱「GPL 軟體」)，而非 Toshiba 的使用者授權合約。可至 <http://www.support.toshiba.com> 取得該授權複本。單就 GPL 軟體部分，Toshiba 在適用法律許可範圍內恕不提供任何擔保。凡修改或竄改 GPL 軟體，除需自負風險外，亦將導致產品保固失效。對於任何此類修改或竄改，Toshiba 概不負責。對於經過您修改或試圖修改 GPL 軟體之 Toshiba 產品，Toshiba 恕不提供任何產品支援。

版權

未經 Toshiba 事前書面同意，不得以任何形式複製本手冊。對於使用本文資訊之後果，請自行負責。

©2018 TOSHIBA ELECTRONIC DEVICES & STORAGE CORPORATION，版權所有。

商標

CANVIO AeroCast 為 Toshiba Electronic Devices & Storage Corporation 的商標。

Android、Google Play 和 Chromecast 均為 Google, Inc. 的商標。

Mac、OS X、iPad、iPhone 和 Time Machine 均為 Apple Inc.

於美國及其他國家/地區的註冊商標。

IOS 為 Cisco 於美國及其他國家/地區的商標或註冊商標，
需取得授權方可使用。

App Store 為 Apple Inc. 的服務標誌。

DLNA 為 Digital Living Network Alliance 的商標或註冊商標。

Wi-Fi 為 Wi-Fi Alliance® 的註冊商標。

Windows 為 Microsoft Corporation 於美國及/或其他國家/地區的商標或註冊商標。

其他所有品牌與產品名稱分別為所屬公司的商標或註冊商標。

目錄

簡介	12
概述	12
組件	12
特色	12
硬體規格	12
軟體規格	13
第 1 章 開始使用	14
為 CANVIO AeroCast™ 無線硬碟充電	14
連接至 CANVIO AeroCast™	15
透過 USB 連接	15
無線連接	16
第 2 章 CANVIO AeroCast™ 無線硬碟軟體公用程式	18
系統登入	18
無線連線至 Windows® PC/Mac	18
iPhone 或 iPad 用戶端登入	19
Android™ 用戶端登入	20
主要介面	20
應用程式主要介面	21
圖片管理介面	23
圖片檢視器介面	25
影片管理介面	26
影片播放介面 (僅適用 iPhone、iPad 和 Android™ 裝置)	28
音樂管理介面	30
音樂播放器介面 (僅適用 iPhone、iPad 和 Android™ 裝置)	32
文件管理介面	34
文件檢視器介面 (僅適用 iPhone、iPad 和 Android™ 裝置)	36
檔案/資料夾管理介面	37
傳輸檔案	39

第 3 章	備份管理.....	40
	使用備份管理功能	40
	手動備份	40
	自動備份	41
第 4 章	設定管理.....	42
	無線區域網路設定	42
	操作	43
	資訊	44
	使用者符號與名稱	45
	網際網路設定	46
	Bridge Mode (橋接模式) 中的網際網路連線	46
	透過 Chromecast™ 裝置進行網際網路連線	49
	語言	53
	快取	53
	OSS 資訊.....	54
	TOSHIBA 支援.....	54
索引		55

簡介

概述

CANVIO AeroCast™

無線硬碟可讓您以無線方式存取音樂、影片、圖片和資料。您可以將檔案串流至 iPad、iPhone、平板電腦、智慧型手機和筆記型電腦，省去使用各種連接線或電線的麻煩。此硬碟搭載 1 TB 的寬裕儲存空間，可讓您將檔案從行動裝置傳輸至硬碟。內建的 USB 3.0 連接埠則可加速檔案傳輸。

組件

CANVIO AeroCast™ 無線硬碟包含以下組件：

- AC 變壓器
- USB 3.0 傳輸線
- 快速入門指南

特色

- 內建 1 TB 硬碟儲存空間與 NTFS 格式。
- 可透過無線方式連線或使用隨附的 USB 3.0 傳輸線連接。
- 可使用支援 iPhone、iPad 和 Android™ 作業系統的免費 Toshiba 無線硬碟應用程式存取並串流音樂、影片、圖片和資料。
- 在影音串流情況下，電池最高可提供連續 5 小時的續航力。電池續航力可能會隨使用條件不同而異。
- 共可設定四種使用者設定檔，協助您管理檔案。
- 透過無線連結存取網際網路，支援 802.11 b/g/n。
- 支援相容於 Class 10 的 SD/SDHC/SDXC 記憶卡。關於 SDXC 支援的版本請上「Toshiba 無線硬碟」應用程式網站查詢。

硬體規格

產品尺寸：	121.4mm (長) × 86mm (寬) × 24.4mm (高)
重量：	約 280g
電池：	充電時間：最多 3 小時

環境需求：		
無線區域網路		
	標準：	802.11 b/g/n
	頻率：	2.4 GHz
	速度：	1T1R 最高可達 150Mbps
溫度		
	運作：	5 至 35°C (41 至 95°F)
	儲存：	-20 至 40°C (-4 至 104°F)
濕度		
	運作：	20 - 80%
	儲存：	8 - 90%

軟體規格

相容的檔案類型：	
影片：	mp4、m4v、mov
音樂：	mp3、m4a、aac、wav
圖片：	jpg、bmp、png、gif、tif
文件：	pdf、doc、docx、ppt、pptx、xls、xlsx、txt、rtf
系統需求：	
作業系統	
Windows®：	Windows® 7 (32bit & 64bit), Windows® 8.1 (32bit & 64bit)
OS X：	OS X v10.7, v10.8, v10.9, v10.10
iPhone 或 iPad 作業系統：	支援 Android™ 和 iOS 智慧型手機或平板電腦。關於支援的版本請上「Toshiba 無線硬碟」應用程式網站查詢。
Android™：	

注


本磁碟機已針對 Windows® 執行 NTFS 格式化。若同時使用 Windows® PC 和 Mac，使用者只要在 Mac 上安裝「Tuxera NTFS for Mac」，即可讀寫 Windows® PC 和 Mac 資料。但在此情況下，使用者將無法使用 OS X 的 Time Machine 功能。

第 1 章

開始使用

為 CANVIO AeroCast™ 無線硬碟充電

若要開始使用 CANVIO AeroCast™，請先確定裝置已充電。CANVIO AeroCast™ 無線硬碟可使用 AC 變壓器和 USB 傳輸線充電。

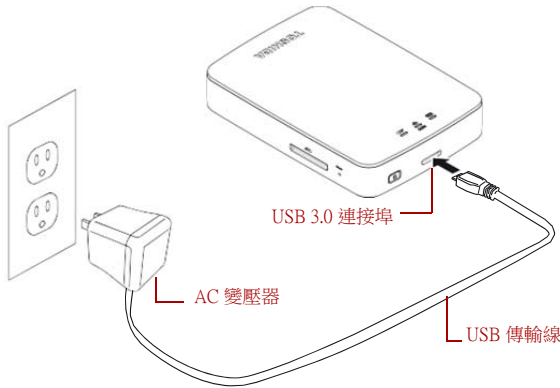

(範例圖例) CANVIO AeroCast™ 無線硬碟充電

為 CANVIO AeroCast™ 無線硬碟充電：

1. 將 USB 傳輸線連接 AC 變壓器。
2. 將 USB 傳輸線插入 CANVIO AeroCast™ 無線硬碟的 USB 3.0 主機連接埠。
3. 將 AC 變壓器插入可用的牆壁電源插座。
充電時，電池指示燈會緩慢閃爍 (每 2 秒閃爍一次)。

連接至 CANVIO AeroCast™


您可以使用隨附的 USB 傳輸線直接連接至 CANVIO AeroCast™ 無線硬碟 (直接連接儲存模式) 或透過無線方式連接 (無線區域網路模式)。

透過 USB 連接

若要透過 USB 操作，請使用隨附的 USB 傳輸線將 CANVIO AeroCast™ 無線硬碟連接至電腦的 USB 連接埠。

Mac 使用者：

若要透過 USB 寫入檔案，請在您的 Mac 上安裝「NTFS driver for Mac」。請參閱儲存在 CANVIO AeroCast™ 無線硬碟中的預先載入手冊。

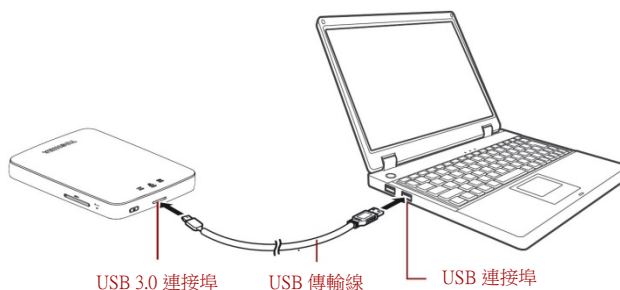

(範例圖例) 透過 USB 連接

將 CANVIO AeroCast™ 連接至電腦：

1. 請確定 CANVIO AeroCast™ 無線硬碟為關機狀態。
2. 將隨附的 USB 3.0 傳輸線連接至 CANVIO AeroCast™ 無線硬碟。
3. 將 USB 3.0 傳輸線的另一端連接至 Windows® PC 的 USB 連接埠。

您現在可以開始在本產品上傳輸資料。


無線連接

將 Windows®、Mac、iPhone、iPad、Android™ 行動裝置和 DLNA® 裝置與 CANVIO AeroCast™ 連線後，便可透過無線方式從這些裝置存取 CANVIO AeroCast™ 無線硬碟。關於 DLNA® 支援的版本請上「Toshiba 無線硬碟」應用程式網站查詢。



(範例圖) 無線區域網路模式

建立連線後，CANVIO AeroCast™ 無線硬碟會自動以無線區域網路模式運行，請參閱第 18 頁的「無線連接至 Windows® PC/Mac」。

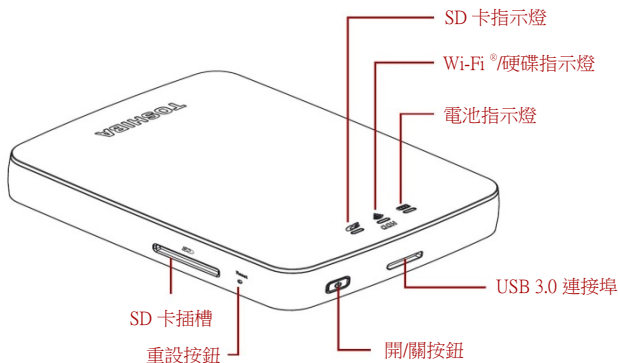

(範例圖例) 連接埠、按鈕和指示燈

SD 卡插槽：

- 支援相容於 Class 10 的 SD/SDHC/SDXC 記憶卡。
關於 SDXC 支援的版本請上「Toshiba 無線硬碟」應用程式網站查詢。
- 在無線區域網路模式下，可存取 SD 卡。

重設按鈕：

- 在無線區域網路模式下，按住 5 秒。系統將會還原為出廠設定值。

開關按鈕：

- 按住 2 秒：開啟無線區域網路模式。
- 再按住 2 秒：關閉無線區域網路模式。

注

若電池電量過低，則 CANVIO AeroCast™ 無線硬碟將無法開機。電池指示燈將會閃爍橘色燈號 6 秒，然後關機。

USB 3.0 連接埠：

- 相容於 USB 3.0 和 USB 2.0。
- 連接後，便可在電腦和 CANVIO AeroCast™ 無線硬碟之間傳輸資料。
- 連接 AC 變壓器後，可對產品電池充電。

電池指示燈：

- 綠色：30% 以上可用電池電力。
- 黃色：尚有 10%-30% 殘餘電池電力。
- 橘色 (快速閃爍)：產品電池電力耗盡或操作溫度過高，產品將於 30 秒後關機。
- 綠色或黃色 (緩慢閃爍)：電池充電中。
- 綠色 (無閃爍)：充電完成
- 綠色或黃色 (快速閃爍)：產品正在關機或開機。
- LED 熄滅：裝置已關機。

無線區域網路硬碟指示燈：

- 無線區域網路模式
 - 藍色：無線區域網路已開啟 (無資料存取)。
 - 藍色 (閃爍)：無線區域網路已開啟 (可存取儲存資料)。
 - 藍色 (熄滅)：無線區域網路已關閉。
- USB 模式
 - 白色：無資料存取。
 - 白色 (閃爍)：可進行資料存取。
 - 白色 (熄滅)：裝置為休眠或待機模式。可安全中斷裝置連線。

SD 卡指示燈：

- 僅會在無線區域網路模式下亮燈
 - 紫色：無 SD 卡存取。
 - 紫色 (閃爍)：可進行 SD 卡存取。
 - 紫色 (熄滅)：SD 卡處於待機模式。

第 2 章

CANVIO AeroCast™ 無線硬碟軟體公用程式

系統登入


無線連線至 Windows® PC/Mac

1. 按下**開/關**按鈕啟動系統。
2. 在 Wi-Fi® 指示燈停止閃爍後，啟用 Windows® PC/Mac 的無線區域網路功能，然後開啟無線網路連線。
3. 選取 **Toshiba whdd xxxx** 無線連線 (其中 xxxx 為 CANVIO AeroCast™ 裝置產生的 4 位數字 (預設無線 SSID：**Toshiba whdd xxxx**)，接著輸入預設密碼 **12345678**。
請務必在初次使用產品時立即變更預設密碼。
4. CANVIO AeroCast™ 無線硬碟現在已可做為網路連接裝置存取。

以無線方式複製檔案至 Windows® PC

磁碟機與 PC 連線後，便可透過無線方式將 CANVIO AeroCast™ 無線硬碟的檔案傳送至 Windows® PC。

1. 若要在 Windows® PC 上連線磁碟機，請按一下或輕觸 **Computer (電腦)**，選取 **Map Network Drive (連線網路磁碟機)**。

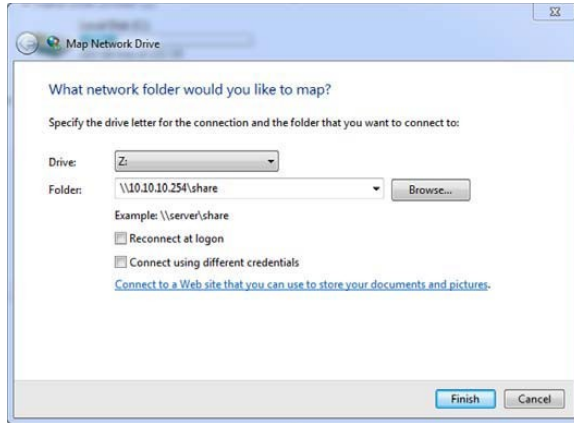

(範例圖) 連線網路磁碟機畫面

2. 從 Drive (磁碟機) 下拉式功能表選擇字母。
3. 在 Folder (資料夾) 欄位中，輸入 \\10.10.10.254\share，然後按一下或輕觸 **Finish (完成)**。

您現在應可在 Windows® PC 的「我的電腦」畫面中看到 CANVIO AeroCast™ 無線硬碟。

以無線方式複製檔案至 Mac

CANVIO AeroCast™ 無線硬碟在 Mac 上會自動顯示為網路磁碟機。只要將檔案拖放至所要位置即可完成傳輸。

若要加速檔案傳輸，可使用 USB 傳輸線。詳細資訊請參閱第 15 頁的「透過 USB 連接」。

iPhone 或 iPad 用戶端登入

安裝 iPhone 和 iPad 專用應用程式

1. 在 App Store 中，搜尋並找出 Toshiba 無線硬碟應用程式。
2. 安裝 **Toshiba 無線硬碟** 應用程式並依照畫面安裝指示操作。
3. 安裝進度完成後，**Toshiba 無線硬碟** 圖示會顯示於桌面。

無線連線至 iPhone 或 iPad

1. 按下**開/關**按鈕以啟動 CANVIO AeroCast™。等待 Wi-Fi® 指示燈停止閃爍。
2. 在 iPad/iPhone 上按一下或輕觸 **Setting (設定)**，選取 **Wi-Fi**。
3. 選取 **Toshiba whdd xxxx** (其中 xxxx 為 CANVIO AeroCast™ 裝置產生的 4 位數字)。
4. 輸入預設密碼 **12345678**。
請務必在初次使用產品時立即變更預設密碼。

應用程式登入

執行「Toshiba 無線硬碟」應用程式。

Android™ 用戶端登入

安裝 Android™ 應用程式

1. 在 Google Play™ 商店中，搜尋並找出 Toshiba 無線硬碟應用程式。
2. 安裝 **Toshiba 無線硬碟** 應用程式並依照畫面安裝指示操作。
3. 安裝進度完成後，CANVIO AeroCast™ 圖示會顯示於桌面。

無線連線至 Android™ 裝置

1. 按下**開/關**按鈕以啟動 CANVIO AeroCast™。等待 Wi-Fi® 指示燈停止閃爍。
2. Wi-Fi® 指示燈停止閃爍後，按一下或輕觸 **Setting (設定)**，然後選取平板電腦或智慧型手機上的 **Wireless LAN (無線區域網路)**。
3. 選取 **Toshiba whdd xxxx** (其中 xxxx 為 CANVIO AeroCast™ 裝置產生的 4 位數字)。
4. 輸入預設密碼 **12345678**。
請務必在初次使用產品時立即變更預設密碼。


應用程式登入

執行「Toshiba 無線硬碟」應用程式。

主要介面


顯示主要介面畫面時，應用程式可能會通知您有可用的更新。可用的三個選項如下：

- **OK (確定)** (啟用更新程序；建議選項)
- **Cancel (取消)** (取消更新程序)
- **Do not prompt (不要提示)** (停止繼續接收通知；不建議)

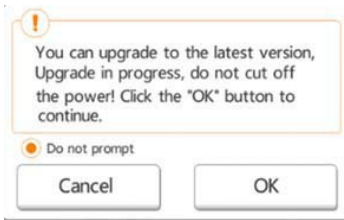

(範例圖) 軟體更新畫面

若選擇 **OK (確定)** 進行更新，系統將會通知您稍候 5 分鐘。

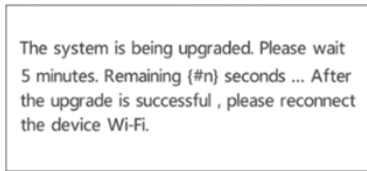

(範例圖) 軟體更新 - 稍候 5 分鐘畫面

若選擇 **Cancel (取消)**，則下次登入並進入主要介面時，系統可能會通知您可用的升級。

若選擇 **Do not prompt (不要提示)**，應用程式將永遠不再自動通知軟體升級，但您仍可到 **Setting (設定)** 畫面手動升級軟體。

應用程式主要介面

以下為 Toshiba 無線硬碟在 iPhone、iPad 或 Android™ 應用程式顯示的主畫面範例。



平板電腦/iPad



智慧型手機/iPhone

(範例圖) 主要介面畫面 - 應用程式

主要介面功能

以下為主要介面的各按鈕/圖示及其功能說明：

按鈕/圖示	功能
 Pictures	顯示圖片管理畫面。
 Videos	顯示影片管理畫面。
 Documents	顯示文件管理畫面。
 Music	顯示音樂管理畫面。
 File/Folder	顯示檔案/資料夾管理畫面。
 Backup	顯示備份管理畫面。 (僅適用 iPhone、iPad 和 Android™ 裝置。) 請參閱第 40 頁的「備份管理」。
	按一下或輕觸即可選取 Chromecast™ 裝置。(只有在有可用的 Chromecast™ 裝置時才可選取。) 請參閱第 49 頁的「透過 Chromecast™ 裝置進行網際網路連線」。
	按一下或輕觸即可中斷 Chromecast™ 裝置連線。(只有在連接 Chromecast™ 裝置時才可選取。)
 HDD	按一下或輕觸 HDD (硬碟) 按鈕即可切換至 CANVIO AeroCast™ 內建硬碟儲存裝置。
 SD Card	按一下或輕觸 SD 卡按鈕即可顯示 SD card (SD 卡) 快顯功能表功能。可用的功能為 Detect SD card (偵測 SD 卡) 和 Unmount SD card (卸載 SD 卡)。
 Local	按一下或輕觸 Local (本機) 按鈕即可切換至本機裝置。 (僅適用 iPhone、iPad 或 Android™ 裝置。)
	SD 卡已可用。
	SD 卡無法使用。按一下或輕觸即可顯示 SD 卡快顯功能表功能。可用的功能為 Detect SD card (偵測 SD 卡) 和 Unmount SD card (卸載 SD 卡)。
	網際網路連線已可用。按一下或輕觸即可顯示網際網路設定畫面。
	無可用的網際網路連線。按一下或輕觸即可顯示網際網路設定畫面。


按鈕/圖示	功能
	顯示 CANVIO AeroCast™ 無線硬碟目前的電池電量。
	按一下或輕觸 Settings (設定) 按鈕即可進入 CANVIO AeroCast™ 無線硬碟系統設定。

圖片管理介面

注

使用此功能之前，應透過 USB 連線將內容傳輸至 CANVIO AeroCast™ 無線硬碟，請參閱第 15 頁的「透過 USB 連接」。

按一下或輕觸 **Picture (圖片)** 按鈕即可顯示圖片管理畫面。
以下為圖片管理畫面範例。

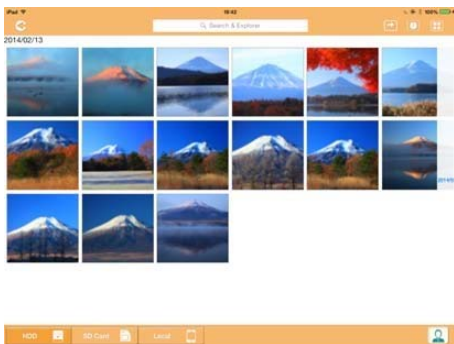

平板電腦/iPad



智慧型手機/iPhone

(範例圖) 圖片管理畫面

以下為圖片管理畫面的各按鈕/圖示及其功能說明：

按鈕/圖示	功能
	按一下或輕觸 Back (返回) 按鈕即可回到主畫面。
	顯示 Sort by name (依名稱排序) 圖示時，圖片將依檔名排序。
	顯示 Sort by date (依日期排序) 圖示時，圖片將依檔案日期排序。
	按一下或輕觸圖示即可切換模式。

按鈕/圖示	功能
 	顯示 Thumbnail (縮圖) 圖示時，圖片將以縮圖顯示。 顯示 List (清單) 圖示時，圖片將以清單方式顯示，即以小型縮圖搭配檔案資訊的方式呈現。 按一下或輕觸圖示即可切換模式。
	按一下或輕觸 Go To (前往) 按鈕即可顯示含主要介面瀏覽選項的快顯功能表。
	在 Search & Explorer (搜尋與檔案總管) 欄位輸入按鍵字母或數字，即可執行特定檔案或資料夾的搜尋。若無 Search & Explorer (搜尋與檔案總管) 欄位，請點選資料夾圖示並從資料夾瀏覽，找出所需的檔案。
	按一下或輕觸 HDD (硬碟) 按鈕即可切換至 CANVIO AeroCast™ 無線硬碟的內建儲存裝置。
	按一下或輕觸 SD Card (SD 卡) 按鈕即可切換至插入的 SD 卡。
	按一下或輕觸 Local (本機) 按鈕即可切換至本機裝置。(僅適用 iPhone、iPad 或 Android™ 裝置。)
	在硬碟儲存模式中，您可以從四名使用者中選擇其中一個圖片。按一下或輕觸 User (使用者) 圖示即可顯示其他使用者。 四名使用者的預設名稱為：Default (預設)、Owner1 (擁有者 1)、Owner2 (擁有者 2) 和 Owner3 (擁有者 3)。若要設定使用者名稱，請參閱第 45 頁的「使用者符號與名稱」。

圖片檢視器介面

在圖片管理畫面上按一下或輕觸所要的圖片檔，即可在圖片檢視器畫面上顯示該圖片。



(範例圖) 圖片檢視器畫面

以下為圖片檢視器畫面的各按鈕/圖示及其功能說明：

按鈕/圖示	功能
	按一下或輕觸 Back (返回) 按鈕即可回到圖片管理畫面。
	按一下或輕觸 Download (下載) 按鈕即可將目前的圖片下載至本機相簿。 (僅限硬碟模式。)
	按一下或輕觸 Upload (上傳) 按鈕即可將目前的圖片從本機相簿上傳至目前擁有者的 Uploaded (已上傳) 資料夾。 (僅限本機模式。)
	按一下或輕觸 Play/Pause (播放/暫停) 按鈕即可開始/停止相片投影播放。
	按一下或輕觸 Delete (刪除) 按鈕即可刪除目前的圖片。
	按一下或輕觸 Share (分享) 按鈕即可將目前的圖片分享至 Facebook、Twitter 或透過電子郵件傳送。


按鈕/圖示	功能
	按一下或輕觸即可選取 Chromecast™ 裝置。(只有在有可用的 Chromecast™ 裝置時才可選取。) 請參閱第 49 頁的「透過 Chromecast™ 裝置進行網際網路連線」。
	按一下或輕觸即可中斷 Chromecast™ 裝置連線。(只有在連接 Chromecast™ 裝置時才可選取。)

影片管理介面

注


使用此功能之前，應透過 USB 連線將內容傳輸至 CANVIO AeroCast™ 無線硬碟，第 15 頁的「透過 USB 連接」。

按一下或輕觸 **Videos (影片)** 按鈕即可顯示影片管理畫面。

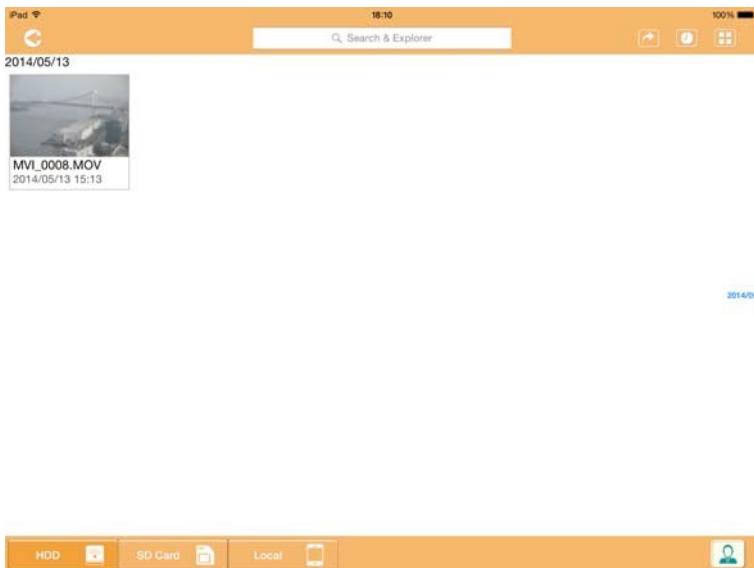


(範例圖) 影片管理畫面

以下為影片管理畫面的各按鈕/圖示及其功能說明：

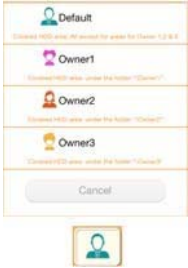按鈕/圖示	功能
	按一下或輕觸 Back (返回) 按鈕即可回到主畫面。
 	顯示 Sort by name (依名稱排序) 圖示時，影片將依檔名排序。 顯示 Sort by date (依日期排序) 圖示時，影片將依檔案日期排序。 按一下或輕觸圖示即可切換模式。
 	顯示 Thumbnail (縮圖) 圖示時，影片將以縮圖顯示。 顯示 List (清單) 圖示時，影片將以清單方式顯示，即以小型縮圖搭配檔案資訊的方式呈現。 按一下或輕觸圖示即可切換模式。
	按一下或輕觸 Go To (前往) 按鈕即可顯示含主要介面瀏覽選項的快顯功能表。
	在 Search & Explorer (搜尋與檔案總管) 欄位輸入按鍵字母或數字，即可執行特定檔案或資料夾的搜尋。若無 Search & Explorer (搜尋與檔案總管) 欄位，請點選資料夾圖示並從資料夾瀏覽，找出所需的檔案。
	按一下或輕觸 HDD (硬碟) 按鈕即可切換至 CANVIO AeroCast™ 無線硬碟的內建儲存裝置。
	按一下或輕觸 SD Card (SD 卡) 按鈕即可切換至插入 CANVIO AeroCast™ 的 SD 卡。
	按一下或輕觸 Local (本機) 按鈕即可切換至本機裝置。(僅適用 iPhone、iPad 或 Android™ 裝置。)
	切換至 CANVIO AeroCast™ 無線硬碟內建儲存裝置時，可從四名使用者中選擇其中一位的影片。按一下或輕觸 Owner (擁有者) 圖示即可顯示其他使用者。 四名使用者的預設名稱為：Default (預設)、Owner1 (擁有者 1)、Owner2 (擁有者 2) 和 Owner3 (擁有者 3)

影片播放介面 (僅適用 iPhone、iPad 和 Android™ 裝置)

按一下或輕觸影片 檔即可顯示影片播放畫面。

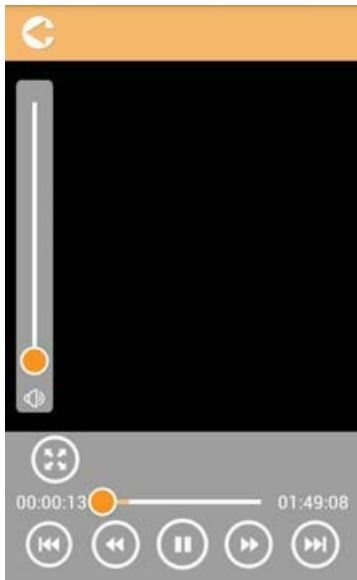

(範例圖) 影片播放畫面

以下為影片播放畫面的各按鈕/圖示及其功能說明：


按鈕/圖示	功能
	按一下或輕觸 Back (返回) 按鈕即可回到主畫面。
	按一下或輕觸 Zoom (縮放) 按鈕即可調整播放畫面大小。
	按一下或輕觸 Previous (上一部) 按鈕即可切換至上一部播放的影片。
	按一下或輕觸 Next (下一部) 按鈕即可切換至下一部播放的影片。
	按一下或輕觸 Rewind (倒帶) 按鈕即可將影片倒帶 20 秒。
	按一下或輕觸 Forward (快轉) 按鈕即可將影片快轉 20 秒。

按鈕/圖示	功能
	按一下或輕觸 Play/Pause (播放/暫停) 按鈕即可播放/暫停目前正在播放的影片。
	拖曳播放進度列，可瀏覽至不同時間點的影片播放內容。
	拖曳音量控制列可調整影片 音量。
	按一下或輕觸即可選取 Chromecast™ 裝置。(只有在有可用的 Chromecast™ 裝置時才可選取。) 請參閱第 49 頁的「透過 Chromecast™ 裝置進行網際網路連線」。
	按一下或輕觸即可中斷 Chromecast™ 裝置連線。(只有在連接 Chromecast™ 裝置時才可選取。)

音樂管理介面

注


使用此功能之前，應透過 USB 連線將內容傳輸至 CANVIO AeroCast™ 無線硬碟，請參閱第 15 頁的「透過 USB 連接」。

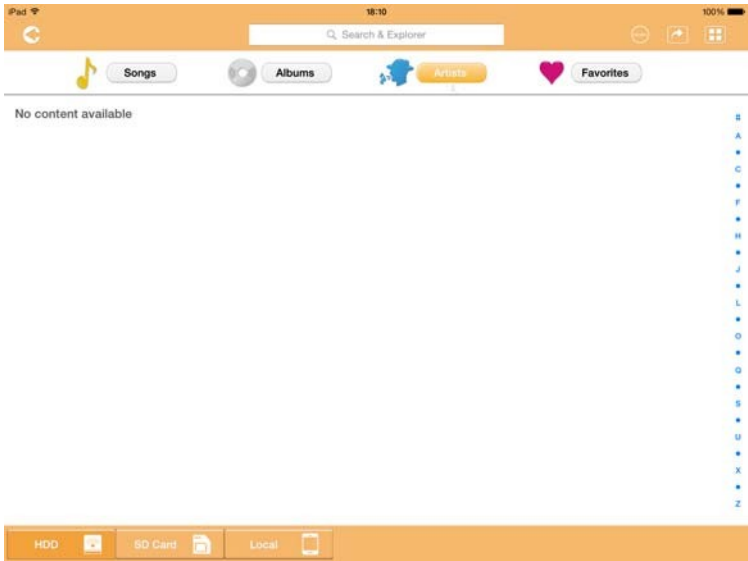

(範例圖) 音樂管理畫面

以下為音樂管理畫面的各按鈕/圖示及其功能說明：

按鈕/圖示	功能
	按一下或輕觸 Back (返回) 按鈕即可回到主畫面。
 	顯示 Thumbnail (縮圖) 圖示時，將以縮圖顯示音樂曲目。 顯示 List (清單) 圖示時，音樂曲目將以清單方式顯示，即以小型縮圖搭配檔案資訊的方式呈現。 按一下或輕觸圖示即可切換模式。
	按一下或輕觸 Go To (前往) 按鈕即可顯示含主要介面瀏覽選項的快顯功能表。

按鈕/圖示	功能
 Search & Explorer	在 Search & Explorer (搜尋與檔案總管) 欄位輸入按鍵字母或數字，即可執行特定檔案或資料夾的搜尋。若無 Search & Explorer (搜尋與檔案總管) 欄位，請點選資料夾圖示並從資料夾瀏覽，找出所需的檔案。
 HDD	按一下或輕觸 HDD (硬碟) 按鈕即可切換至 CANVIO AeroCast™ 無線硬碟的內建儲存裝置。
 SD Card	按一下或輕觸 SD Card (SD 卡) 按鈕即可切換至插入 CANVIO AeroCast™ 的 SD 卡。
 Local	按一下或輕觸 Local (本機) 按鈕即可切換至本機裝置。(僅適用 iPhone、iPad 或 Android™ 裝置。)
 Songs	按一下或輕觸 All Songs (所有歌曲) 按鈕即可檢視 CANVIO AeroCast™ 無線硬碟上所有可用的歌曲檔案 (預設模式)。
 Albums	按一下或輕觸 Albums (專輯) 按鈕即可依專輯檢視所有歌曲檔案。
 Artists	按一下或輕觸 Artist (演出者) 按鈕即可依演出者檢視所有歌曲檔案。
 Favorites	按一下或輕觸 Favorites (我的最愛) 按鈕即可檢視個人所有最愛的歌曲。您可以新增歌曲至我的最愛畫面，只要按一下或輕觸 Songs (歌曲) 畫面、 Album (專輯) 畫面或 Artist (演出者) 畫面上的 () 按鈕即可。按一下或輕觸音樂播放器上的 () 按鈕即可將歌曲從 Favorites (我的最愛) 畫面移除。

音樂播放器介面 (僅適用 iPhone、iPad 和 Android™ 裝置)

按一下或輕觸音樂檔即可顯示音樂播放器畫面。



(範例圖) 音樂播放器畫面

以下為音樂播放器畫面的各按鈕/圖示及其功能說明：

按鈕/圖示	功能
	按一下或輕觸 Back (返回) 按鈕即可回到音樂管理畫面。
	按一下或輕觸 Music Playlist (音樂播放清單) 按鈕即可變更播放清單中的歌曲。
	按一下或輕觸 Previous (上一首) 按鈕即可切換至上一首播放的音樂。
	按一下或輕觸 Next (下一首) 按鈕即可切換至下一首播放的音樂。
	按一下或輕觸 Rewind (倒轉) 按鈕即可將音樂倒轉 20 秒。
	按一下或輕觸 Forward (快轉) 按鈕即可將音樂快轉 20 秒。

按鈕/圖示	功能
	按一下或輕觸 Play/Pause (播放/暫停) 按鈕即可播放/暫停目前正在播放的音樂。
	拖曳播放進度列，可瀏覽至不同時間點的音樂播放。
	拖曳音量控制列可調整音樂音量。
	按一下或輕觸 Music mode (音樂模式) 按鈕即可在以下四種音樂模式間切換： Shuffle (隨機) () (預設模式)、Loop Playback (循環播放) ()、Order Play (循序播放) () 和 Single Cycle (單曲循環) ()。
	按一下或輕觸 Favorites (我的最愛) 按鈕即可將目前正在播放的音樂新增至我的最愛。

文件管理介面


按一下或輕觸 Documents (文件) 按鈕即可顯示文件管理畫面。



(範例圖) 文件管理畫面

以下為文件管理畫面的各按鈕/圖示及其功能說明：

按鈕/圖示	功能
	按一下或輕觸 Back (返回) 按鈕即可回到主畫面。
	顯示 Sort by name (依名稱排序) 圖示時，文件將依檔名排序。
	顯示 Sort by date (依日期排序) 圖示時，文件將依檔案日期排序。 按一下或輕觸圖示即可切換模式。
	顯示 Thumbnail (縮圖) 圖示時，文件將以縮圖顯示。
	顯示 List (清單) 圖示時，文件將以清單方式顯示，即以小型縮圖搭配檔案資訊的方式呈現。 按一下或輕觸圖示即可切換模式。
	按一下或輕觸 Go To (前往) 按鈕即可顯示含主要介面瀏覽選項的快顯功能表。

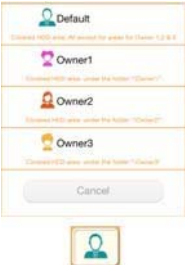
按鈕/圖示	功能
 Search & Explorer	在 Search & Explorer (搜尋與檔案總管) 欄位輸入按鍵字母或數字，即可執行特定檔案或資料夾的搜尋。若無 Search & Explorer (搜尋與檔案總管) 欄位，請點選資料夾圖示並從資料夾瀏覽，找出所需的檔案。
	按一下或輕觸 HDD (硬碟) 按鈕即可切換至 CANVIO AeroCast™ 無線硬碟的內建儲存裝置。
	按一下或輕觸 SD Card (SD 卡) 按鈕即可切換至插入 CANVIO AeroCast™ 的 SD 卡。
	按一下或輕觸 Local (本機) 按鈕即可切換至本機裝置。 (僅適用 iPhone、iPad 或 Android™ 裝置。)
	切換至 CANVIO AeroCast™ 無線硬碟內建儲存裝置時，可從四名使用者中選擇其中一位的影片。按一下或輕觸 Owner (擁有者) 圖示即可顯示其他使用者。 四名使用者的預設名稱為：Default (預設)、Owner1 (擁有者 1)、Owner2 (擁有者 2) 和 Owner3 (擁有者 3)

文件檢視器介面

(僅適用 iPhone、iPad 和 Android™ 裝置)

按一下或輕觸文件檔案即可顯示文件檢視器畫面。

在 iPhone 和 iPad 應用程式中，僅可檢視支援的檔案類型。在 Android™ 應用程式中，將會出現提示，詢問是否要以其他可用的應用程式開啟文件。您可以選擇僅限一次或永遠使用該應用程式開啟文件。若您選擇 Always (永遠使用)，將不會再出現提示。

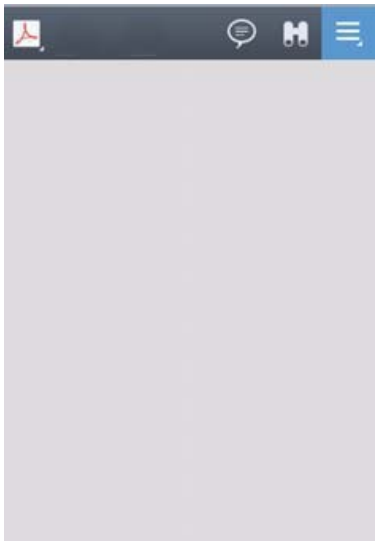


(範例圖) 文件檢視器畫面

以下為文件檢視器畫面的各按鈕/圖示及其功能說明：

按鈕/圖示	功能
	按一下或輕觸 Find (尋找) 按鈕即可開啟尋找畫面。在搜尋方塊中輸入按鍵字母或數字，執行特定文字的搜尋。
	按一下或輕觸 Options (選項) 按鈕即可檢視各種文件選項。

檔案/資料夾管理介面


按一下或輕觸 **File/Folder** (檔案/資料夾) 按鈕即可顯示檔案/資料夾管理畫面。

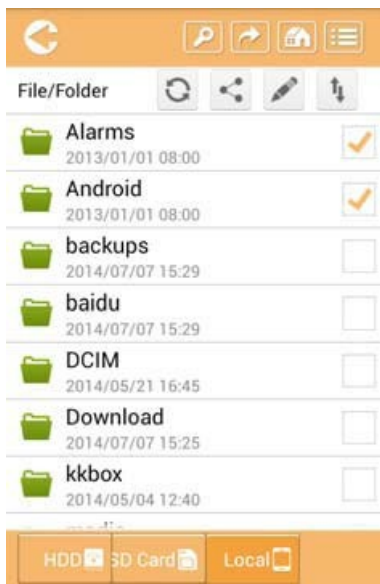

(範例圖) 檔案/資料夾管理介面 - 應用程式畫面


以下為文件管理畫面的各按鈕/圖示及其功能說明：

按鈕/圖示	功能
	按一下或輕觸 Back (返回) 按鈕即可回到主畫面。
	顯示 Sort by name (依名稱排序) 圖示時，檔案/資料夾將依檔名排序。
	顯示 Sort by date (依日期排序) 圖示時，檔案/資料夾將依檔案日期排序。 按一下或輕觸圖示即可切換模式。
	顯示 Thumbnail (縮圖) 圖示時，檔案/資料夾將以縮圖顯示。
	顯示 List (清單) 圖示時，檔案/資料夾將以清單方式顯示，即以小型縮圖搭配檔案資訊的方式呈現。 按一下或輕觸圖示即可切換模式。

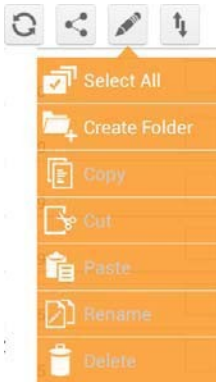按鈕/圖示	功能
	按一下或輕觸 Go To (前往) 按鈕即可顯示含主要介面瀏覽選項的快顯功能表。
	在 Search & Explorer (搜尋與檔案總管) 欄位輸入按鍵字母或數字，即可執行特定檔案或資料夾的搜尋。若無 Search & Explorer (搜尋與檔案總管) 欄位，請點選資料夾圖示並從資料夾瀏覽，找出所需的檔案。
	按一下或輕觸 HDD (硬碟) 按鈕即可切換至 CANVIO AeroCast™ 無線硬碟的內建儲存裝置。
	按一下或輕觸 SD Card (SD 卡) 按鈕即可切換至插入 CANVIO AeroCast™ 的 SD 卡。
	按一下或輕觸 Local (本機) 按鈕即可切換至本機裝置。(僅適用 iPhone、iPad 或 Android™ 裝置。)
	按一下或輕觸 Refresh (重新整理) 按鈕即可更新畫面。
	按一下或輕觸 Share (分享) 按鈕即可透過電子郵件分享目前的文件。請注意，此功能僅適用於相片檔。
	選取的檔案或資料夾會以 Checkmark (勾選記號) 圖示表示。
	按一下或輕觸 Setting (設定) 按鈕即可顯示以下選項： 
	按一下或輕觸 Transfer (傳輸) 按鈕即可顯示檔案傳輸狀態畫面。


傳輸檔案

對檔案或資料夾執行操作時 (複製、剪下、上傳或下載)，將會開啟檔案傳輸對話方塊。其中會顯示每一筆傳輸的進度列以及傳送成功和失敗的檔案或資料夾。

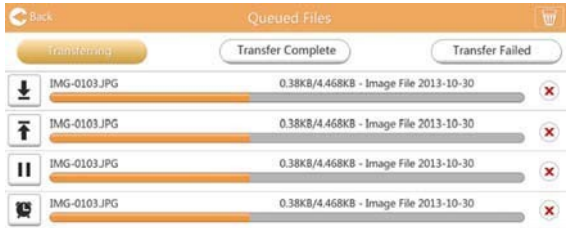

(範例圖) 佇列檔案狀態畫面

- 正在上傳的檔案/資料夾會以 **Upload (上傳)** () 圖示表示。
- 正在下載的檔案/資料夾會以 **Download (下載)** () 圖示表示。
- 輕觸 **Upload/Download (上傳/下載)** 圖示即可暫停上傳/下載。此時將會顯示 **Pause (暫停)** () 圖示。
- 等候上傳/下載的檔案/資料夾會以 () 圖示表示。此應用程式允許個別上傳/下載檔案/資料夾。
- 輕觸 **Cancel (取消)** () 圖示即可取消所有佇列檔案。Queued Files (佇列檔案) 清單上的按鈕會指示 Transfer Complete (傳輸完成) 或 Transfer Failed (傳輸失敗)。

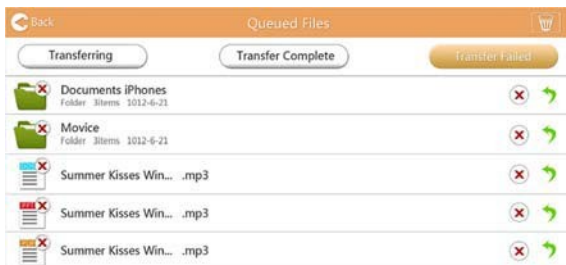

(範例圖) 文件檢視器的佇列檔案畫面

若您想要在傳輸失敗後重試，請按一下 **Re-Transfer (重新傳送)** () 按鈕。

第 3 章

備份管理

使用備份管理功能

(僅適用 iPhone、iPad 和 Android™ 裝置。)

您可以將 SD 卡或本機裝置上的檔案備份至以下四個使用者目錄的其中一個：Default (預設)、Owner1 (擁有者 1)、Owner2 (擁有者 2) 或 Owner3 (擁有者 3)。備份採用增量備份方式。

您可以手動備份 SD 卡或使用自動備份功能。本機裝置必須手動備份。


若備份檔案的大小超過 CANVIO AeroCast™ 無線硬碟內部儲存裝置的可用空間，則備份程序開始前將會出現警告訊息。

手動備份

1. 若要手動備份，按一下或輕觸主畫面的 **Backup (備份)** 按鈕。
2. 按一下或輕觸 **Backup SD Card (備份 SD 卡)** 或 **Backup Local Data (備份本機資料)**。
3. 按一下或輕觸要儲存備份檔案的使用者目錄。
4. 按一下或輕觸 **Start Backup (開始備份)**。SD 卡或本機裝置的檔案將會備份至選取的使用者目錄。備份進度會顯示在介面畫面底部。備份完成後，將會顯示訊息，表示已成功備份。

自動備份

您可以在備份 SD 卡畫面上，選取 **Auto Copy (自動複製)** 方塊，設定自動備份 SD 卡。下次插入 SD 卡時，SD 卡上的所有影片及圖片均會自動備份至選取的使用者目錄。

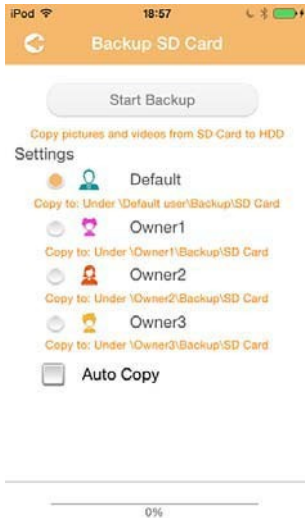

(範例圖) 備份資料 - 自動備份畫面

注

將 SD 卡移除前，請務必確認 SD 卡上的所有傳輸均已完成。

第 4 章

設定管理

按一下或輕觸主要介面畫面右上角的 **Settings (設定)** 按鈕即可顯示設定介面畫面。可用的模組如下：

- 無線
- 操作
- 資訊
- 使用者符號與名稱
- SSID 屬性
- 網際網路
- 語言
- 快取
- OSS 資訊

無線區域網路設定

按一下或輕觸 **Wireless (無線)** 即可顯示無線區域網路設定畫面。



(範例圖) 設定 - 無線畫面

可用的選項如下：

- SSID
- 啟用密碼
- 修改密碼

SSID：

1. 按一下或輕觸 **SSID** 按鈕即可進入 **SSID** 設定畫面。



(範例圖) 設定 - SSID 設定畫面

2. 輸入您的 SSID。預設的 SSID 為「Toshiba whdd xxxx」。
3. 按一下或輕觸 **OK (確定)** 按鈕。
4. 按一下或輕觸 **Apply (套用)** 按鈕。

啟用密碼：


1. 將 **Enable (啟用)** 滑桿往右或往左移即可啟用或停用密碼功能。
2. 按一下或輕觸無線畫面右上角的按一下或輕觸 **Apply (套用)** 按鈕。

修改密碼：

1. 按一下或輕觸 **Modify Password (修改密碼)** 按鈕。
2. 輸入新密碼。
3. 按一下或輕觸 **OK (確定)** 按鈕。
4. 按一下或輕觸無線畫面右上角的 **Apply (套用)** 按鈕。

操作

您可以從操作畫面重設、關閉或重新啟動 CANVIO AeroCast™ 硬碟。按一下或輕觸 **Settings (設定)**，然後選取 **Operation (操作)** 即可顯示操作畫面：

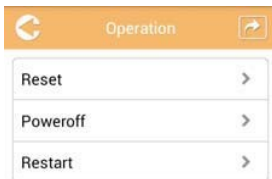

(範例圖) 設定 - 操作畫面

可用的選項如下：

- **Reset (重設)**—按一下或輕觸即可重設 CANVIO AeroCast™ 無線硬碟設定。

- **Power off (關機)**—按一下或輕觸即可關閉 CANVIO AeroCast™ 無線硬碟的電源。
- **Restart (重新啟動)**—按一下或輕觸即可重新啟動 CANVIO AeroCast™ 無線硬碟。

資訊

資訊畫面提供 CANVIO AeroCast™ 無線硬碟的系統資訊。按一下或輕觸 **Settings (設定)**，然後選取 **Information (資訊)** 即可顯示資訊畫面：



Information		
HDD Capacity	1.52 GB	26
SD Card Capacity	0B / 0B	
MAC Address	6C:AD:F...6C:DD	
Firmware Version	1.0.2	
Application Version	0.9.2	


(範例圖) 設定 - 資訊畫面

可用的欄位如下：

- 硬碟容量
- SD 卡容量
- MAC 位址
- 韌體版本
- 應用程式版本


使用者符號與名稱

按一下或輕觸 **Settings (設定)**，然後選取 **User symbol and name (使用者符號與名稱)** 即可顯示使用者符號與名稱畫面。

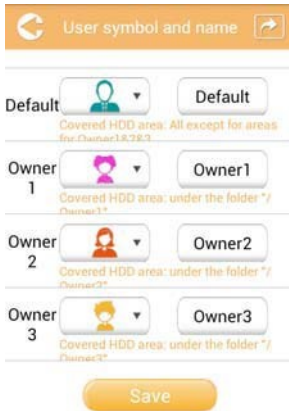

(範例圖) 設定 - 使用者符號與名稱畫面

您可在畫面中變更使用者圖示和名稱。此變更將會顯示在圖片管理畫面、影片管理畫面、SD 卡畫面和備份畫面。

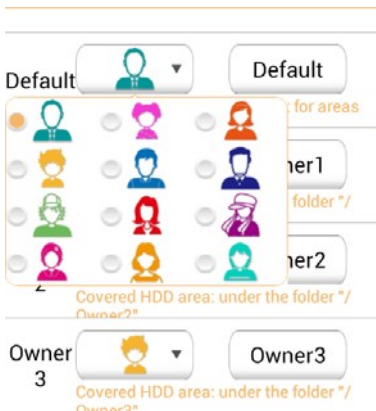

(範例圖) 設定 - 使用者符號與名稱管理畫面

共有 12 個圖示可供選擇。您也可以為每一名使用者輸入新的名稱。

按一下或輕觸使用者圖示，然後輸入名稱，您也可以為所有四名使用者變更名稱 (例如：由 Default (預設) 改為 Father (父親))。

網際網路設定

網際網路畫面讓您能夠設定 CANVIO AeroCast™ 裝置的網際網路設定。

共有兩 (2) 種 CANVIO AeroCast™ 無線硬碟運作連線模式可供選擇：

- Home Network (家用網路) (Station Mode (站點模式))
- Public Network (公用網路) (Bridge Mode (橋接模式))

在 Bridge Mode (橋接模式) 中，您可以將 CANVIO AeroCast™ 無線硬碟連接至網路，同時維持行動裝置與 CANVIO AeroCast™ 之間的連線。如此一來，您在存取網際網路的同時，便不需要中斷裝置與 CANVIO AeroCast™ 網路的連線，然後再連接本機網路。Bridge Mode (橋接模式) 也可讓您從 Toshiba 無線硬碟應用程式透過電子郵件和社交媒體分享檔案。


在 Station Mode (站點模式) 下，CANVIO AeroCast™ 無線硬碟和行動裝置均連線至本機網路。在此模式下，您仍然可以存取 CANVIO AeroCast™ 無線硬碟和網際網路，但此方法也允許 CANVIO AeroCast™ 無線硬碟與連線至相同網路的 Chromecast™ 裝置進行通訊。CANVIO AeroCast™ 無線硬碟必須設定為站點模式才可連接至 Chromecast™ 裝置。

Bridge Mode (橋接模式) 中的網際網路連線

注


您必須連線至網路才可選擇或切換至 *Public Network (公用網路) (Bridge Mode (橋接模式))*。

1. 若要將網際網路設定設成以 Bridge Mode (橋接模式) 執行，請選擇 **Public Network (公用網路)**。

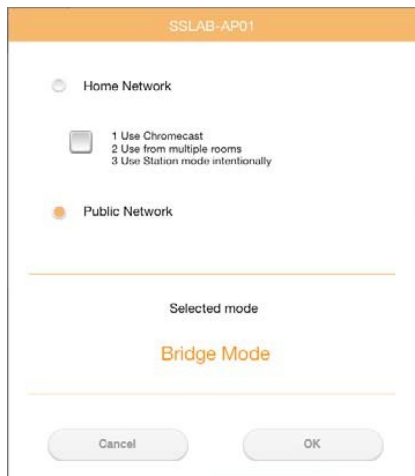


(範例圖) 選擇 Bridge Mode (橋接模式) 畫面 (iOS)

- 按一下或輕觸 **OK (確定)** 按鈕。
從 Station Mode (站點模式) 切換至 Bridge Mode (橋接模式) 時，將顯示以下訊息：

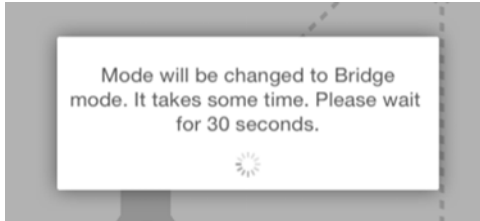


(範例圖) 訊息畫面 (iOS)

若應用程式找不到 CANVIO AeroCast™ 無線硬碟，您可能會看見下列訊息：

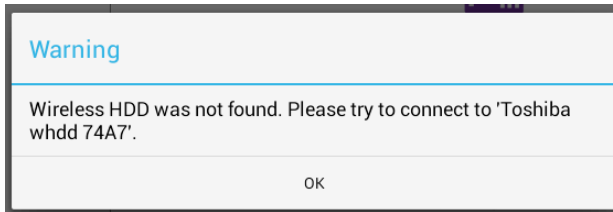

(範例圖) 訊息畫面 (iOS)


- 若要變更 CANVIO AeroCast™ 無線硬碟的 WLAN 存取點，請返回本機裝置的設定畫面。

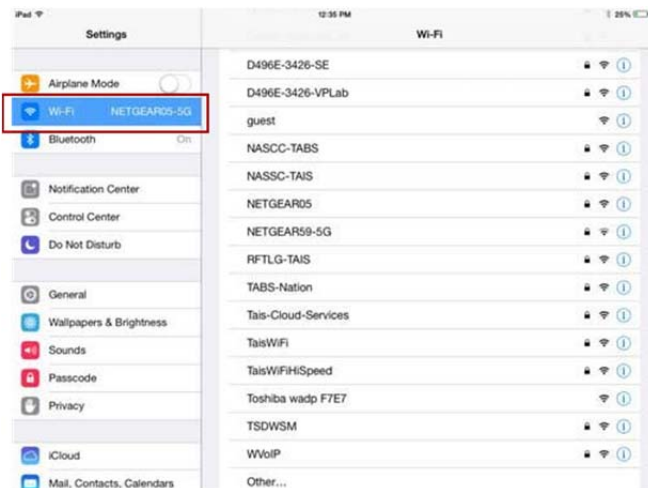

(範例圖) 設定畫面 (iOS)


4. 選擇您的路由器。

若應用程式成功找到 CANVIO AeroCast™ 無線硬碟，您可能會看見下列訊息：

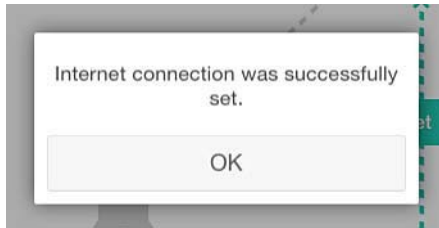

(範例圖) 訊息畫面 (iOS)

成功連線畫面如下：

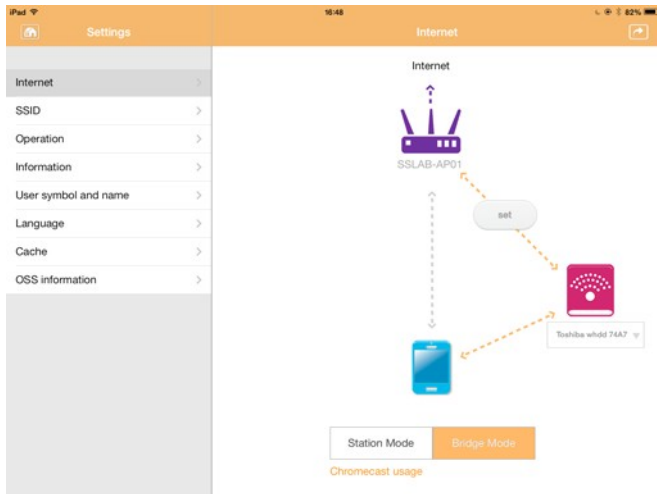


(範例圖) 成功連線畫面 (iOS)

透過 Chromecast™ 裝置進行網際網路連線


若要連接您的 Chromecast™ 裝置，請先依 Chromecast™ 的指示設定 Chromecast™ 裝置 (另售)。接著遵循以下指示操作：

1. 按一下或輕觸 **Settings (設定)**，然後選取 **Internet (網際網路)** 即可顯示網際網路畫面。網際網路畫面會顯示 CANVIO AeroCast™ 無線硬碟目前可用的連線。

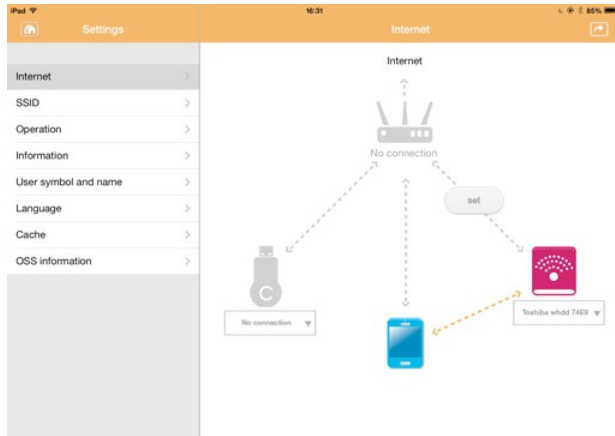


(範例圖) 網際網路設定畫面 (iOS)

2. 按一下或輕觸網路連線圖中，介於 **Not Connected (未連線)** 和 **TOSHIBA** 圖示之間的 **Set (設定)** (set) 圖示，以便將 CANVIO AeroCast™ 無線硬碟連接至路由器。

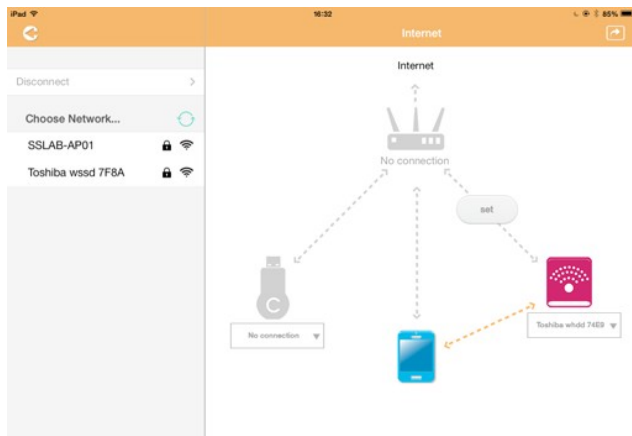


(範例圖) Wi-Fi® 連線畫面 (iOS)

3. 從 **Choose Network (選擇網路)** 功能表列出的選項中，選擇欲連接的網路，然後輸入密碼連線。
4. 請確認 **Home Network (家用網路)** 選項按鈕已啟用。按一下或輕觸核取方塊即可啟用。
您將會看到類似下圖的畫面：

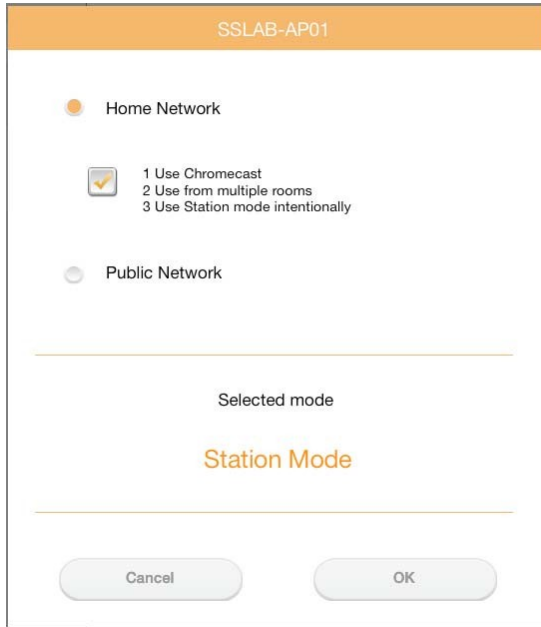


(範例圖) SSID 連線畫面 (iOS)

5. 按一下或輕觸 **OK (確定)** 按鈕。
從 Bridge Mode (橋接模式) 切換至 Station Mode (站點模式) 時，將顯示以下訊息：

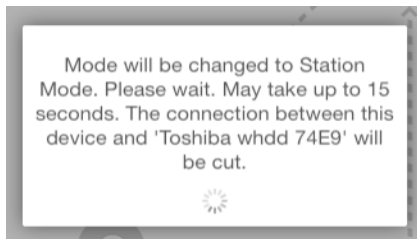


(範例圖) 訊息畫面 (iOS)

您可能會看見下列訊息：

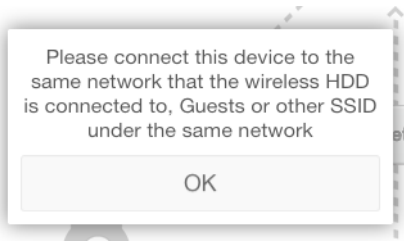


(範例圖) 訊息畫面 (iOS)

若應用程式找不到 CANVIO AeroCast™ 無線硬碟，您可能會看見下列訊息：

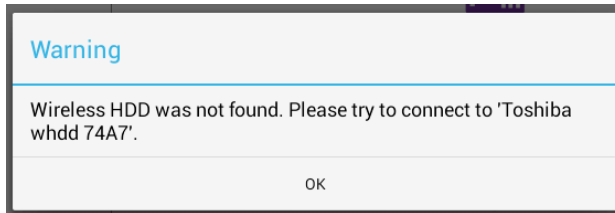

(範例圖) 訊息畫面 (iOS)


6. 若要在 CANVIO AeroCast™ 無線硬碟上，將 WLAN 變更為 Access Point (存取點)，請返回設定畫面。

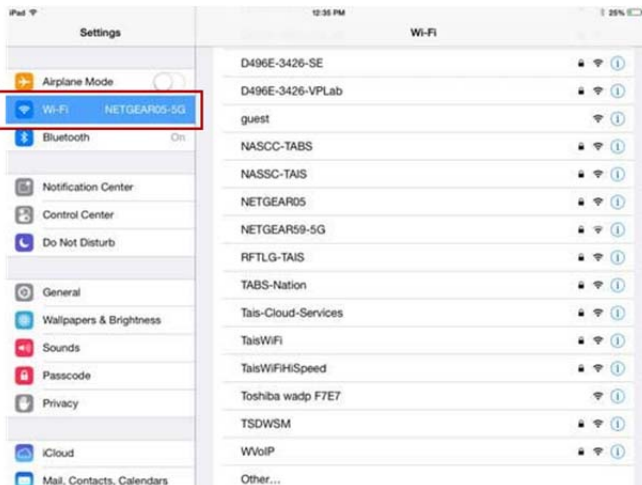

(範例圖) 設定畫面 (iOS)

7. 選擇您的路由器。

若應用程式成功找到 CANVIO AeroCast™ 無線硬碟，您可能會看見下列訊息：

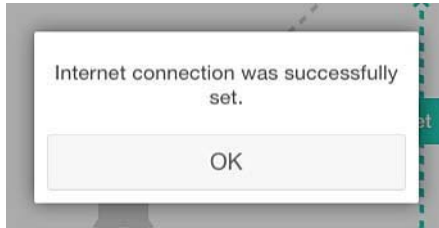


(範例圖) 訊息畫面 (iOS)

8. 按一下或輕觸 **OK (確定)** 按鈕。

您現在應可連線至 Chromecast™ 裝置、CANVIO AeroCast™ 無線硬碟和本機裝置。

成功連線畫面如下：

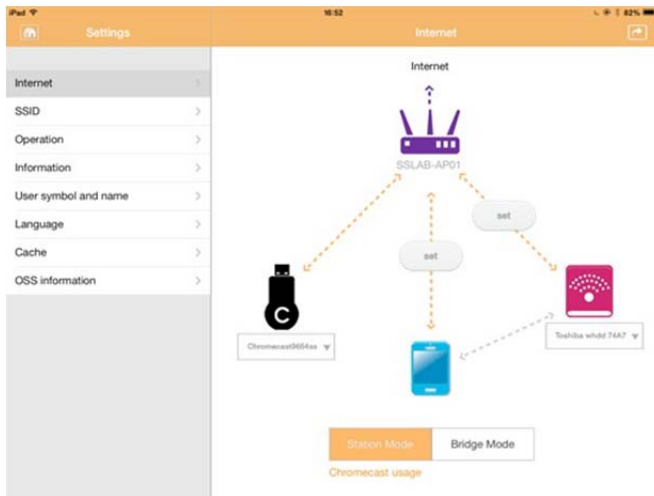

(範例圖) 成功連線畫面 (iOS)

注


若連線至 Home Network (家用網路) (Station Mode (站點模式))，其他人均可透過網路存取您連接的儲存裝置。

在公共場所連接網路時請謹慎使用，因為他人將可連線至您的裝置。

語言

CANVIO AeroCast™ 無線硬碟的預設語言為英文。您可以到語言畫面變更 CANVIO AeroCast™ 無線硬碟的語言設定。

1. 從 **Settings (設定)** 畫面按一下或輕觸 **Language (語言)**。顯示語言清單。

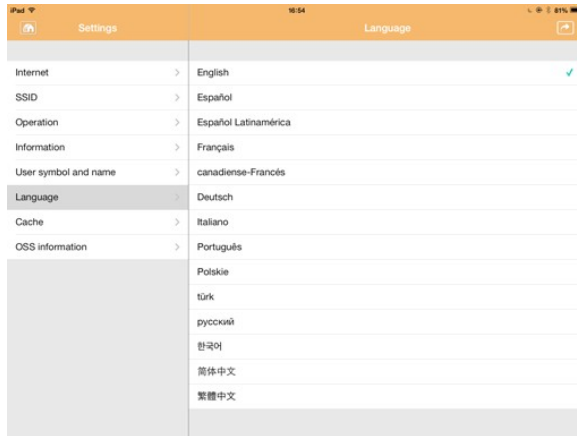

(範例圖) 語言畫面

2. 按一下所要的語言。
畫面將立即更新為您選取的語言。

快取

在快取畫面中，您可以套用本機裝置的快取設定，以改善 CANVIO AeroCast™ 無線硬碟的反應速度。



(範例圖) 快取畫面

可用的選項如下：

- 啟用影片快取
- 清除快取

啟用影片快取：

將 **Enable Video Cache (啟用影片快取)** 滑桿往右或往左移動即可啟用或停用影片快取。

清除快取：

按一下或輕觸 **Clear Cache (清除快取)** 按鈕即可清除 CANVIO AeroCast™ 無線硬碟的快取。

OSS 資訊

OSS 資訊畫面讓您查看 CANVIO AeroCast™ 無線硬碟所使用的開放來源軟體相關資訊。

TOSHIBA 支援

需要協助嗎？

請造訪支援頁面：

台灣：www.sdd.toshiba.com.tw

索引

字母符號

Android™	
安裝應用程式	20
無線連線	20
應用程式登入	20
用戶端登入	20
CANVIO AeroCast™	
系統登入	18
iPhone 和 iPad	
安裝應用程式	19
iPhone 或 iPad	
無線連接	20
用戶端登入	19
應用程式登入	20
OSS 資訊	54
SD 卡	
自動備份	41
手動備份	40
TOSHIBA 支援	54

A

安全	
圖示	2

B

備份管理	40
------------	----

D

檔案/資料夾管理介面	37
------------------	----

G

概述	12
----------	----

K

快取	53
----------	----

L

連接	
USB	15
無線	16

R

軟體規格	13
------------	----

S

商標	9
設定	
網際網路	46
設定管理	
使用者符號與名稱	45
資訊	44
操作	43
無線區域網路	42

T

圖片管理介面	23
圖片檢視器介面	25
圖示	
安全	2

W

網際網路連線

- 橋接模式.....46
- 站點模式.....46
- Chromecast™.....49

文件管理介面.....34

文件檢視器介面36

無線連線

- Windows® PC/Mac.....18

Y

以無線方式複製檔案

- Mac19
- Windows® PC.....19

音樂播放器介面32

音樂管理介面.....30

影片播放介面.....28

影片管理介面.....26

硬體規格12

語言53

Z

主要介面20

- 應用程式21

組件12